## 

## AIRCHECK<sup>™</sup> G3 **User Guide**

Tap a link to go directly to the app's chapter. Scroll down to view the full list of Contents.



**NetAlly Network Testing Apps** 

**⊯** AutoTest

PING Ping/TCP

**Capture** 

**Discovery** 

Wi-Fi

AirMapper™

**Path Analysis Spectrum** 

iPerf

Link-Live

App Store

### **Contents**

Contact Us	13
Introduction	14
How to Use this Guide	15
Differences Between Models	19
Buttons and Ports	20
Charging and Power	23
Safety and Maintenance	25
Legal Notification	28
Home and System Interface	29
Home Screen	30
Navigating the System	32
System Status Bar and Notifications	36
Notification Panel	36
Apps Screen and Store	39
Device Settings	43
Quick Settings Panel	44
Connecting to Wi-Fi	48
Captive Portals	52
Configuring Wi-Fi Connections With	
Enterprise Security	53
Sharing	61

Sharing Files to Link-Live	62
Sharing from the Files App	64
Saving a Screenshot	66
Changing the Device Language	67
AirCheck G3 Settings and Tools	69
Navigation Drawer	70
About Screen	71
Exporting Logs	72
Test and Management Ports	73
Test Ports	74
Selecting Ports	79
Test and Port Status Notifications	82
Test Port Notifications	83
Management Port Notifications	84
Discovery Notifications	85
VNC/Link-Live Remote	85
AirCheck G3 General Settings	87
Wi-Fi	88
Management	92
Preferences	95
Trending Graphs	96
Common Icons	

Floating Action Button (FAB) and Me	nu101
Common Tools	103
Web Browser/Chromium	103
Telnet/SSH	103
External Camera	104
Software Management	108
Managing Files	109
Files Application	109
How to Move or Copy a File	112
Using a USB Drive	112
Ejecting Storage Media	113
Using a USB Type-C to USB Cable .	114
Updating Software	116
Remote Access	121
Using VNC	122
Using Link-Live Remote	123
Managing NetAlly App Settings	125
Resetting Testing App Defaults	125
Saving App Settings and	
Configurations	130
Exporting and Importing Settings .	133
Resetting AirCheck G3 Factory Defau	ılts144
AirCheck G3 Testing Applications	147

AutoTest App and Profiles	148
AutoTest Overview	150
Managing Profiles and Profile Groups	153
Factory Default Profiles	153
Adding New Profiles	.154
Profile Groups	160
Creating New Profile Groups	.165
Importing and Exporting AutoTest	
Profiles	168
Main AutoTest Screen	169
Periodic AutoTest	171
Periodic AutoTest Settings	171
Running Periodic AutoTest	
Wi-Fi AutoTest Profiles	176
Wi-Fi Profile Test Results	180
Wi-Fi Link Test Results	183
Connect Log	191
Channel Test Results	192
Wi-Fi Profile FAB	.198
Wi-Fi Profile Settings	202
Wi-Fi Connection Settings	204
Advanced (Wi-Fi Connection) Settings	216
Channel Test Settings	219

HTTP Proxy	222
DHCP, DNS, and Gateway Tests	. 224
DHCP or Static IP Test	225
DNS Test	237
Test Targets for Wi-Fi AutoTests	246
Adding and Managing Test Targets .	247
Target Test Results Screens	251
AutoTest TCP Connect Test	259
FTP Test	273
Air Quality AutoTest Profiles	283
Air Quality Profile Results	285
Air Quality Profile FAB	290
Air Quality Profile Settings	291
Ping/TCP Test App	.296
Ping/TCP Settings	. 297
Populating Ping/TCP from Another	
App	297
Configuring Ping/TCP Settings	
Manually	300
Running Ping/TCP Tests	304
Capture App	. 308
Capture Settings	309

Running and Viewing Captures	314
Discovery App	319
Introduction to Discovery	321
Main Discovery List Screen	323
Searching the Discovery List	326
Filtering the Discovery List	328
Sorting the Discovery List	331
Security Auditing – Batch	
Authorization	333
Refreshing Discovery	338
Uploading Discovery Results to Lir	ık-
Live	339
Discovery Details Screens	341
Top Details Card	343
Lower Cards in Device Details	349
Problems	351
Addresses	352
TCP Port Scan	354
VLANs	356
Interfaces	357
SNMP	363
Connected Devices	365

Resources	. 366
SSIDs	. 367
Discovery App Floating Action Menu	. 369
Device Types	.375
Routers	. 376
Switches	.377
Unknown Switches	378
Network Servers	379
Hypervisors	380
Virtual Machines	381
Wi-Fi Controllers	. 382
Access Points (APs)	383
Wi-Fi Clients	. 384
VoIP Phones	.385
Printers	. 386
SNMP Agents	. 387
NetAlly Tools	. 388
Hosts/Clients	. 389
Discovery Settings	.392
SNMP Configuration	. 395
Active Discovery Ports	
Extended Ranges	.404

Devices Discovered Through Other	
Devices	. 408
Device Health Interval	413
ARP Sweep Rate	.414
SNMP Query Delay	. 414
Auto AP Grouping Rules	.414
Problem Settings	420
TCP Port Scan Settings	.423
i-Fi Analysis App	426
Wi-Fi Analysis and Discovery	428
Wi-Fi App List Screens	429
Wi-Fi App List Screens	430
Filtering in the Wi-Fi App	.434
Sorting in the Wi-Fi App	.439
Clearing All Problems	. 441
Setting Authorization	. 442
Uploading Wi-Fi Results to Link-Live	. 444
Wi-Fi Details Screens	. 446
Wi-Fi Problems Screen	. 449
RF and Traffic Statistics Overview	. 451
Locating Wi-Fi Devices	. 456
Assigning a Name and Authorization	466

to a Device	
Channels Map	479
Map and Map 6E Tabs	480
Channels	. 488
SSIDs	. 493
APs	498
BSSIDs	502
Clients	514
ath Analysis App	523
Introduction to Path Analysis	524
Path Analysis Settings	525
Populating Path Analysis from	
Another App	525
Configuring Path Analysis Manually	525
Running Path Analysis	. 528
Path Analysis Results and Source	
AirCheck G3 Cards	530
Layer 3 Hops	533
Layer 2 Devices	538
Uploading Path Analysis Results to	
Link-Live	544
irMapper™ App	546

AirMapper Settings	. 547
Configuring an AirMapper Survey	548
Collecting AirMapper Data	. 557
Starting a New Survey	. 569
Spectrum Test App	. 570
Using the Spectrum Views	. 571
Uploading Spectrum Results to Link-	
Live	578
Spectrum Settings	580
Changing Spectrum Views	580
Saving Settings	580
Changing Spectrum Settings	. 581
iPerf Test App	584
iPerf Settings	. 586
Saving Custom iPerf Settings	586
Test Accessories in Discovery	587
Configuring iPerf Settings	590
Running an iPerf Test	. 594
Uploading iPerf Results to Link-Live	598
Link-Live Cloud Service	.600
Getting Started in Link-Live Cloud	
Camilaa	C02

Claiming the Unit	602
After Claiming	604
Unclaiming	605
AllyCare Code	606
Private Link-Live Settings	607
Link-Live App Features	608
Saving Locally Only	612
Job Comment	614
Link-Live and Testing Apps	617
Link-Live Sharing Screens	618
Sharing a Text File to Link-Live	621
Specifications and Compliance	630
AirCheck G3 Specifications	631
General	631
Tri-band Wireless	632
Environmental Specifications	638
Certifications and Compliance	
Statements	639

#### Contact Us

Online: NetAlly.com

Phone: (North America) 1-844-TRU-ALLY

(1-844-878-2559)

NetAlly

2075 Research Parkway, Suite 190 Colorado Springs, CO 80920 For additional product resources, visit NetAlly.com/Products/AirCheckG3.

For customer support, visit NetAlly.com/Support.

## Register your AirCheck G3

Registering your product with NetAlly gives you access to valuable information on product updates, troubleshooting procedures, and other services.

Register on the NetAlly Support Page.

AirCheck G3 User Guide

## Introduction

The AirCheck G3Portable Network Expert is a rugged, hand-held tool for testing and analyzing Wi-Fi networks. It features applications developed by NetAlly for network discovery, measurement, and validation, which are available from the Home and Apps screens.

All NetAlly hand-held testers include access to Link-Live Cloud Service at Link-Live.com. Link-Live is an online system for collecting, organizing, analyzing, and reporting your test results. Test data is automatically uploaded once your tester is properly configured. Visit Link-Live.com and "Claim" your AirCheck G3 to access these features

### How to Use this Guide


This user guide describes the AirCheck G3's testing functionality and basic elements of the system interface.

The guide is meant for users who are knowledgeable about network operations, tests, and measurements.

The AirCheck G3 is also referred to as just AirCheck G3 or the "unit" in this guide.

- Tap blue links to go to their destinations.
   <u>Underlined blue links</u> open external websites.
- Tap bookmarks in the list on the left to go to the corresponding section.
- Tap headings in the Contents list that starts on page 2 to go to the corresponding sections.
- To search for a word or phrase:
  - Tap the browser menu icon in the upper right.
  - 2. Select Find in Page from the menu.

- 3. Enter the search text.
- 4. Tap the find icon (2). This displays the text at the top of the screen. Tap the up and down arrows to search forwards and backwards for the text. In the image below, the user has searched on "LAN". Tap the highlight bars on the right to go to the corresponding manual text.

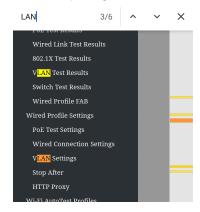

# Online and Local Versions of This Guide

- Manuals are also available for download at: https://www.netally.com/support/userguides/
- To view the User Guide on your AirCheck G3's, you must have a network connection with access to the internet (see Connecting to Wi-Fi). When you tap on Guides > User Guide on the "Home Screen" on page 30, this user guide is downloaded and displays on your unit.
- After you have downloaded the User Guide to your unit, the guide is stored in a local cache for the browser. You do not have to repeat the download unless you change the device language or clear the browser cache.

# International Versions of This Guide

A Chinese or English AirCheck G3 user guide is available if you change the device language to

one of those languages. If you choose Japanese, the English user manual is used.

# Differences Between Models

The Model number of your AirCheck G3 is printed on the back panel of your unit and on the About Screen. This manual covers all models by identifying features specific to each model in the text. In general:

- AirCheck-G3-PRO: Supports 2.4 GHz, 5 GHz and 6 GHz frequency bands; supports 802.11a/b/g/n/ac/ax Wi-Fi standards; does not support 802.11d specification.
- AirCheck-G3E-PRO: Supports 2.4 GHz, 5 GHz and 6 GHz frequency bands; supports 802.11a/b/g/n/ac/ax Wi-Fi standards; supports 802.11d specification.
- AirCheck-G3C-PRO: Supports 2.4 GHz, 5 GHz frequency band; does not support 802.11d specification.

For more information, see AirCheck G3 Specifications.

## **Buttons and Ports**

Button and port functions on your AirCheck G3 unit are described below.



FEATURE	DESCRIPTION
Status LED	Red: unit off, USB-C power adapter connected
	Green: unit on, screen off (with or without power adapter)
	Rate of blinking LED (red or green) shows % battery charge:
	• 2 blinks per second: battery low, 0-24% charged

FEATURE	DESCRIPTION
	• 1 blink per second: 25-49% charged
	<ul> <li>1 blink per 2 seconds: 50- 74% charged</li> </ul>
	• 1 blink per 4 seconds: 75- 99% charged
	• No blinks: 100% charged
USB Type-A Ports (2)	Connects to any USB device. (FAT32-formatted device required only for manual software updates.)
USB Type-C On-the-Go Port	Connects to a USB Type-C connector for file transfer and to charge unit with the included AC adapter
Volume Buttons	Increase or decrease the audio volume
Power Button	Press and hold to display menu for <b>Power off</b> or <b>Restart</b>


See Test and Management Ports for detailed explanations of the port functions.

See Updating Software for requirements on updating system software.

Refer to the product Specifications if needed.

## Using a Kensington Lock

The back panel of the unit has two rows of six vent slots on either side of the serial number label. You can use a Kensington Lock with any slot in these two rows.

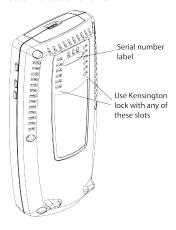

## **Charging and Power**

Your AirCheck G3 includes a USB-C 15V/3A power adapter.

**CAUTION:** Only the NetAlly-supplied power adapter is supported.

To begin charging the internal lithium-ion battery, plug the included power adapter into an AC outlet and the USB-C charging port on the left side of the unit. The Power LED button turns red when the unit is in charging mode and turns off at full charge. The unit fully charges in 2-4 hours via AC power.

When in charging mode (meaning the unit is off but plugged into an AC power source), the unit turns on once every 24 hours and top off the battery charge, then power off again.

Tap the power button briefly to view the battery level on the screen while the unit is in charging mode.

On battery power only, the unit runs for 3-4 hours, depending on the type of testing being conducted.

#### **Powering On**

- To start up the unit, hold down the power button for approximately one second, until the power button LED turns green.
- When the display goes into Sleep mode, the power LED remains on. Tap the power button briefly to wake up the display. Set the timing for display sleep and auto power off in the Device Settings.
- To shut down or restart, hold the power button for one second until the "Power off" and "Restart" dialog box appears on the touchscreen, and then tap Power off or Restart.
- If the unit is unresponsive to a normal power off, press and hold the power button for five seconds to perform a hard shutdown.

## **Safety and Maintenance**

Observe the following safety information:

Use only the Adapter provided to charge the battery.

Ensure that the Adapter is easily accessible.

Use the proper terminals and cables for all connections.

**CAUTION**: To avoid possible electric shock or personal injury, follow these guidelines:

- Do not use the product if it is damaged.
   Before using the product, inspect the case, and look for cracked or missing plastic.
- Do not operate the product around explosive gas, vapor, or dust.
- Do not try to service the product. There are no serviceable parts.
- Do not replace the battery. There is risk of explosion if the battery is replaced by an incorrect battery type.
- Dispose of battery packs and electronics in compliance with your institution's disposal instructions.

 Use as directed. If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired.

#### Safety Symbols



Warning or Caution: Risk of damage to or destruction of equipment or software.



Warning: Risk of electrical shock.



Not for connection to a public telephone system.

#### Cleaning

To clean the display, use a lens cleaner and a soft, lint-free cloth.

To clean the case, use a soft cloth that is moist with water or a weak soap.

Scratches on the dark-colored plastic can be removed by *lightly* scrubbing a 1:2 mixture of toothpaste to water onto the affected surface with a bristled brush.

**CAUTION:** Do not use solvents or abrasive materials that may damage the product.

## **Legal Notification**

Use of this product requires acceptance of the Terms and Conditions available at <a href="http://NetAlly.com/terms-and-conditions">http://NetAlly.com/terms-and-conditions</a> or which accompanies the product at the time of shipment or, if applicable, the legal agreement executed by and between NetAlly and the purchaser of this product.

Open-Source Software Acknowledgment: This product may incorporate open-source components. NetAlly will make available open-source code components of this product, if any, at Link-Live.com/OpenSource.

NetAlly reserves the right, at its sole discretion, to make changes at any time in its technical information, specifications, service, and support programs.


© 2019-2022 NetAlly

## Home and System Interface

This chapter explains how to use the features of the system Home screen and user interface to navigate and organize your device.

The AirCheck G3 interface supports many of the operations typical of any hand-held device. Use dragging and swiping motions on the touchscreen to navigate through apps, open side menus, drag down the Notification Panel from the Status Bar at the top of the Home screen, or drag up the Apps screen from the bottom.

#### **Home Screen**

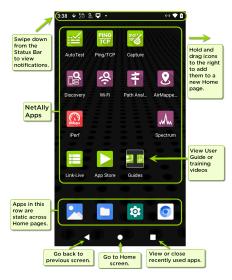

Like other hand-held devices, your AirCheck G3 Home screen is customizable. The image above shows the default configuration, but you can add, remove, and reorganize app icons and widgets to serve your purposes.

You can also create more Home pages by tapping, holding, and dragging an app icon to the right from the main Home screen.

See the Apps screen section for instructions on adding more apps to your Home pages.

## **Navigating the System**

The navigation actions you can perform to move through screens and panels on the AirCheck G3 are the same as those you would use to navigate many other phone or tablet devices.

The main device navigation buttons appear at the bottom of the touch screen.



The back icon returns to the previous screen.



The circle icon opens the Home screen.



The square icon displays your recently used applications for easily switching between then. This is also the screen where you can close, or stop, the open applications.

TIP: Double tap the square icon to switch back to the previous app you were using and to switch back and forth between two app screens (like a testing app and this User Guide).

#### **Swiping**

Touch and drag your finger or "swipe" up, down, left, and right to move through pages of the Home screen and applications, scroll up or down, and pull out navigation drawers and panels.


#### **Long Pressing**

Touch and hold or "long press" files or application icons to reveal additional operations.

For example, you can long press a file name in the Files Application to reveal the top toolbar with options for sharing , deleting, or moving the file.



Additional options often appear in an overflow menu, designated by the action overflow icon

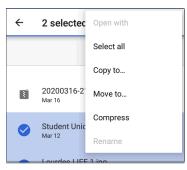

You can also long press on text on most screens to open options for copying and sharing the text.

### **Left-Side Navigation Drawer**

In the Files app, tap the Menu icon or swipe right to open the navigation drawer. It displays the folders in your file system.



NOTE: In the Files app, you may need to tap the action overflow icon at the top right and select **Show Internal Storage** to navigate to the **AirCheck-G3** folder and subfolders, as shown above.

See the Navigation Drawer topic for more.

## System Status Bar and Notifications



The Status Bar across the top of the screen displays notification icons from the system as well as AirCheck G3-specific icons related to your network connections and test statuses.


See Test and Port Status Notifications for details about the icons and notifications related to AirCheck G3 network connections, testing, and management.

Tap and swipe down on the Status Bar to open the Notification Panel

#### **Notification Panel**

The Notification Panel contains notifications from your device, such as downloads and installs, inserted hardware, captured screenshots, app and connection statuses, and updates. The panel also displays common system settings icons for quick access.

Swipe (touch and drag) downwards on the Status Bar at very top of the screen to slide down the Notification Panel.

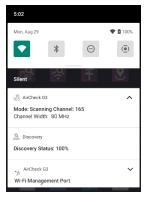

- Tap the title and down arrow von a notification (or swipe down on it) to expand the box and view more details or options.
- Tap the middle of a notification to open the related app, image, or device settings or to perform other related actions.
- · Swipe left on a notification to dismiss it.

NOTE: Because they are essential to the AirCheck G3 testing functions, you cannot dismiss the test and management port-related test and port status notifications.

 Tap CLEAR ALL at the lower right of the panel to dismiss all system notifications.

# Apps Screen and Store

To access the apps that are not shown on the Home screen, swipe up on the Home screen or tap the up arrow icon  $\wedge$ .




The Apps screen displays all the apps on your device. The image above is an example. Your Apps screen may contain different third-party apps.

- Tap an app's icon to open the app.
- Hold and drag an icon upwards to add it to your Home screens.
- Touch and hold (long press) an icon to view App Info or access widgets you can add to the Home screen and other actions you can perform.



# App Store

From the Home Screen or Apps Screen, open the NetAlly App Store to download third-party system applications to use on your AirCheck G3.

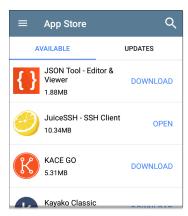

NOTE: Your unit must be "claimed" to Link-Live Cloud Service at <u>Link-Live.com</u> to access the App Store.

- Tap the search icon to search for an App.
- Tap **UPDATES** to view available updates of installed apps.
- To request that an App be added to the App Store, visit the Apps page at Link-

Live.com, and select the floating action button (FAB) at the lower right corner to Request or Upload an App.

# **Device Settings**

To access the system device settings, tap the Settings of icon at the bottom of the Home screen.

- Q Search settings
- Network & internet
  Wi-Fi
- Connected devices
  Bluetooth
- Apps & notifications

  Recent apps, default apps
- Battery 100%
- Display
  Wallpaper, screen timeout, font size
- Sound
  Volume, vibration, Do Not Disturb
- Storage 52% used - 7.60 GB free


Use the device settings screen to adjust the display, sound, and date/time; view installed applications and memory devices; connect to Wi-Fi; or reset to factory defaults.

### **Quick Settings Panel**

You can also access some of the most common device settings, like Wi-Fi, from the Quick Settings Panel by swiping down from the Status Bar at the top of the touchscreen.



Swipe down twice to open the full Quick Settings Panel.

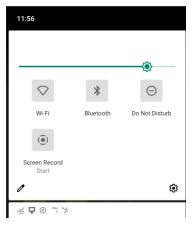

- Touch and drag the slider control at the top of the panel to adjust the screen's brightness.
- Tap an icon in the panel to enable or disable the corresponding feature. For example, you

can turn the unit's **Wi-Fi** functions on or off from the quick settings.

- Touch and hold an icon to open the relevant device setting screen, if there is one. For example, touch and hold the Wi-Fi icon to open system's Wi-Fi settings.
- Tap the pencil icon at the bottom of the Quick Settings Panel to configure the icon controls that appear in the panel.

#### **Auto Power Off**

Activating the Auto Power Off function helps to extend the battery run time.

- 1. From the Device Settings 🤨 , select **Display**.
- On the Display settings screen, tap Device auto power off.
- In the pop-up dialog box, select how long you want the unit to remain On with no activity occurring. The unit automatically powers off after the selected period of inactivity has passed.

Similarly, you can adjust the setting that controls when the display goes into **Sleep** mode from the **Display** settings screen.

# Language

Your device supports English, Japanese, and Chinese language displays. See "Changing the Device Language" on page 67 for information on changing the language.

# **Connecting to Wi-Fi**

Basic connectivity to Wi-Fi is done using the Wi-Fi Management Port, which is configured in the system network settings. The Wi-Fi Management Port is separate from the Wi-Fi test port. It can access the internet, be used by other system applications, upload test results to the Link-Live web site, and be used for remote control. The management port also provides a more stable network connection than the test port, which can change connections during AutoTests or be disconnected during Wi-Fi scanning. See Test and Management Ports for more information.

NOTE: NetAlly testing apps use the Wi-Fi Test Ports and Wi-Fi AutoTest Profiles to connect to Wi-Fi networks during testing. See Test and Management Ports for more information.


To connect your AirCheck G3 to a Wi-Fi network, access the system Wi-Fi Device Settings using either method below:

 Open the device Wi-Fi settings from the main Device Settings screen by tapping the Settings icon and selecting Network &


#### Internet > Wi-Fi.



 Open device Wi-Fi settings from the Quick Settings panel by dragging down the top Status Bar and tapping and holding (long pressing) the Wi-Fi icon.

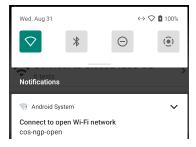


Either path opens the Wi-Fi settings screen.

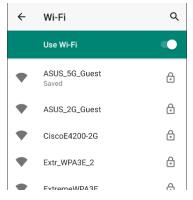

- 1. Ensure the Wi-Fi feature is On.
- 2. Tap an available Wi-Fi network in the list.

3. Enter the network's security credentials.

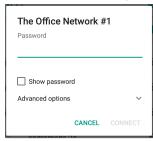

Most networks only require a password, but depending on the security settings, some may also require a company username, EAP type, authentication type, certificate, or other credentials.

4. After entering credentials, tap **CONNECT**.

The network you selected moves to the top of the list, and your connection status is displayed below its name in device and quick settings.



LRG

Connected

The Status Bar displays the Wi-Fi status icon at the top right of the screen.



### **Captive Portals**

When you try to connect to a network with a Captive Portal requirement, this system notification icon appears in the top Status Bar. Drag down from the top of the screen to open the notification.



Tap the notification to open a web browser window where you can enter the required information for the captive portal. When finished, you can access the internet through the connected network.

If you are trying to connect to a network with a captive portal, but the system notification is not appearing, check that the Captive Portal Detection setting is enabled in Device Settings > Network & Internet.



# Configuring Wi-Fi Connections With Enterprise Security

Enterprise security requirements for WPA/WPA2/WPA3 Enterprise now require a CA certificate file to be imported to your unit. Some EAP types also require a client certificate and key. This procedure assumes that you are trying to connect to an AP using WPA2-E with PEAP.

- Before You Begin
- Import the Certificate Authority File
- Test Wi-Fi Management Using WPA2-E with PEAP

#### · Import the Client Certificate

#### Before You Begin

You may depend on your IT department to provide authorization certificates, which may be created by a Trusted Root Authority like VeriSign or DigiCert. If so, contact your IT department for the certificate resources. You will need:

- · CA certificate in .pem format
- Client certificate in .p12 format with private key (EAP TLS only)
- Common name, domain name, username, and password for the server you to which you want to connect.

If you have the ability to generate your own selfsigned certificates, such as a FreeRADIUS server, you can create these resources as needed. This procedure uses examples generated by a FreeRADIUS server as a certificate source, although other sources are available.

#### Import the Certificate Authority File

- Copy the self-signed Certificate Authority (CA) file (in .pem format) onto a USB thumb drive.
- Transfer the USB thumb drive to your AirCheck G3, and then copy the .pem file to the **Downloads** folder.
- Open the Settings app.
- Navigate to Security > Encryption & credentials > Install a certificate > Wi-Fi certificate. This opens the file picker.
- Navigate to the Downloads folder, and select the .pem file that contains your CA certificate.
- Rename this certificate (for example, CA FreeRadius self-signed). A message confirms that the Wi-Fi certificate has been installed.
- 7. (Optional) Verify the CA certificate installed correctly:

- Tap the system BACK button to return to Encryption & credentials.
- b. Tap User credentials.

sudo -s

- Verify that the name of your CA file (for example, CA FreeRadius self-signed) is displayed.
- 8. If you are creating your own certificate:
  - Verify the common name for the enterprise server. For example, using a FreeRADIUS server, create a common name of Example Server Certificate by entering:

```
cd /etc/freeradius/certs
openssl x509 -in server.pem
-text | grep Subject | grep
CN
Subject: C=FR, ST=Radius,
O=Example Inc., CN=Example
Server Certificate/
emailAddress=
admin@example.org
```

b. On the same server, create a user login to access the enterprise server. For example, using a FreeRADIUS, you would edit /etc/freeradius/users, locate the section for "# The canonical testing user", and then create the new user by inserting 2 lines:

```
entuser1 Cleartext-Password
:= "randompw"
Reply-Message := "Hello, %
{User-Name}"
This creates a user login called
entuser1 with a password of
```

# Test Wi-Fi Management Using WPA2-E with

randompw.

- Open the Settings app on your unit and navigate to **Network & internet**.
- 2. Toggle the Wi-Fi button to On/Enabled.
- 3. Tap Wi-Fi to view available networks.
- Scroll down to and then select the SSID of the enterprise server you wish to connect to

using WPA2-E (for example, **TEST-Ruckus-WPA2-E**).

- 5. Configure the following WPA2-E options in the pop-up dialog:
  - EAP method: PEAP
  - Phase 2 authentication: MSCHAPV2
  - CA certificate: (use whatever name you chose for your CA certificate, for example, CA FreeRadius self-signed)
  - Online Certificate Status: Do not validate
  - Domain: (enter the Common Name recorded above, for example, Example Server Certificate)
  - Identity: (enter whatever test user name was set up for the server, for example, entuser1)
  - Anonymous identity: (leave blank)
  - Password: (enter the password set up for the server)

- 6. Tap the **CONNECT** button to apply settings and close the configuration page.
- 7. Verify that the test SSID appears at the top of the list with a status of Connected.

#### Import the Client Certificate

NOTE: Applies to EAP TLS only.


- Obtain a client certificate in .p12 format. Be sure it includes the private key.
  - NOTE: While the imported CA certificate was a .pem file, NetAlly recommends that the client certificate use a .p12 file.
- Rename the certificate file, for example, client.p12.
- 3. Copy the .p12 file to a USB thumb drive.
- Transfer the USB thumb drive to your AirCheck G3, and then copy the .p12 file to the **Downloads** folder.
- 5. Open the Settings app.
- Navigate to Security > Encryption & credentials > Install a certificate > Wi-Fi certificate. This opens the file picker.

- Navigate to the **Downloads** folder, and select the .p12 file that contains your client certificate (for example, **client.p12**). A message prompts you to enter the password.
- Enter the client certificate password to extract the certificate.
- Rename the certificate, for example,
   FreeRadius client. A message confirms that the Wi-Fi certificate has been installed.
- (Optional) Verify the client certificate installed correctly:
  - Tap the system BACK button to return to Encryption & credentials.
  - b. Tap User credentials.
  - verify that the name of your client certificate file (for example, FreeRadius client) is displayed.
- Press the system BACK button to return to Encryption & credentials. You can now securely connect to your enterprise server.

# **Sharing**

AirCheck G3 allows you to share images and files on other devices. When you see the Share icon \$\left\circ\,\text{,}\tap it to view your configured sharing options.

For example, the image below shows an expanded Screenshot notification from the top notification panel.

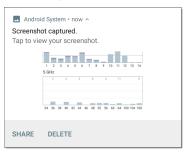

Tap **SHARE** to open the "Share with" pop-up dialog, where you can choose a sharing method, such as email, messaging, or uploading to Link-Live Cloud Service online.



# **Sharing Files to Link-Live**

From the "Share with" dialog box (and other screens on the AirCheck G3), tap the Link-Live option to share (upload) a file to Link-Live Cloud Service at Link-Live.com.

Files can be attached to a test result or uploaded individually to the Uploaded Files page on Link-Live.



The example below shows the Link-Live sharing screen for a screenshot image.




The **SAVE TO LAST TEST RESULT** option attaches the image to your most recently run AutoTest or iPerf results on Link-Live.com.

### Sharing from the Files App

Files from internal or external storage can also be shared to Link-Live.com from the system Files app. You can upload one selected file or multiple files at once.

- With the Files app opened, navigate to the folder containing the files you want to share using the left-side navigation drawer.
- Long press on one or multiple files to select it.

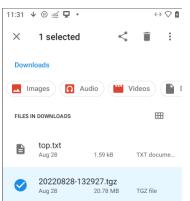

- 3. Tap the  $\triangleleft$  share icon in the top toolbar.
- 4. If prompted, tap the Elink-Live option.





#### File Name

20220828-132927

Comment

Logs

Job Comment

QA-Colo-ACKG3 App-2.1.0.93



SAVE TO UPLOADED FILES

- Enter any Comments you would like attached to your file.
- Select SAVE TO LAST TEST RESULT or SAVE TO UPLOADED FILES.

Your files are uploaded and viewable on Link-Live.com.

See the Link-Live chapter for more information on using Link-Live with your AirCheck G3.

# Saving a Screenshot

On the AirCheck G3 unit, press and hold the **Power** button and the **Volume Down** button at the same time for one second to save a screenshot of the current screen. (See Buttons and Ports for button locations).

When a screenshot is taken, the unit beeps and displays the captured screenshot notification in the Notification Panel. Open the notification to share the image using Link-Live, Bluetooth, or another configured application.

# Changing the Device Language

The AirCheck G3 supports Chinese, English, and Japanese language displays.

To change the device's interface language:

- Go to the <u>Device Settings</u> screen by tapping the Settings icon at the bottom of the Home screen.
- 2. Scroll to and select System.
- Select Languages & input and then Languages. This displays the Language preferences screen.
- On the Language preferences screen, select
   + Add a language.
- Tap the language option you want. This returns you to the Language preferences screen.
- Touch and hold the icon 

   to the right of
  the language, and then drag the language to

the top (number 1) place on the list.



The AirCheck G3 displays the chosen languages, as available, in the priority order shown on the Language preferences screen.

NOTE: The AirCheck G3 supports Chinese, English, and Japanese. This user guide supports Chinese and English. If you choose Japanese as the device language, the system uses the English user guide. See How to Use this Guide for more information about the user guide.

NOTE: Manuals are also available for web download at: <a href="https://www.net-ally.com/support/user-guides/">https://www.net-ally.com/support/user-guides/</a>

AirCheck G3 User Guide

# AirCheck G3 Settings and Tools

The AirCheck G3 features a common set of tools and **General Settings** that apply to multiple NetAlly apps and testing behaviors. This chapter covers settings, icons, and notifications *specific to AirCheck G3*.

(See the **Device Settings** topic for information on the system settings.)


Access common settings and informational screens for the NetAlly testing apps (like AutoTest or Capture) by opening the left-side Navigation Drawers 
or Settings

# **Navigation Drawer**

Many system apps, including the NetAlly test apps, contain additional settings, tools, and information in a "navigation drawer" that slides out from the left side of the screen.

#### To open the navigation drawer:

- Tap the menu icon at the top left of one of the testing application screens.
- Touch and drag (swipe) to the right from the very left side of the app screens.

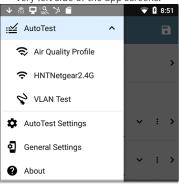


As an example, the AutoTest navigation drawer (above) provides access to the enabled AutoTest profiles, AutoTest Settings, General Settings, and the About screen.

Settings for each specific app are described in the chapter for the app.

#### **About Screen**



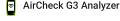

Model: AIRCHECK-G3-PRO

Serial: 2150282

MAC Addresses Wi-Fi: 00c017-550078

Wi-Fi Management: 00c017-550079

System Version: 2.1.0.75

AllyCare: Disabled

#### **EXPORT LOGS**

The About screen displays the model number, serial number, MAC addresses, software versions, SFP details, and current AllyCare contract status for your AirCheck G3.

If a **User-Defined MAC** is enabled in an NetAlly apps' **General Settings**, (User-defined) appears next to the MAC address on the About screen.


## **Exporting Logs**

The About screen contains the Export Logs function, which allows you to save your unit's logs for analysis by NetAlly's technical support team.

Tap the EXPORT LOGS link to download a .tgz file to the Downloads folder on your unit. Open the Files app to transfer the file using email or another method. (See Managing Files.)

# Test and Management Ports

The AirCheck G3 has: two USB Type A ports; a single USB Type C port for charging and On-the-Go; and two Wi-Fi radio ports.

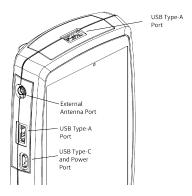

The Wi-Fi ports give the AirCheck G3 two network interfaces: 1) Wireless Test, and 2) Wireless Management.

See the sections below for more information on the ports. Also see <u>Buttons</u> and <u>Ports</u> and the technical if needed.


### **Test Ports**

Wi-Fi Test Port: The internal Wi-Fi test adapter is a 2x2 Tri-band 802.11ax wireless radio. (To disable, see General Settings in the testing apps' left-side navigation drawer.)


AirCheck G3 runs Wi-Fi AutoTests, Captures, Discovery, and other comprehensive network analysis apps over the test port. The Wi-Fi test radio is primarily controlled by the settings in applications, especially AutoTest.

You use the AutoTest app to set up and run an AutoTest Wi-Fi Profile to establish a link on the Wi-Fi test port. (By default, the AirCheck G3 starts in the Wi-Fi App passive scanning mode).

Note that the General Settings affect how you can use the test port. (The General Settings are accessible from the left-side navigation drawer from most NetAlly testing apps.)

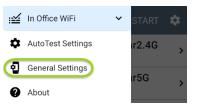

The **Use Wi-Fi test port** option must be enabled for the test port to function. (Enabled is the default setting.)

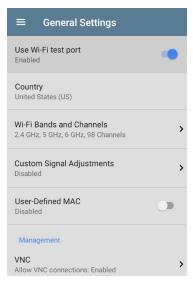

NetAlly also recommends that you enable all Wi-Fi Bands and Channels before setting up Wi-Fi Test Profiles:

- 1. Tap the **Wi-Fi Bands and Channels** option to open the Wi-Fi Bands and Channels screen.
- 2. Tap the Wi-Fi band(s) option to open a selection screen, and then enable all available bands
- 3. Tap the option for each frequency band to open a selection screen, and then enable all available channels for each band.

This process makes it easier to set up the Wi-Fi Test Profiles, which you can limit to specific channels, APs, SSIDs, etc. See AutoTest Wi-Fi Profile for more information.

See General Settings for more information about all General Settings options.

## Management Port

Wi-Fi Management Port: The internal Wi-Fi management port runs on the main system's 1x1 Dual-band 802.11ac + Bluetooth 5.0 wireless adapter, which is configured in the system Device Settings. See "Connecting to Wi-Fi" on page 48 to configure this connection.

The Wi-Fi management radio is set up by the system network settings. The full Internet access

and a more stable network connection than the Test Port, which may frequently drop links and reconnect or resume scanning.

AirCheck G3 can run Discovery, Ping/TCP Connect tests, and Path Analysis on the management port, but not AutoTests, or packet captures.

USB Wired Management Port: You can use a USB to Ethernet adapter to run an alternative wired management port for your AirCheck G3. This option allows you to set up a stable wired connection for system updates, Updating Software, communicating with Link-Live, and for running basic wired tests that can help with diagnosing problems that may affect Wi-Fi devices.

NOTE: NetAlly has tested many USB-to-Ethernet adapters with the AirCheck G3, but not all adapters have been tested for compliance.

Contact NetAlly support for more details if needed.

To set up the adapter interface:

- Plug the adapter into one of the USB Type A ports on your device.
- Connect the adapter to a network RJ45 cable.
- Verify that the LEDs on the adapter are on. This indicates that the connection is active.
- Verify that the USB Wired Management Port is now listed as a management port in the Test and Port Status Notifications.

You can now use the USB Wired Interface in the following applications:

- Discovery (Active Discovery Ports and TCP Port Scan)
- Ping
- Path Analysis

See Selecting Ports below for more information.

## **Selecting Ports**

Some of the individual NetAlly testing apps let you select which port interface to use for tests or analysis. For example:

- You may want to verify that you are getting a reliable connection to the Internet and the Link-Live cloud service while you are actively using the Wi-Fi Test port to perform an AirMapper survey. To check connectivity, you can configure the Ping/TCP app to use the Wi-Fi Management port to run a continuous background ping to the Internet.
- Each port can connect to different networks.
   For example, an organization might have one network for visitors and another for staff. You can use the management and the test port to check connectivity on each network without the need to link and relink through a single interface.

To change the port, tap an app's settings icon to display the settings screen. Then tap



- The top Wi-Fi Port refers to the test port.
- The Wired Management Port (USB) option refers to the <u>optional USB-to-Ethernet</u> interface for the management port.
- An AutoTest Wi-Fi Profile must run to establish test port links.
- The last listed Wi-Fi Profile runs automatically when a Wi-Fi connection is available.

# Test and Port Status Notifications

AirCheck G3 shows notifications from the NetAlly testing apps and unit ports in the top Status Bar and Notification Panel. Swipe down on the Status Bar to view the notifications.

On each notification, you can tap the title and down arrow to expand the box and view more details or options.



Various AirCheck G3 icons appear in your Status Bar, as listed in the following sections.

NOTE: Read Test and Management Ports for descriptions of the port functions.

See General Settings for settings that control port functions.

### **Test Port Notifications**

Active network connections on the test ports are established using the AutoTest app.

The **Wi-Fi Test Port** status displays with the wireless channel number under a Wi-Fi or Link icon. Channels in the 6 GHz band display with an E by the Wi-Fi or Link icon.

When the AirCheck G3 unit is dwelling on a Wi-Fi channel (in this case channel 64), the channel number is static. When the AirCheck G3 is scanning for discovery, Wi-Fi analysis, or air quality measurements, the channel number changes dynamically to show which channel is currently being scanned.

Periodic AutoTest is running or has completed. When Periodic AutoTest is running, the Wi-Fi Test Port may not be available to other testing apps.

:≚ AutoTest ^

#### Periodic AutoTest Running

Passed: 3

Failed: 2

Skipped: 1

Time Remaining: 54 m

## **Management Port Notifications**

A Management Port connection is established through the main system Wi-Fi adapter.

AirCheck G3 ^

#### Multiple Management Port Connections

Wi-Fi Management Port

IP Address: 192.65.49.83

SSID: NSVisitor

Channel: 52

A Wired Management Port connection is established through the optional USB-to-Ethernet interface for the management port. Its details are displayed under the system Management Port notifications.

If your Management connection is lost, the following notification displays.



## **Discovery Notifications**

The Discovery notifications show the progress of the discovery process. See the Discovery app chapter for more information.

- The active discovery process is running and has progressed to the specified percentage.
- No links are currently available for active discovery, either because none of the ports enabled for discovery are connected or AutoTest is running. Discovery is temporarily disabled when AutoTest is running.

## **VNC/Link-Live Remote**

A remote VNC connection is active through a standalone VNC client and/or the Remote function in Link-Live Cloud Service.

#### General Settings and Tools

AirCheck G3 ^

#### Remote Connected

Clients


172.24.0.219

Link-Live Remote: Angela Tech Writer

## AirCheck G3 General Settings

AirCheck G3's General Settings control test and management-related connections that affect multiple test apps.


Access the General Settings from the left-side navigation drawer in the NetAlly testing apps, such as AutoTest, Discovery, Capture, iPerf, etc.

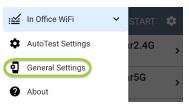

See also Test and Management Ports and Test and Port Status Notifications for related information on port functionality and status icons.



The Wi-Fi General Settings control functions of the Wi-Fi Test Port functions.

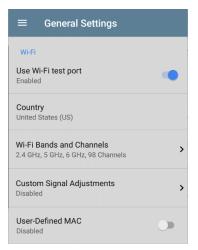

**Use Wi-Fi test port:** Enable or disable Wi-Fi tests, connections, and measurements in the testing apps, including AutoTest Wi-Fi Profiles and the Wi-Fi analysis app.

NOTE: This setting does not disable the main system device Wi-Fi function, which controls the Wi-Fi Management port connection. See Device Settings to disable the system Wi-Fi.

**Country:** Set the country code for your unit. This setting controls which channels can be scanned and which channels are reported as illegal or which may have Dynamic Frequency Selection (DFS).

**Wi-Fi Bands and Channels:** Select the wireless frequency bands and channels the unit scans for devices and measurements such as utilization.

Tap each band or channel setting to open a selection dialog.


Unchecking a Wi-Fi Band prevents any linking to, or scanning of, channels in that band.

Unchecking a Channel means the channel still links but does not get scanned.

Channel changes affect these apps: Air Quality scans, Wi-Fi results (scanning), Discovery, AirMapper (passive surveys)

Channel changes do *not* affect these apps: AutoTest results (linking), Wi-Fi Capture, AirMapper (active surveys)

Tap the **Dwell Time** field to adjust the amount of time the AirCheck G3 stays on each channel to gather data.

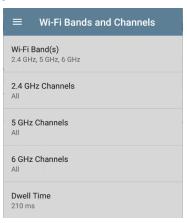


Custom Signal Adjustments: Tap this setting and then tap the Signal Adjustments toggle to open an adjustment panel for each frequency band. You can adjust the signal strength for each band from -20 dB to +20 dB.



User-Defined MAC: This setting affects the Wi-Fi Test Port only. Tap the toggle switch to enable a user-defined MAC address. When enabled, an additional User-Defined MAC field appears under the toggle setting. Tap the lower field to enter your desired MAC address for the AirCheck G3. When a User-Defined MAC is enabled, (User-defined) appears next to the MAC address on the About screen and on relevant test result screens.

## > Management

These settings affect management-related functions on the AirCheck G3, including remote access.

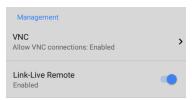

## **P** VNC

Tap **VNC** to open the VNC settings screen and configure your unit's VNC connections for remote operation.

See Remote Access for more information about connecting to a VNC client or Link-Live Remote.



Allow VNC Connections: Tap the toggle button to enable or disable remote connections from VNC clients.

**Port number:** Tap to enter a port number other than the default.

Password: Tap to enter a password, which a VNC user must enter to access the AirCheck G3 interface remotely.

NOTE: If you set a **Password** here in the **VNC** settings, the password is required to connect to both a standalone VNC client and the Remote feature at Link-Live.com.

**Web viewer:** Tap the toggle to enable or disable web viewer access.

**Web viewer port**: Tap to enter a port number other than the default.



This setting enables or disables the AirCheck G3's remote control function in Link-Live Cloud Service at Link-Live.com.

NOTE: The Link-Live Remote feature is only available to customers with an active AllyCare subscription. Your AirCheck G3 must be claimed. See <a href="NetAlly.com/Support">NetAlly.com/Support</a> for more information.

Access the Remote function on the **Units** page at Link-Live.com by selecting the claimed AirCheck G3.

### **Preferences**




**Distance Unit**: This is the unit AirCheck G3 uses for distance measurements in the testing apps, specifically AirMapper. Tap the field to switch between Feet and Meters.

Save Locally Only: Tap this toggle field to change the unit default behavior for savings files. (The default is to give you the option to save to Link-Live or locally.)

## **Trending Graphs**


Many of the AirCheck G3 testing apps feature time-based line graphs of recorded measurements, which you can pan and zoom to view different time intervals. For example, the image below shows the Signal and Utilization graphs from the AutoTest Wi-Fi Link Screen.

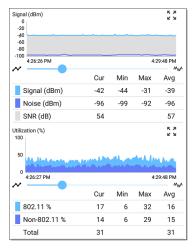

The graphs update in real time and then save and display data for up to 24 hours (depending on test type and/or link status).

A legend indicates the measurements that correspond to each plotted color.

For another example, the image below shows the Capture app graph.

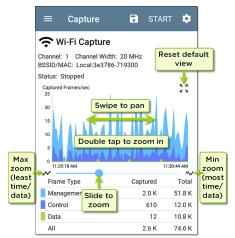

- To pan, or move backward and forward in time, touch and drag (swipe) left and right on each graph.
- To zoom in on a specific point, double tap the point on the graph. The view zooms in 2x (or displays half the amount of time) for each double tap.
- To zoom in or out, decreasing or increasing the time interval displayed, drag the slider or tap the slider bar below the graphs.
  - The largest time interval (maximum zoom out) is the total time data has accumulated.
  - To reset the graph to the default time interval, tap the zoom reset icon \( \frac{\tilde{\ti}}\tilde{\tilde{\tilde{\tilde{\tilde{\tilde{\tilde{\tilde{\tilde{
    - The zoom reset icon appears after you zoom or pan on the graph.
    - The default time interval varies across different apps.

The following apps and screens contain trending graphs:

- AutoTest Wi-Fi Profiles Link and Channel
- Ping/TCP Ping Test

- Capture
- Discovery Interface Statistics
- Wi-Fi RF and Traffic Statistics
- iPerf

## Common Icons

The icons below appear in multiple NetAlly test and system apps.



**Menu Icon** - opens the left navigation drawer or other menus



**Refresh Icon** - restarts testing and measuring on the current screen



Settings Icon - opens configuration options for the current app



**Save Icon** - saves settings or files or loads saved configurations



Floating Action Button (FAB) - opens the Floating Action Menu, which contains additional actions



**Action Overflow Icon** - contains additional actions

Directional Arrows (or Carets) -



indicate the ability to "drill in," open a screen, or expand a panel for more detailed information, or to change the order of a list

For explanations of the AirCheck G3 icons that appear in the Status Bar at the top of the screen, see Test and Port Status Notifications.

# Floating Action Button (FAB) and Menu

Many system applications, including NetAlly's AutoTest and Discovery apps, feature a Floating Action Button or "FAB" that opens a floating action menu with more options for analysis.

The FAB on the main AutoTest app screen allows you to add a new Wi-Fi or Air Quality Profiles.





The FAB on the Discovery app's Details screen opens other apps for further testing of the selected device.



See the chapter for each app for descriptions of the FABs specific to that app. For example, see Discovery App Floating Action Menu describes the Discovery FAB in more detail.

## **Common Tools**

## Web Browser/Chromium


Some of the testing apps, like AutoTest, Ping/TCP, and Discovery, give you the option to **Browse** to internet addresses using a web browser application. AirCheck G3 has Google Chromium pre-installed.

## Telnet/SSH

Starting with v1.1, AirCheck G3 has the JuiceSSH application pre-installed. Both the AutoTest and Discovery apps provide options to start a Telnet or SSH session using the current device address. Selecting these options opens JuiceSSH and starts a session. You can also open JuiceSSH from the Apps screen.

The JuiceSSH app maintains a list of previous connections. When opened from a NetAlly app, JuiceSSH uses the first connection in the list that matches the IPv4 address or device name and type. If no match is found, a new connection entry is created and used.

As a third-party app, JuiceSSH contains its own tutorials. For additional help, tap the action overflow button : at the top right of the JuiceSSH app screen, and select View our FAQ.

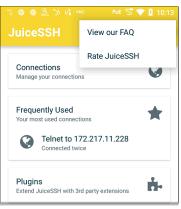

### **External Camera**

The AirCheck G3 does not have a built-in camera, but you can use an external USB camera to take pictures to accompany Link-Live

data. The pictures can be shared or uploaded to the <u>Link-Live</u> cloud service with test data. You can also edit or annotate pictures in the Gallery app. NetAlly has verified that the following cameras work with the app:

- Logitech C270 HD Webcam
- EMEET 1080P Webcam
- NexiGo N660
- Microsoft LifeCam HD-3000

### Set Up

To begin using the camera app:

- Make sure your AirCheck G3 is <u>claimed to</u> <u>Link-Live</u>.
- Plug your USB camera into either the top or side USB 2.0 Type-A ports of your AirCheck G3.
- From the Android home desktop, tap the App Store application.
- Scroll down to the USB Camera (AirCheck G3) app from NetAlly.

- Tap the blue **DOWNLOAD** button. Wait for the download to finishes and the blue button changes to show OPEN.
- Verify the Download completes and the blue button changes to show OPEN.
- Tap the **OPEN** button to launch the USB Camera app. The app then prompts you to set several options.
- When prompted to allow the USB camera to take pictures and record video, select WHILE USING THE APP. The app launches and shows a preview image.
- 9. (Optional) To move the camera app icon to the system home desktop:
  - Tap the circular Home button at the very bottom of the system screen to view the desktop.
  - b. Swipe up from the bottom of the screen to view all installed applications.
    - Find the USB Camera icon.

d. Press and hold the icon, and then drag it up into the home desktop icons area.

## To Share an Image

To share an image to Link-Live:

- From the system home desktop, launch the USB Camera app. The app opens and a live preview image appears in landscape mode.
- Point the camera and press the circular Shutter button to take a picture. The Share
   and Delete icons appear on screen.
- 3. Tap the **Share** icon to display the Link-Live sharing screen.
- Enter any a File Name, comment, or job comment as needed.
- Tap SAVE TO LAST TEST RESULT to attach the image to the last uploaded test result, or tap SAVE TO UPLOADED FILES to save the image to your Uploaded Files folder on Link-Live. (You can then view your uploaded files from a PC logged into Link-Live.)

## **Software Management**

This chapter explains how to save and transfer files, reset app and device defaults, update your software, and remotely access your AirCheck G3.

Tap a link below to skip to your desired topic:

Managing Files

Updating Software

Remote Access

Resetting App Defaults

Restoring Factory Defaults

# **Managing Files**

In AirCheck G3's operating system, images, documents, and other files reside in a folder system, where you can copy, move, and paste them between folders or to external storage locations.


See also Navigating AirCheck G3.



# Files Application

The Files app allows you to access the files saved on your AirCheck G3. Tap the icon at the bottom of the Home Screen (or from the Apps screen) to manage your files.


NOTE: In the Files app, you may need to tap the action navigation icon = at the top left and select the ACKG3 folder to show the device sub-folders, as shown below.

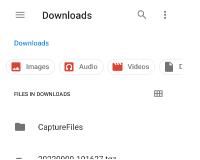

- Tap a folder or file to open it.
- Long press on folders or files to select multiple and to view additional file management operations in the top toolbar, including the Share and Delete buttons.



 Tap the action overflow icon to see even more actions, such as to create a new folder, move a file, delete an item, and to show or hide the main internal storage folder.

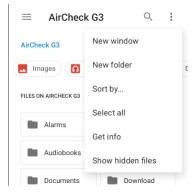



### How to Move or Copy a File

 Long press on a file to select it. You can then select more files as needed by tapping them



- Tap the overflow icon at the top right.
- Select Copy to... or Move to.... Your selected action button appears at the bottom of the screen.




- 4. Navigate to the folder where you want to move or copy the file.
- Tap the Move or Copy button at the bottom of the screen.

### Using a USB Drive

Insert a USB flash drive into the USB port on the top of the AirCheck G3.

A USB icon papears in the Status Bar at the top of the screen. Pull down the top Notification Panel to reveal the USB drive notification.

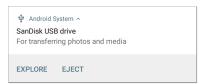

The **USB** storage location is now available from the Files application.

CAUTION: Use the system EJECT function before physically removing your USB drive from the USB port to avoid potential corruption of your storage device's file system.


## **Ejecting Storage Media**

You can eject storage media from the expanded system notification (as shown above) in the Notification Panel or from the left-side navigation drawer in the Files app (below).



### Using a USB Type-C to USB Cable

- Plug a USB-C cable into the USB-C port on the left side of the AirCheck G3, and connect to a PC or tablet.
- On the AirCheck G3 Unit, open the system device settings by tapping the Settings icon at the bottom of the Home screen.
- Select Connected devices.

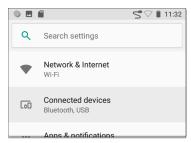

- On the Connected devices screen, select USB.
- 5. In the pop-up dialog, tap **Transfer files** to enable file transfer.

Use USB to	
Charge this device	
<ul><li>Transfer files</li></ul>	
○ Transfer photos (PTP	)
	CANCEL

NOTE: AirCheck G3 does not charge through a USB cable connected to a PC.

 On a PC or tablet, navigate to the AirCheck G3 folder, and then move, copy, and paste files to and from the AirCheck G3's file system.

▲ CAUTION: Use the system EJECT function before physically disconnecting the USB cable from your PC or AirCheck G3 to avoid potential corruption of your storage device's file system. See Ejecting Storage Media above.

# **Updating Software**

Your AirCheck G3 accesses software updates from the Link-Live Cloud Service "Over-the-Air" (OTA). However, you can also manually download and install updates if you do not want to claim your unit to Link-Live. See Manual Updates below.

### Over-the-Air Updates

For an OTA update, you must create an account and "claim" your AirCheck G3 unit at Link-Live.com. Then your AirCheck G3 can find and download software updates. See Getting Started in Link-Live.

The first time you claim your AirCheck G3 to Link-Live, a software update may be available. If so, an update icon vappears in the Status Bar. Slide down the Top Notification Panel, and then select the notification to update your unit.

**↓** Link-Live

Software Update Notification Software update available.

- To check for available software updates at any time, open the Link-Live App from the Home screen.
- In the Link-Live App, tap the menu icon or swipe right to open the left-side Navigation Drawer.



3. Tap Software Update.

The Software Update screen opens and displays the version number of any available updates.



- Tap Download + Install (or Download + Reinstall) to update the operating system and NetAlly applications. The update downloads and installs automatically. When finished, the unit restarts.
- After updating, check the Software Update screen again in case another update is still required.

### **Manual Updates**

You can acquire update files by contacting NetAlly's Technical Support at NetAlly.com/Support or by downloading them from Link-Live.com as follows:

- 1. Log in to the Link-Live web site.
- Open the left-side navigation drawer by clicking the menu icon , and then select Support > Software Downloads.
- Locate and select the update file for your unit (g3-ota-user.zip).
- 4. Save the update file to a PC.

### **Updating the System Software**

Reference Buttons and Ports if needed.

- From your PC, copy the .zip file to a FAT32formatted Type A USB drive, and then insert the drive into your AirCheck G3.
- 2. Power off your AirCheck G3 unit.
- Press and hold the Volume Up button, and then press the Power button. Continue to hold the Volume Up button until the Recovery screen appears. (You can release the Volume Up button a few seconds after this screen appears.)
- 4. In Recovery Mode, use the volume buttons to highlight apply update from USB drive,

- and then press the **Power** button to confirm the selection.
- 5. Use the volume buttons to highlight the correct update file on the USB drive, and then press the **Power** button to confirm. The AirCheck G3 opens the Updater, installs the update, and then restarts with the update installed. This process can take 5 to 10 minutes. When complete, the message 'Install from USB drive completed with status 0.' should show on the install line.
- Use the volume keys and Power button to select reboot system now. Your unit should boot normally.

### **Remote Access**

AirCheck G3 supports remote access and control using either a standalone VNC client or the Link-Live Remote feature, which uses a VNC client through the Link-Live website.

NOTE: The Link-Live Remote feature is only available to customers with an active AllyCare subscription. Your AirCheck G3 must be claimed. See NetAlly.com/Support for more information.

You can establish remote connections using the Wi-Fi Test Port. However, the Management Port provides a more stable link for remote control because the test port may disconnect and reconnect frequently.

See Test and Management Ports.

The top notifications are the quickest way to find assigned IP addresses for your AirCheck G3 ports. Swipe down from the Status Bar to view them.

→ AirCheck G3 
∧

#### Multiple Management Port Connections

Wi-Fi Management Port

IP Address: 192.65.49.83

SSID: NSVisitor

Channel: 52

For a Wi-Fi Management Port connection, you must have the main System Wi-Fi settings configured to connect to a wireless network.

When a remote session is active, the remote icon appears in the top Status bar, along with a notification.

AirCheck G3 ^

#### Remote Connected

Clients

172.24.0.219

Link-Live Remote: Angela Tech Writer

### **Using VNC**

Remotely access the AirCheck G3 using a peerto-peer VNC client installed on a PC or other machine. See General Settings > VNC to enable and configure VNC connections.

To connect to AirCheck G3 using a VNC client:

- Get the IP address of a connected port (preferably a management port) by swiping down from the Status Bar at the top of the screen to view the notification panel.
- Provide the Wi-Fi Test or Management Port's IP address to your chosen VNC client application.
- 3. Connect using your VNC client.
- 4. If needed, enter the password that is set in the VNC settings.

### **Using Link-Live Remote**

The Link-Live Remote feature uses end-to-end encryption, allowing secure remote control of your AirCheck G3.

On your AirCheck G3, go to General Settings > Link-Live Remote to ensure the feature is enabled.

NOTE: If a Password is enabled in the VNC General Settings, you must also enter the

same password to access the Remote feature in Link-Live.

- If you have AllyCare, sign in to <u>Link-Live.com</u>
  to access the Link-Live Remote feature. Your
  AirCheck G3 must be claimed.
- 2. Navigate to the **Units** page at Link-Live.com.
- Select the AirCheck G3 you want to remote control from the list of claimed units.
- Click or tap the REMOTE icon at the top right of the page to open an embedded window containing the AirCheck G3 interface.
- If necessary, at the top of the window, enter the Password set in General Settings > Management > VNC on the AirCheck G3 unit.

To use the Link-Live website while your remote session is active, you must open a new Link-Live tab or window.

# Managing NetAlly App Settings

This topic explains how to reset, load, save, import, and export the test settings for individual NetAlly testing apps, such as AutoTest and Discovery.

For instructions on restoring factory defaults to the entire EtherScope unit, see Restoring AirCheck G3 Factory Defaults.

## **Resetting Testing App Defaults**

After you adjust settings in the NetAlly apps, you may need to reset an app's settings to the defaults. The following process resets all app-specific settings to the factory defaults.

**CAUTION:** This operation deletes all saved settings, including testing profiles and other application data.


The Discovery app is used as an example in the following steps:

 Access the App Info screen by long pressing (touch and hold) on an app's icon on the

#### Home or Apps screen.



### 2. Tap App info.

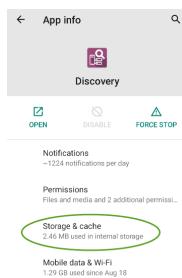


On the App info screen, select Storage & cache.

(You can also access the App Storage screen

from Device Settings > Storage > Internal shared storage > Other apps.)

On the Storage screen for the app you selected, tap CLEAR STORAGE.

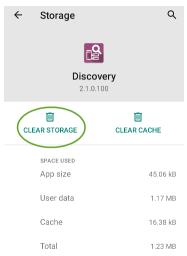

5. When a dialog prompts you to delete the data, tap **OK**.

All of the app's settings are reset to factory defaults.

# Saving App Settings and Configurations

Many of the NetAlly testing applications allow you to save and reload configured settings by selecting the save button that appears at the top right within the app's main screen.


The following apps enable you to save and load settings configurations:

- AutoTest, including Profile Groups
- Discovery
- Discovery Problem Settings
- iPerf
- Spectrum


The iPerf app is shown below as an example.




The following options display in a drop-down menu:

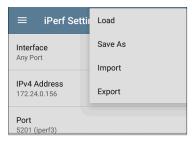

 Load: Open a previously saved and named settings configuration.

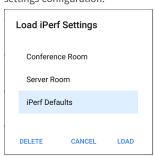

 Save As: Save the current settings with an existing name, or enter a new custom name.

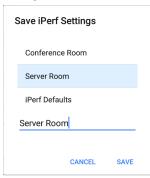

- Import: Import a previously exported settings file.
- Export: Create an export file of the current settings, and save it to internal or connected external storage.

See Exporting and Importing App Settings (below) for more details.

### Saving a Default Test App Configuration

If you find you are frequently resetting app defaults, you can save the default configuration of settings for later use within the NetAlly testing apps. Loading a saved default configuration within an app allows you to access the default settings without deleting other configurations. This strategy can be most useful for Discovery Settings and Problem Settings.

- Go to an app's settings screen.
- 2. With all settings set to the defaults, tap the save button and Save As.
- Save a default configuration with an obvious name like "Default Profiles" or "Discovery Defaults."
- Do not change the settings in your default configuration to non-defaults without also saving a new, custom-named configuration.

## **Exporting and Importing Settings**

AirCheck G3 provides functionality for exporting and importing saved test app settings for transfer to additional units.


The following apps enable you to import and export settings configurations:

- AutoTest Settings, including Profile Groups
- Discovery Settings
- Discovery > Problem Settings
- iPerf Settings

The AutoTest Settings are shown as an example in the images below.




 Tap the save button to import new app settings or export the currently active and selected app settings.

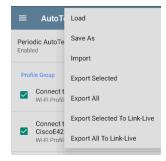


- Selected (checked) items in shared lists of configurations are the only ones exported when you choose Export Selected. This can include any checked items in submenus (such as AutoTest Test Targets or Community Strings in Discovery Settings). You can also select Export All to export all selected and unselected items.
- Unsaved configurations without a custom name are auto-named with the app name and date:



 Saved configurations are auto-named with the app name and custom settings name:

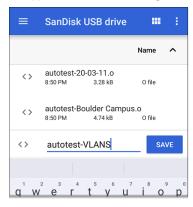

- You can rename the export file as needed.
- Settings can be saved to any connected external or internal storage. See Managing Files for instructions on accessing folders and moving files.
- Settings are saved with the .o file extension.

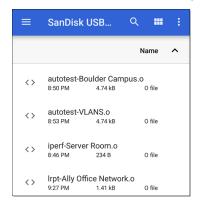

- Selecting Import from an app opens the Files app, where you can navigate to and select the .o file you want to import.
- Imported settings configurations overwrite existing saved configurations with the same name that are already in the app.

# Transferring AutoTest Settings to Other Devices Using Link-Live

You can use the Link-Live cloud service to transfer AutoTest settings with other AirCheck

#### G3 devices.

- Do some setup before you begin.
- Export the settings file(s) that you want to share to Link-Live.
- Use Link-Live to select other devices to which you want to transfer the settings.
- Use each selected unit to import the settings.


### Before You Begin

- Make sure that you have access to the following:
  - The device from which you will get the settings
  - b. A PC-based browser
  - c. The devices to which you will transfer the settings file
- Make sure that you have claimed and updated the software for all AirCheck G3 devices to which you want to transfer the settings. (You can use the Link-Live app or web site to do the claiming. See "Claiming the Unit" on page 602 for instructions.)

### Export the Settings File(s)

This procedure is done on the device from which you are transferring the settings.

- In the AutoTest app main page, tap the settings icon in the top right. This opens the list of profiles.
- If you plan to export only selected profiles, use the checkboxes to choose those profiles from the list.
- 3. Tap on the save icon in the top right to display the save menu options.

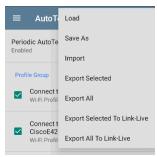

 Tap Export Selected To Link-Live (if you selected profiles) or Export All To Link-Live on the menu. This opens the save screen for Link-Live.



- (Optional) Edit the file name, add a comment, or add a job comment on the screen.
- Tap Export To Link-Live. This uploads the file to Link-Live.

#### Use Link-Live to Select Other Devices

This procedure is best performed on a PC-based browser.

- Use a PC-based browser to log in to the Link-Live web site.
- 2. Click the main menu icon
- 3. Click on **Settings** to open the settings menu.
- Select AirCheck G3 to list the .o settings files available for your devices.
- 5. Select the settings file you want to transfer.
- Follow the screen instructions to transfer the file to specific units or to all units that you have claimed.

### Use Each Selected Unit to Import the Settings

This procedure is performed on the device to which you want to apply the settings.

- 1. Wait for up to 30 seconds after the file was pushed from Link-Live.
- Swipe (touch and drag) downwards from the Status Bar at the very top of the home screen to display the Notification Panel.
- Locate the notification that says there are new AutoTest settings from Link-Live and lists the profile name.

:≚ AutoTest

New settings from Link-Live autotest-autotest trial.o

- Tap on that notification to open the AutoTest application.
- 5. Tap on the save icon in the top right.
- 6. Tap on Import and navigate to Downloads.

7. Select the downloaded .o file to apply the new profile settings.

# Resetting AirCheck G3 Factory Defaults

▲ CAUTION: Resetting your device to factory defaults can delete *all* test results, user-installed applications, testing app settings, and saved files.

- Make sure to back up any files you wish to keep before resetting.
- Open the system Device Settings by tapping the Settings icon at the bottom of the Home Screen.
- On the Settings screen, scroll down to and tap on the System section.
- 4. On the System screen, tap Reset options.



On the Reset options screen, select an option based on the defaults you want to reset. Your AirCheck G3 displays a list of the items that will be reset based on the option and a confirmation button.

**Reset Wi-Fi, mobile & Bluetooth:** resets all network settings for Wi-Fi (test and management), mobile data, and Bluetooth.

**Reset app preferences:** resets any preferences or settings for applications, although app data is not lost.

#### Erase all data (factory reset):

▲ CAUTION: Erases *all* user data from your tester's internal storage, including: system and app data and settings; downloaded apps; test profiles; credentials; packet information; and screen captures.

- Tap the confirmation button to begin the reset.
- Your unit may ask you to confirm a final time before resetting. If so, tap the final confirmation button to reset your AirCheck G3's defaults. The unit then restarts with the factory default settings you selected.
- 8. Data on removable drives is not included in the reset. To be thorough, you may also

want to use the <u>Files application</u> to delete any application settings, preferences, or other data that you have saved on a USB thumb drive. (Do not delete your backup files.)



# AirCheck G3 Testing Applications

This section of the User Guide describes the NetAlly-developed network testing apps. Each app is specially designed for fast analysis and intuitive operation to enhance and simplify your network tasks.

Open the testing apps by selecting their icons from the Home screen or the Apps screen.

AirCheck G3 User Guide



AutoTest is the most comprehensive NetAlly testing application on AirCheck G3. You can quickly run a variety of test types and save their configurations and network credentials for access whenever you need them. The app is fully customizable with test "Profiles" for Wi-Fi and wireless Air Quality network connections, as well as individual Test Targets

AutoTest establishes the Wi-Fi Test Port connections used by other testing apps, like Ping/TCP and Capture.

AutoTest results are automatically uploaded to Link-Live Cloud Service after you claim your AirCheck G3.

#### AutoTest Chapter Contents

This chapter describes AutoTest Profiles, screens, settings, and test results.

**AutoTest Overview** 

**Managing Profiles and Profile Groups** 

Main AutoTest Screen

Periodic AutoTest

Wi-Fi AutoTest Profiles


DHCP, DNS, and Gateway Tests

**Test Targets** 

#### AutoTest Overview

AutoTest consists of three distinct testing levels: Test Targets, Profiles, and Profile Groups. You can create as many Profile Groups, Profiles, and Test Targets as you need.

#### **Profile Groups**

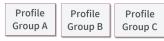

#### **Profiles**



#### **Test Targets**



At the bottom level is a set of individual **Test Targets** that connect to network services, such as a web app or FTP site. A Test Target defines parameters including type, target URL/IP address, port number, and Pass/Fail thresholds. More complex tests, like HTTP, allow further Pass/Fail criteria, such as strings that must or must not be contained in the HTTP body.

A Test Target can be added to and used in any number of **Profiles**.

A Profile contains a series of individual network tests. There are two Profile types: Wi-Fi and Air Quality. Wi-Fi Profiles include connection tests and credentials for a Wi-Fi network. Air Quality is a passive scan of your wireless environment. Profiles provide an automated and consistent way to verify a network from layer 1 through layer 7.

A Profile can be added to and used in any number of **Profile Groups**.

A **Profile Group** is a custom-named collection of Profiles. Profile Groups are designed to allow further automation for testing multiple networks or network elements with a single tap of the START button.

A Test Target can be in any number of Profiles, and a Profile can be in any number of Profile Groups.

For example, you can:

- Test multiple Wi-Fi SSIDs from a single location.
- · Test Wi-Fi access from a conference room.

# Managing Profiles and Profile Groups

Profiles are a series, or suite, of tests designed to analyze the different characteristics of your networks. The AirCheck G3 AutoTest app features two types of test profile:

Wi-Fi Profiles test wireless connections.

Air Quality Profiles measure channel utilization and interference.

### **Factory Default Profiles**

The AirCheck G3 begins with a default version of the AutoTest profile types, which you can customize, delete, or replace for your purposes.



To customize each Profile with the required network settings and a custom name, tap the

Profile name *first*, and then select the settings **to** icon.

NOTE: Tapping the settings icon on the main AutoTest screen (shown above) opens the AutoTest Settings and Profile Group screen, not the individual Profile settings.

The default Air Quality Profile runs when you tap START on the main AutoTest screen or the Air Quality screen.

For the default **Wi-Fi Profile** to run successfully, you must select an SSID and enter security credentials before the AirCheck G3 can connect to a network.



See Wi-Fi Profile Connection Settings.

# **Adding New Profiles**

To add new test profiles to the current AutoTest, tap the floating action button (FAB) on the AutoTest screen.



The profile's configuration screen appears after you select the type of profile you want to add. See the topic for each profile type for a description of its settings.

After you configure the profile settings, tap the back button at the bottom of the screen to open and run the new test profile.

#### Creating a Wi-Fi Profile from the Wi-Fi Analysis App

You can also create an AutoTest Wi-Fi Profile from the Wi-Fi Analysis app's SSID or BSSID Details screen. This is a quick and easy way to add a Profile to connect to a Wi-Fi network in your vicinity.

Open the Wi-Fi app 🔗 from the Home screen.

Tap the menu button to select the SSIDs or BSSIDs list screen.



Tap an SSID or BSSID's card to open its Details screen

Tap the FAB (floating action button)

to open the floating action menu.



In the floating action menu, tap Connect.

A Wi-Fi Profile called "Connect to [SSID/BSSID]" is created in AutoTest.

Profile 'Connect to Ntgear: 3c3786-719307' created.

Do you want to configure credentials now?

NO

YES

The SSID, BSSID (if applicable), and Authentication Type are auto-populated in the Wi-Fi Connection settings for the new profile.

Tap **YES** in the pop-up dialog to review and configure additional credentials.



Enter any additional credentials, like the network Password

After configuring, tap the back button to return to and run the new Profile.

#### Profile Groups


AirCheck G3 also allows you to save Profile Groups. Profile Groups are simply the included list of test Profiles and the order in which they run when you start an AutoTest. (See AutoTest Overview for more explanation of Profile Groups.) You can configure and select Profiles and Profile Groups for different locations, jobs, networks, or other purposes.

To manage your Profiles and Profile Groups, tap the Settings to button on the main AutoTest screen (with the list of Profiles).



#### **AutoTest Settings Screen**

The AutoTest Settings screen contains the Periodic AutoTest and Profile Group settings.

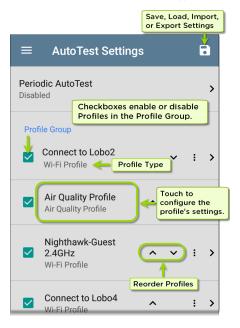

You can perform these actions on the AutoTest Settings screen:

- Check or uncheck the boxes to include or exclude a test Profile from the currently active Profile Group.
- Tap the up and down arrows to reorder the test Profiles on this and the main AutoTest screen for the Profile Group.
- Tap the action overflow icon to Duplicate or Delete a Profile.
  - CAUTION: When you delete a Profile, it is deleted from all Profile Groups. To remove a Profile from the current group, simply uncheck it.
- Tap any Profile's name to open the test and connection settings for the Profile.
- Tap the save icon to perform the following actions:
  - Load: Open a previously saved settings configuration, which includes the Profile Group.
  - Save As: Save the current settings and Profile Group with an existing name or a new custom name.

See also Saving App Settings Configurations.

- Import: Import a previously exported settings file.
- Export: Create an export file of the current settings, and save it to internal or connected external storage.


See Exporting and Importing App Settings for more details.

Each Profile Group can run one or many of the three Profiles types. Your saved Profiles are available across all of your Profile Groups.


# Custom AutoTest Settings/Profile Group Names

By default, the AutoTest app screen shows "AutoTest" in the header, and the AutoTest Settings screen header is "AutoTest Settings." Once you save a custom name, the name displays in the AutoTest app header and in the AutoTest Settings screen header.

In the example below, the user saves a custom AutoTest configuration named "Springs Campus."

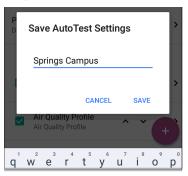


The main AutoTest app screen now displays the custom name in the header.

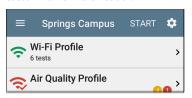


#### **Creating New Profile Groups**

To create a new Profile Group, follow these steps:

- Go to the AutoTest Settings and Profile Group screen by tapping on the main AutoTest screen.
- Uncheck the boxes for any Profiles you do not want included in the new Profile Group.
- 3. Tap the FAB to add new test Profiles to be included in your new Profile Group.
- Tap the up and down arrows to change the order in which the test Profiles run. Unchecked profiles automatically move to the bottom of the list once you leave and revisit this screen.
- 5. Tap , and select Save As. A dialog box opens, where you can enter the new name.

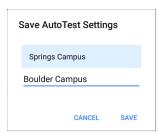

 Enter a new Profile Group name, and tap SAVE. The AirCheck G3 returns to the Profile Group screen with the new group name shown as the title.

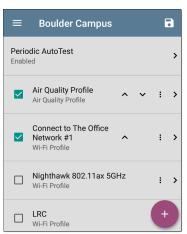

When running the "Boulder Campus" configuration shown above, AutoTest first scans the wireless channels for Air Quality results, then connects to "The Office Network #1", and remains connected to that network. This Profile Group will not connect to or test the "Nighthawk..." or "LRC" networks.

# Importing and Exporting AutoTest Profiles


In addition to creating new profiles or using defaults, you can also:

- Import and export profile settings to any connected external or internal storage. See "Exporting and Importing Settings" on page 133.
- Use the Link-Live cloud service to transfer profile settings to other devices in near-real time. See "Transferring AutoTest Settings to Other Devices Using Link-Live" on page 137.

#### Main AutoTest Screen

To open the AutoTest app, tap the AutoTest icon i on the Home screen.

Tap the START button on the main AutoTest screen to run all the Profiles in the currently active Profile Group.

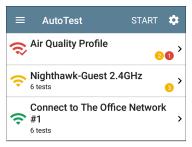

The AutoTest screens display icons that correspond to the type of profile, test, or measurement. After running, these icons change color to indicate the status of the test:

- Green indicates a successful test or measurement within the set threshold.
- Yellow indicates a Warning condition.

• Red indicates test Failure.

The number of warnings or failures within each test profile is also displayed in a colored circle to the right of each profile card: ② ① (2 Warnings, 1 Failure). The thresholds that control the colored test gradings are adjustable in the settings of screens for each profile and test type.

The green link icon indicates an active network connection.

Each profile and test is summarized on a card. Tap a profile's or individual test's card to open and view test result details, including the causes of any Warnings or Failures.

#### Periodic AutoTest


The Periodic AutoTest feature allows you to run AutoTests at set time intervals.

### **Periodic AutoTest Settings**

To enable and configure Periodic AutoTest, open the AutoTest Settings and Profile Group screen, and tap Periodic AutoTest.



The Periodic AutoTest settings screen displays.

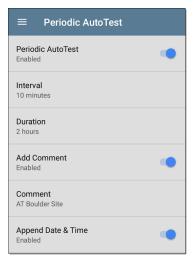

Tap the **Periodic AutoTest** field to enable, and adjust the settings below as needed.

Interval: Amount of time between each AutoTest

**Duration**: Total length of time Periodic AutoTests run

Add Comment: Enabling this setting allows you to attach a comment to the Periodic AutoTest result in Link-Live Cloud Service. The comment appears as a label on the Link-Live.com Results page. This setting and the Comment setting below are enabled by default.

Comment: This field appears if the Add
Comment setting is enabled. Enter the label you
want to be attached to the uploaded Periodic
AutoTest result on Link-Live. The default is
"Periodic AutoTest"

Append Date & Time: This field appears if the Add Comment setting is enabled and adds a numeric date and time to the end of the Comment above.

### Running Periodic AutoTest

Tap **START** on the main AutoTest screen to begin Periodic AutoTests. AutoTests continues to run at the set Interval for the selected Duration or until you tap **STOP** in AutoTest.



The Periodic AutoTest Status is summarized at the bottom of the AutoTest screens. Passes and failures are reported for each run of the entire Profile Group, rather than individual Profiles. Periodic AutoTests are skipped if the previous interval's test is still running when the next time interval occurs, such that the next run could not start.

The Periodic AutoTest icon appears in the top Status Bar when Periodic AutoTest is running or has completed. Drag down on the

Status Bar to view the corresponding notification.

Passed: 3

Failed: 2

Skipped: 1

Time Remaining: 54 m

NOTE: AutoTest has priority control of the Test Ports, so other apps, including Discovery, Wi-Fi, Wi-Fi Capture, and AirMapper, are paused while AutoTest completes.



# Wi-Fi AutoTest Profiles

A Wi-Fi Profile runs a series of tests by connecting to a selected wireless network.



Like the main AutoTest screen, Wi-Fi Profile tests are summarized on cards. Tap a card to view individual test screens.

Each test icon (except the AP) displays green, yellow, or red to indicate the status (or grade) of the completed test step: Success/Warning/Fail. The AP Test card shows the name and SSID of the connected AP. The AP test is not graded, so the icon stays black.

Wi-Fi Profiles do not run automatically. The factory default Wi-Fi Profile cannot run until you have configured an SSID with the proper credentials. (By default, AutoTest starts in Wi-Fi passive scanning mode if you do not have a profile set up.)



See the Wi-Fi Profile Settings topic for instructions


After connecting to a network during a Wi-Fi connection test, AirCheck G3 remains connected until you run another Wi-Fi or Air Quality Profile or open the Wi-Fi app. Wi-Fi Test Port linkage is

indicated in the top Status Bar with this notification icon,  $\frac{7}{48}$ , which also shows the

NOTE: When running an AutoTest Profile that connects to a network with a Captive Portal, a system notification icon appears in the top Status Bar. Open and select the notification to open a web browser window where you can enter the required information for the captive portal.

#### Wi-Fi-Profile-Specific AutoTests

The tests that are specific to a Wi-Fi Profile include the wireless Link, Channel, and AP tests.

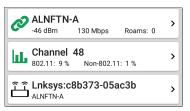

The link and channel cards update in real time to display the connection measurements for as

long as AirCheck G3 remains connected to the wireless network.

Link (Connection), Channel, and AP Results are described next.

Skip to Wi-Fi Profile Settings.

Skip to DHCP, DNS, and Gateway Tests.

Skip to Test Targets.

#### Wi-Fi Profile Test Results

The image below shows a completed AutoTest Wi-Fi Profile.




This Profile connects to SSID "The Office Network #1." The Profile is displaying one Warning condition from a timeout of the second Gateway ping.

On the Wi-Fi Profile screens, you can perform these actions:

- From any individual test screen, tap the settings icon to go directly to the settings for the current test.
- On individual test screens, tap <u>blue underlined links</u> to open a Wi-Fi app Details screen showing the selected device or ID.
- Tap other BLUE LINKS or the action overflow icon ... at the bottom of test results screens for additional actions

NOTE: Blue links and action icons do not appear on every test screen, and if the network connection is dropped, you may need to rerun the Profile to re-establish link and enable additional actions.

The rest of this topic describes the individual test cards and screens using the Wi-Fi Profile results for the "LRG" SSID shown below.

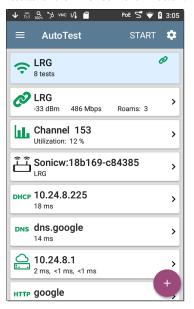

# Wi-Fi Link Test Results




The Wi-Fi link test card indicates whether you can connect to the configured network at your current location. The Wi-Fi Link card displays the SSID, current signal strength (dBm), link speed (Mbps), and number of roams.

Refer to Wi-Fi Connection Settings if needed.

Tap the card to open the Link test screen.

### Wi-Fi Link Test Screen

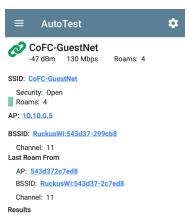

The Wi-Fi Link test screen shows these results:

#### SSID

Signal (dBm)

**Security**: Security protocol in use on the network

**Roams**: Number of times the unit has disconnected from the previous AP and

connected to a different AP with a better signal strength. This behavior is partly controlled by the **Roam Threshold** in the Wi-Fi Connection settings.

AP: Name, IP, or MAC address of the AP to which the Tester is connected, depending on the information AirCheck G3 can see about the AP. This field shows the custom User Name if one has been entered. See Assigning a Name and Authorization to a Device in the Wi-Fi app chapter.

BSSID: BSSID of the access point

**Channel**: Channel number on which the AP is operating

Last Roam From: If the AirCheck G3 has roamed to a new AP, the previous AP's name, BSSID, and Channel display.


AP: Channel number on which the AP is operating

BSSID: BSSID of the access point

**Channel**: Channel number on which the AP is operating

### Wi-Fi Link Trending Graphs

AirCheck G3's trending graphs operate similarly across different testing apps, allowing you to pan and zoom to view different time intervals. Swipe, double tap, and move the slider to adjust the graph views. See the Trending Graphs topic for an overview of the controls.

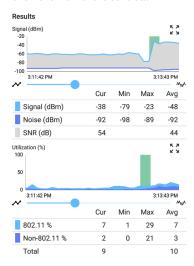


The Wi-Fi Link Test graphs save and display data for up to 24 hours in the past if the unit stays linked. The default time interval shown is 2 minutes.

Under each graph, a legend table displays the Current, Minimum, Maximum, and Average measurements. The Current column contains measurements from the last second. Min, Max, and Avg columns show cumulative measurements.

**Signal (dBm) graph**: Plots the signal strength in dBm of the connected AP.

- Green vertical bars The tester roamed to a new AP.
- Signal The AP's signal strength in dBm.
- Noise The noise level in dBm on the channel used.
- SNR The network's signal-to-noise ratio in decibels (dB).

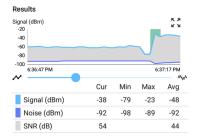


**Utilization** (%) **graph**: Plots percentage of the connected channel's capacity being used by 802.11 devices and by non-802.11 interference.


 Green vertical bars - The tester roamed to a new AP.

Retries (% of packets) graph: Plots percentage of transmitted packets that are retry packets


- Retry Rate % The percentage of total packets that are retry packets.
- Retry Pkts The number of retry packets seen in the current sample cycle.
- Total Pkts The total number of packets transmitted in the current sample cycle.

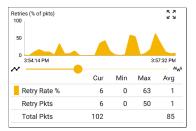

PHY TX Rate (Mbps) graph: Plots the physical transmission rate. The green horizontal dotted line shows the AP's maximum TX rate.

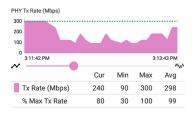

Ping or TCP Connect Response Time graph: This graph displays on the Link test screen if you run a Ping or TCP Connect test, using the

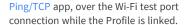



Follow these steps to view the Response Time graph:

- Tap the blue PING hyperlink at the bottom of the Link test screen. This opens the Ping/TCP app with the Interface set to Wi-Fi Port and Protocol set to Ping.
- Access and adjust the Ping/TCP settings as desired.
- 3. START the Ping or TCP Connect test.
- Tap back to go back to the AutoTest Wi-Fi Link screen. The Response Time graph appears near the bottom of the screen and

updates in real time along with the other graphs for the duration of the Ping/TCP test.

**Result Codes:** Final status of the test (Success or Failure)

Tap the blue links at the bottom of the link test screen to open the Ping/TCP app, view the CONNECT LOG, or run a Wi-Fi packet CAPTURE on the connected channel and AP.

### **Connect Log**

≡ Con	nect Log :
4:52:26.734 PM	Wireless: SSID LRG
4:52:27.100 PM	WPA2 Personal
4:52:29.892 PM	Link Down
4:52:29.892 PM	Connecting to AP: 18:b1:69:c8:43:8d Chan 1
4:52:29.893 PM	Send Open Authentication Request
4:52:30.317 PM	Authentication Timeout
4:52:30.319 PM	Connecting to AP: 18:b1:69:c8:43:8d Chan 1
4:52:30.319 PM	Send Open Authentication Request
4:52:30.320 PM	Receive Open Authentication Success
4:52:30.320 PM	Send Association Request
4:52:30.320 PM	Wireless: WPA2 Info Element: Mcast=([4] AES-CCMP) Ucast=([4] AES-CCMP) Auth=([2] PSK)
4:52:30.321 PM	Receive Association Success

The Connect Log shows the Wi-Fi connections, including driver activity, supplicant, and the DHCP process. The Connect Log can be especially helpful for identifying linking or roaming problems.

Select the action overflow icon at the top right on the Connect Log screen to attach the log to its associated AutoTest result on the Link-Live website, or attach the Connect Log from the floating action menu on the main Profile screen. See Wi-Fi Profile FAB below.


# ■ Channel Test Results



The Channel card shows the channel on which the AP is operating and the current 802.11 and Non-802.11 utilization.

Refer to Channel Test Settings if needed.

### **Channel Test Screen**

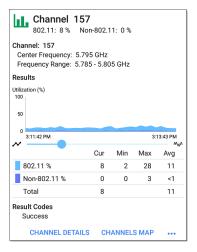

The Channel Test results screen indicates the Center Frequency and Frequency Range of the connected channel along with a real-time Utilization graph.

Results: The channel Utilization (%) graph updates in real time for as long as the unit is still

connected to the network. The graph saves and displays data for up to 24 hours if the unit stays linked.

To pan and zoom on the graphs, you can swipe, double tap, and move the slider. See the Trending Graphs topic for an overview of the graph controls.

**Utilization (%) graph**: Plots percentage of the connected channel's capacity being used by 802.11 devices and by non-802.11 interference

- **802.11** %: Percentage of channel capacity being used by 802.11 devices
- Non-802.11 %: Percentage of channel capacity being used by non-802.11 interference
- Total: Total percentage of both 802.11 and non-802.11 channel utilization

**Results Codes**: Final status of the test (Success or Failure)

Tap the blue links at the bottom of the channel test results to open the Wi-Fi app's CHANNEL DETAILS or CHANNELS MAP screens, or to run a

Wi-Fi packet **CAPTURE** on the connected channel.

# 🖺 AP (Access Point) Test



The AP card shows the AP's name and the SSID of the network it is supporting. The AP name or address shown is based on what the AirCheck G3 is able to gather from the device and network. If the AP has a custom user name, that name is shown on the card and test screen.

The AP test is not graded, so the icon remains black

### **AP Test Screen**



In addition to the AP name and SSID, the AP test screen shows the following:

Device Name: AP's name or address

**IP Address:** The AP's assigned IP address. If none could be determined, the field displays dashes --.

MAC Address: The AP's MAC address.

**SSID:** Name of the network on which the AP is operating

**Security**: Security protocol in use on the network

**Roams**: Number of times the unit has roamed and connected to a different AP

#### 802.11

Channel(s): Channel or channels the AP is operating on. If the BSSID is on multiple channels, the **bold** channel number indicates the primary channel.

Type: 802.11 type in use on the current link

**Supported Types**: 802.11 types that the BSSID supports. If none could be determined, the field displays dashes --.

**Client Associations**: The number of client devices connected to the AP

Tap the blue links at the bottom of the link test screen to view the **CONNECT LOG** or run a **PATH ANALYSIS** to the AP.

Open the overflow menu ••• for additional actions, such as to run a Wi-Fi packet CAPTURE

on the connected channel and AP, or start a Telnet or SSH session using the AP's IP address.

## DHCP, DNS, and Gateway Results

See DHCP, DNS, and Gateway Tests.

## PING FTP Target Tests

See the Test Targets topic for information on target test results.

### Wi-Fi Profile FAB

The floating action button (FAB) on the Wi-Fi Profile AutoTest Profile screens allows you to attach comments, an image, and the Connect Log to this AutoTest result on the Link-Live website.




- The Test Targets option opens the Test
  Targets screen, where you can add Ping, TCP
  Connect, HTTP, and FTP target tests to the
  current profile.
- Add Connection Log opens a Link-Live sharing screen that allows you to custom name the log file before saving to the test result.



Tap the field to enter your desired log name, and tap **SAVE TO TEST RESULT** to upload.

 Add Comments also opens a Link-Live sharing screen where you can enter comments.

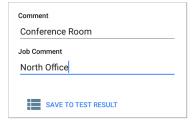

Tap the fields to enter your desired comments, and tap SAVE TO LAST TEST RESULT to upload them.

See the Link-Live App chapter to learn about Link-Live and uploading.


# Wi-Fi Profile Settings

These settings control which network is tested, how the AirCheck G3 connects, thresholds for Success/Warning/Fail results, and any useradded test targets.

To configure the profile settings, tap the settings icon on the Wi-Fi Profile screen, or add a new Wi-Fi Profile to AutoTest.

Tap the links below to skip to later sections in this topic:

- Wi-Fi Connection Settings
- Certificates
- Advanced Wi-Fi Connection Settings
- Channel Test Settings

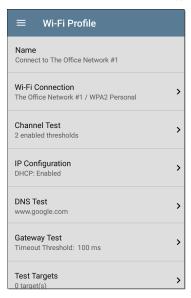

On the **Wi-Fi Profile** settings screen, tap each field described below as needed to configure the profile. Changed settings are automatically applied.

NOTE: If you add a new Wi-Fi profile from the Wi-Fi Analysis app, the Profile Name, SSID, and Authentication type are auto-populated. See Creating a Wi-Fi Profile from the Wi-Fi Analysis App.


When you finish configuring, tap the back button to return to the profile.

### Name

Tap the **Name** field to enter a custom name for the profile. This name appears on the main AutoTest screen profile card and the Wi-Fi profile screen header.

# Wi-Fi Connection Settings

Open Wi-Fi Connection settings to configure network IDs, security credentials, and test thresholds for the Link 2 test. These settings control the Wi-Fi Test Port connection.

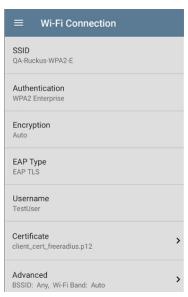

### **SSID**

Tap to enter an **SSID** or select from the list of discovered SSIDs. If you do not enter a custom

Name for the Profile, the SSID is displayed as the Wi-Fi Profile's name.

### Authentication

If you selected an SSID from the drop-down list of discovered SSIDs in the setting above, or created a "Connect to [SSID]" profile from the Wi-Fi app, the Authentication type is automatically selected. If needed, tap to open the Authentication dialog and select the correct security type for the network.

The following settings depend on the Authentication type. Enter all necessary credentials for the network security type, such as Encryption, Keys, EAP type, username, certificate, and/or password.

### **WEP Key**

This setting appears if the Authentication type is WEP Shared or WEP Auto. Tap to select the correct key type (ASCII or Hex) and enter the key.

## Encryption

Tap to select an encryption type if needed. The default is "Auto."

## EAP Type

This setting appears if the Authentication type is WPA/WPA2/WPA3 Enterprise. The default is PEAP MSCHAP V2. Tap to select a different EAP type if needed.


### Username

This field appears along with multiple authentication types. Tap the **Username** field to enter your username.

### Certificate

This setting appears if you selected one of the following EAP types: EAP TLS, PEAP TLS, or TTLS EAP TLS.

Tap to open the Certificates screen.

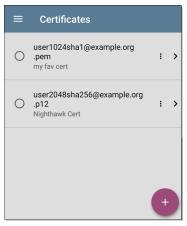

This screen displays all the certificates that have been imported to AutoTest via the Wi-Fi Profile settings.

- Tap the radio button to the left of an imported certificate to select and use it with the current Profile.
- Tap a certificate's row to edit its name and description.

- Tap the action overflow icon to **Delete** an imported Certificate.
- Tap the floating action button (FAB) to import a new certificate file.

AirCheck G3 supports these certificate file extensions:

- .pem
- · .p12
- .cer
- crt

The imported certificate feature is meant for client authentication and must include the private key. The AirCheck G3 supports 1-way client authentication only; mutual authentication, Server, and CA/Root certificates are not supported. While AirCheck G3 can perform a key exchange, it does not authenticate the server certificate.

Tap here to skip the following "How to" section and go to Advanced Wi-Fi Connection Settings.

### How to Import a Certificate:

Certificate files can be imported from either an inserted storage device (USB) or the AirCheck

### G3's internal file system.


- Make the certificate file available on your AirCheck G3 unit by saving it to a USB drive inserted into your unit or by transferring to the file system using a USB-C cable or email. (See Managing Files for help.)
- To run an <u>AutoTest Wi-Fi Profile</u> using certificate authentication, set up the profile with the following settings:
  - a. Authentication: WPA/WPA2/WPA3 Enterprise
  - b. Encryption: Auto
  - c. EAP Type: EAP TLS, PEAP TLS, or TTLS
    EAP TLS
- In AutoTest > Wi-Fi Connection settings, tap the Certificate setting to open the Certificates screen.



4. Tap the floating action button (FAB) • to open the Import Certificate dialog box.



Tap Click to select beneath the Certificate field to open the Files app.

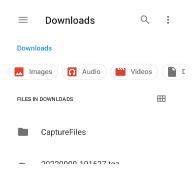

 In the Files app, navigate to the folder or storage device where your certificate file is saved. Tap the menu button 

 to open the left-side navigation drawer and access the storage devices.



In the image above, the user is navigating to a USB flash drive.

7. Navigate to the required certificate file, and tap to select it.



After you select the file, the Files app closes, and the Import Certificate dialog displays the chosen certificate file.

- 8. Enter the certificate's password if it is password protected.
- 9. Tap IMPORT.
- If desired, tap the fields to edit the Name and Description of the certificate. The name defaults to the certificate file name.
- Tap the back button to return to the Certificates list screen. The newly added certificate appears selected in the list.
- Tap the back button to return to the Connection settings.

After running the AutoTest, you can review the Connect Log from the Wi-Fi Link Test screen to verify or troubleshoot certificate authentication.


### Username

This field appears along with multiple authentication types. Tap the **Username** field to enter your username.

#### **Password**

This field appears along with multiple security types. Tap the **Password** field to enter the network password.

# Advanced (Wi-Fi Connection) Settings

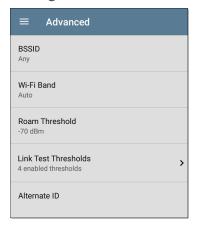

#### **BSSID**

Enter or select a specific BSSID for the Wi-Fi Profile to prevent the AirCheck G3 from roaming to a new AP while linked.

#### Wi-Fi Band


Tap this setting to specify the wireless band(s) on which the Wi-Fi Profile attempts to connect. The default setting of Auto allows the unit to connect on any band. Note that the Profile fails to link if this setting conflicts with the selected bands in General Settings.

#### **Roam Threshold**

This threshold controls the Signal Strength (in dBm) at which AirCheck G3 stays connected and looks for another AP on the network with a stronger signal. If found, it disconnects from the current AP and connect to the AP with a stronger signal. Tap the field to select a new value or enter a custom one

#### Link Test Thresholds

Open the Link Test Thresholds screen to adjust the values that determine Success/Warning/Fail results for the following measurements.

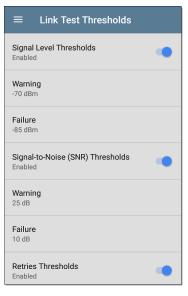

Tap each field to select a new value or enter a custom one. Each threshold also has a toggle button that allows you to disable grading based on that measurement entirely.

Signal Level Thresholds: Measured signal from the AP

Signal-to-Noise (SNR) Thresholds: Ratio of measured AP signal to noise level detected on the channel

Retries Thresholds: Retry frames as a percentage of total transmitted frames


**Transmit Rate (TX) Thresholds**: Measured rate as a percentage of the AP's maximum throughput rate

#### Alternate ID

Enter an Alternate ID if necessary. This is an Advanced Authentication setting.

# ■ Channel Test Settings

Open **Channel Test** settings to configure Utilization thresholds for the channel test portion of the Wi-Fi profile.

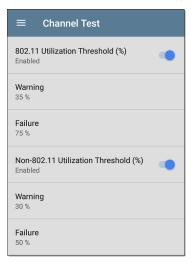

### 802.11 Utilization Threshold (%)

This threshold controls the Success/Warning/Fail gradings for the percentage of the connected channel's capacity being used by 802.11 devices.

- Tap the toggle button to enable or disable test grading based on 802.11 utilization.
- Tap Warning or Failure to select or enter custom percentage values for Warning or Failure results.

## Non-802.11 Utilization Threshold (%)

This threshold controls the Success/Warning/Fail gradings for the percentage of the connected channel's capacity being used by non-802.11 interference.

- Tap the toggle button to enable or disable test grading based on non-802.11 utilization.
- Tap Warning or Failure to select or enter custom percentage values for Warning or Failure results.

# **DHCP, DNS, and Gateway Settings**

See DHCP, DNS, and Gateway Tests

# PING FTP Test Targets

Tap the **Test Targets** field to open the Test Targets screen and add custom **Ping**, **TCP** 

**Connect**, **HTTP**, or **FTP Tests** to your AutoTest profile. See Test Targets to learn more.

# HTTP Proxy

The Proxy control lets you specify a proxy server through which the AirCheck G3 establishes a network connection. In AutoTest, these settings are used when HTTP Proxy is enabled in an HTTP or FTP Test Target.

To use the proxy settings with a web browser, run the Profile, and then, open the web browser while the unit remains linked.

Open the **HTTP Proxy** screen to enable proxy settings.



Tap each field to open a pop-up keyboard and enter the appropriate Address, Port, Username, and Password. Tap OK to save your entries.

# DHCP, DNS, and Gateway Tests



These tests are included in the Wi-Fi AutoTest Profiles, and the settings and results fields are the same for each Profile type.

Access AutoTest's DHCP, DNS, and Gateway settings from Wi-Fi Profile settings screens, or by tapping the settings button of the full results screen for each test type.

Tap blue links or the blue action overflow icon on the test results screens for additional actions.

#### **DHCP or Static IP Test**

The DHCP (Dynamic Host Configuration Protocol) test indicates whether the AirCheck G3 receives an IP address assignment from the DHCP server.

## **DHCP Settings – IP Configuration**

Access the DHCP test settings from the Wi-Fi Profile settings or by tapping the settings button on the DHCP test results screen.



By default, DHCP is enabled. On the IP Configuration screen, you can adjust the DHCP Response Time Threshold or configure a Static IP Address.

#### DHCP

DHCP is enabled by default. Tap the toggle button to disable DHCP and enter static IP addresses.

## (DHCP only) Response Time Threshold

This field only appears if DHCP is enabled. The Response Time Threshold controls how long the AirCheck G3 waits for a DHCP server response before failing the Link and DHCP tests.

#### Static IP Address



The Static IP address fields for **Subnet Mask, Default Gateway**, and **Primary** and **Secondary DNS Servers** only appear if DHCP is disabled. Tap each field to open a pop-up number pad and enter the static addresses as needed. Tap **OK** to save your entries.

#### **DHCP Test Results**

When DHCP is enabled, the DHCP test card and results screen are displayed in the Profile.



The DHCP Test card displays the DHCP server's IP address and the total time for the discover, offer, request, and acknowledgment to complete.

Tap the card to open the DHCP test screen.

NOTE: If a **User-Defined MAC** is enabled for this connection in **General Settings**, (Userdefined) appears next to the MAC address beneath the DHCP IP address on results screen.



#### **DHCP Test Results Screen**



**Device Name:** The discovered name of the DHCP Server, or, if no name could be discovered, the IP address

IPv4 Address: IP address of the server

MAC Address: Server's MAC address. Two dashes -- indicate that no MAC address was provided from the server.

#### Results

Offered: IP address offered by the DHCP server

Accepted: IP address accepted by the AirCheck G3

**Subnet Mask**: Used to determine which addresses are local and which must be reached via a gateway

**Subnet**: Combination of the subnet mask and the offered IP address


Lease Time: The amount of time the IP address is leased to the AirCheck G3 by the DHCP server

**Expires:** Expiration date and time of the IP address

Relay Agent: If a BOOTP DHCP relay agent is present, this field shows its IP address. The relay agent relays DHCP messages between

DHCP clients and DHCP servers on different IP networks.

End User Response Time table and chart: Breakdown of the times for the process of acquiring a DHCP IP address

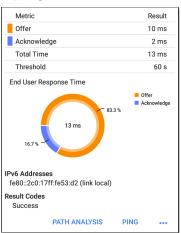

Offer: Time between when the AirCheck G3 sent the discovery and received an address offer from the DHCP server

Acknowledge: Time between AirCheck G3 sending the request and receiving the acknowledgment from the DHCP server


**Total Time**: Total amount of time consumed by the DHCP process

Threshold: The DHCP Response Time
Threshold from the DHCP test settings, which
controls how long the AirCheck G3 waits for a
DHCP server response before failing the
DHCP test.

**End User Response Time**: A pie chart showing the Offer and Acknowledgment times as percentages

IPv6 Addresses: Addresses obtained via router advertisement

**Results Codes:** Final status of the test (Success or Failure)

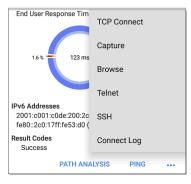

The additional actions available on the DHCP test screen include opening the Path Analysis, Ping/TCP, or Capture apps populated with the DHCP server address, browsing to the IPv4 address in the web browser, starting a Telnet or SSH session, or viewing the Connect Log.


#### Static IP Test Results

If DHCP is disabled, the DHCP test becomes a "Static IP" test and the Subnet and addresses that were entered in the DHCP test settings are displayed.

```
Static 192.65.49.18
IP Subnet: 192.65.49.0/24
```

The Static IP card displays the configured IP and Subnet addresses.

Tap the card to open the test results screen.

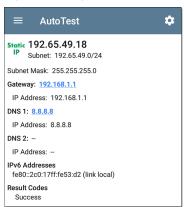

The Static IP test screen displays the configured addresses.

**Subnet:** Combination of the subnet mask and the offered IP address

**Subnet Mask**: Used to determine which addresses are local and which must be reached via a gateway

**Gateway**: Resolved hostname of the Gateway or its IP address if no name could be discovered

IP Address: IP address of the Gateway

**DNS (1 and 2)**: Names and IP addresses of Primary and Secondary DNS servers

IPv6 Addresses: Addresses obtained via router advertisement

**Results Codes**: Final status of the test (Success or Failure)

# **Duplicate IP Address**

The DHCP and Static IP tests also detect and report the presence of a device using the same IP address (duplicate IP). If the configured address is in use, the AutoTest fails.

IP Address In Use By: BRW2C6FC94A974E

MAC Address: HonHai:2c6fc9-4a974e

IPv6 Addresses

fe80::2c0:17ff:fe53:d2 (link local)

**Result Codes** 

IP address already in use (11)

IP Address In Use By: Shows the name of the device currently using the configured static IP address. Tap the blue underlined link to open a Discovery Details screen for the device.

MAC Address: MAC of the device using the IP address

#### **DNS Test**

For overview information, see DHCP, DNS, and Gateway Tests.

The DNS (Domain Name System) server test checks the performance of DNS servers resolving the specified URL. The AirCheck G3 obtains DNS addresses through DHCP or static address configuration.

# **DNS Test Settings**



#### **DNS Test**

If desired, you can tap the top field on the DNS Settings screen and switch the toggle to disable the DNS test in your current AutoTest. When this setting is disabled, the DNS card does not appear on the main AutoTest results screen, and the following settings are hidden.

#### **Lookup Name**

This is the URL the DNS server(s) attempts to resolve. Tap the field to enter a URL other than the default: www.google.com.

#### IP Protocol Version

Tap the field to switch between IPv4 and IPv6.

#### Lookup Time Threshold

This threshold controls how long the AirCheck G3 waits for a response from the DNS server(s) before the test is failed. The default is 1 second. Tap the field to select or enter a new threshold.

#### **DNS Test Results**

The server name and lookup time for DNS 1 are shown on the DNS test card.

```
DNS dns.google
16 ms
```

Tap the card to open the DNS test results screen.

#### **DNS Test Results Screen**



**Lookup Name**: Name resolved by the DNS servers

Threshold: Lookup Time Threshold from the DNS test settings

DNS #: Name of the listed DNS server

Lookup IP: Resolved IP address

Lookup Time: Time to receive the IP address

after the lookup request sent

Results Codes: Final status of the test (Success or Failure) for each DNS server



Tap blue links or the blue action overflow icon at the bottom of the test results screens to run the DNS Test Again, open another app populated with the name and IP address of DNS 1, or Browse to the Primary DNS server in your web browser.



For overview information, see DHCP, DNS, and Gateway Tests.

This test indicates whether the default Gateway could be successfully pinged and identifies the address of the current IPv4 and IPv6 routers.

# **Gateway Test Settings**



#### **Gateway Test**

If desired, you can tap the top field on the Gateway Test screen and switch the toggle to disable the Gateway test in your current AutoTest. When this setting is disabled, the Gateway card does not appear on the main AutoTest results screen, and the following setting is hidden.

#### Timeout Threshold

The only other setting for the Gateway Test is the timeout threshold, which indicates how long the AirCheck G3 waits for a response from the gateway before grading the test as a fail. Tap the field to select one of the value options, or enter a custom value.

#### **Gateway Test Results**

AirCheck G3 gets the Gateway's IP address from DHCP or the static IP configuration, and uses SNMP to acquire system group information and statistics for the port that services the AirCheck G3's subnet. See Discovery Settings for information about SNMP configuration.



The Gateway test card shows the gateway's IP address and the three Ping response times.

#### **Gateway Test Results Screen**



IPv4 Gateway Name: Resolved hostname of the Gateway or its IP address if no name could be discovered

IPv4 Address: Internal IPv4 address of the Gateway

MAC Address: Server's MAC address. Two dashes -- indicate that no MAC address was provided from the server.

IPv6 Address: Router's IPv6 address (if available)

IPv6 Gateway Name: Name advertised by the IPv6 router (if available)

**Protocols**: Routing protocols the AirCheck G3 used to obtain the Gateway data

#### **Ping Results**

- Response Times from the three Pings sent to the gateway
- Threshold: Gateway Timeout Threshold configured in the gateway settings

**Results Codes:** Final status of the test (Success or Failure) for each of the three Gateway Pings



Tap blue links or the blue action overflow icon
••• at the bottom of the test results screens to
run the Gateway TEST AGAIN, open another app,
Browse to the Gateway's IPv4 Address, or start a
Telnet or SSH session to the Gateway.

# Test Targets for Wi-Fi AutoTests



AutoTest

Target tests are user-assignable endpoints to which AirCheck G3 attempts to connect each time the AutoTest profile runs. These tests ensure availability of internal or external websites, servers, and devices to users of your network

Tap a link below to go to the test's topic:

Ping

**TCP Connect** 

HTTP

FTP


# Adding and Managing Test Targets

To add test targets to AutoTest profiles and manage your saved targets, open the **Test Targets** screen from the Wi-Fi Profile Settings
or by tapping the FAB on the Wi-Fi Profile

results screens




The Test Targets screen lists all of the defined and saved Test Targets. Checked boxes indicate the Test Targets that are enabled in the current Profile. Remember, Test Targets can be added to and used in any number of Wi-Fi Profiles.

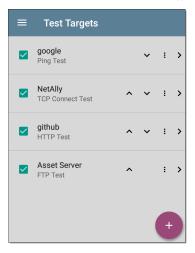

On the Test Targets screen, you can perform these actions:

- Select the checkboxes for each Target you want to include in the current profile.
- Tap the up and down arrows to reorder the saved Test Targets on this screen and the main AutoTest Profile screen.

- Tap the action overflow icon to Duplicate or Delete a target test.
  - **CAUTION**: When you delete a Test Target, you delete it from all Profiles. To remove a Test Target from the current profile, simply uncheck it.
- Tap the FAB icon to add a new target test: Ping, TCP Connect, HTTP, or FTP.

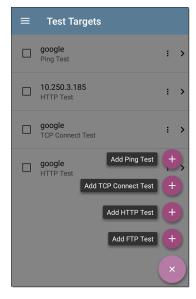

 Tap any target's name, or add a new target, to open the test's settings, where you can enter a custom test name, target address, and thresholds.

## **Target Test Results Screens**

The Target Test type icons display green, yellow, or red to indicate the status (or grade) of the completed test portions: Success/Warning/Fail.

As an example, in the Ping test image below, the entire Ping test is graded with a Warning because the third Ping was not returned within the Timeout Threshold configured in the settings.

```
PING GOOGIE
9 ms, 33 ms, -

Device Name: 172.217.1.196

IPv4 Address: 172.217.1.196

MAC Address: -

Results
Lookup Time: 3 ms
Response Times: 9 ms, 33 ms, -

Threshold: 250 ms

Result Codes
1: Success
2: Success
3: Timeout error (3)
```

The third Response Time displays two dashes -to indicate that no response was received, and under the Results heading, the yellow dot points out the third Response Time as the reason for the Warning. Additionally, the third Result Code lists "Timeout error" as the reason for the Warning.

## **Additional Target Test Actions**

TEST AGAIN PATH ANALYSIS ...

After the Target test has completed, tap any of the blue links to perform additional actions, including opening other testing apps.

- Tap the blue linked Device Name to open a Discovery Details app screen for the selected device. From there, you can open other apps and run additional tests.
- Tap TEST AGAIN to run just the target test again.
- Tap PATH ANALYSIS to open the Path Analysis app. The path Destination is configured with the current target.
- Tap the action overflow icon \*\*\* to open the listed apps or tools with the target prepopulated, for example:

- Open the Ping/TCP app with the current target address.
- Run a packet Capture on traffic from the test target.
- Browse to the target URL on the internet with your web browser app.

# AutoTest Ping Test

A Ping test sends an ICMP echo request to the selected target to determine whether the server or client can be reached and how long it takes to respond. The AutoTest Target Ping Test sends three Pings to the target and reports the response times. The target can be an IPv4 address, IPv6 address, or named server (URL or DNS).

# Ping Test Settings



Name: This field allows you to assign a custom name to the test. The name appears on the target test card in the profile.

**Device Name**: Enter the IP address or URL of the server you want to ping. If you enter an IP

address, the DNS lookup portion of the test is skipped.

**IP Protocol Version**: IPv4 is used by default. Tap the field to switch between IPv4 and IPv6.

Frame Size (bytes): This setting specifies the total size of the payload and the header sent. Valid sizes are 64 bytes to 1518 bytes. To test the Maximum Transmission Unit (MTU) along a route to a target, select the MTU frame size you want to test, and set Do Not Fragment to Enabled.

**Do Not Fragment**: Tap the toggle button to enable.

**Timeout Threshold:** This threshold controls how long the AirCheck G3 waits for a response from the target before failing the test.

# Ping Test Results



The Ping card shows the Ping test name entered in the Ping test settings and the three Ping response times from the target.

Tap the card to open the Ping results screen.

#### AutoTest Ping Results Screen

# PING google 4 ms, 4 ms, 5 ms Device Name: www.google.com IPv4 Address: 172.217.12.4 MAC Address: - Results Lookup Time: 1 ms Response Times: 4 ms, 4 ms, 5 ms Threshold: 1 s Result Codes 1: Success 2: Success 3: Success

**Device Name:** Hostname or address of the target device

 IPv4 or IPv6 Address: IP address of the target device

TEST AGAIN PATH ANALYSIS

MAC Address: Target device's MAC address.
 The two dashes -- indicate that no MAC address was provided from the server.

#### Results

- Lookup Time: How long it took to resolve the URL into an IP address
- Response Times: How long it took for the AirCheck G3 to receive a response from the target after sending each of the three Pings
- Threshold: The Timeout Threshold indicated in the test's settings

**Results Codes:** Final status of the test (Success or Failure) for each of the three Pings



Tap blue links or the blue action overflow icon ••• at the bottom of the test results screens to run the Ping TEST AGAIN, open another testing app, Browse to the Ping target address in your web browser, or start a Telnet or SSH session.

#### AutoTest TCP Connect Test

A TCP Connect test opens a TCP connection with the selected target to test for port availability using a 3-way handshake (SYN, SYN/ACK, ACK). The AutoTest Target TCP Connect test runs three connection tests and reports the response times.

# TCP Connect Test Settings



Name: This field allows you to assign a custom name to the test. The name appears on the target test card in the profile.

**Device Name:** Enter the IP address or URL of the target you want to test. If you enter an IP address, the DNS lookup portion of the test is skipped.

**IP Protocol Version**: IPv4 is used by default. Tap the field to switch between IPv4 and IPv6.

**Port:** Specify the TCP port number for the AirCheck G3 to use to connect to the target.

**Timeout Threshold:** This threshold controls how long the AirCheck G3 waits for a response from the target before failing the test.

#### **TCP Connect Test Results**



The TCP card shows the test name entered in the settings and the three response times from the target.

Tap the card to open the TCP results screen.

#### AutoTest TCP Results Screen



Device Name: DNS name of the device tested

IPv4 or IPv6 Address: IP address of the target device

MAC Address: Device's MAC address. The two dashes -- indicate that no MAC address was provided.

Port: Port number tested

#### Results

**Lookup Time**: How long it took to resolve the URL into an IP address

Response Times: How long it took for the AirCheck G3 to receive a response from the server for each of the three connect tests

**Threshold**: The Timeout Threshold indicated in the test's settings

**Results Codes**: Final status of the test (Success or Failure) for each of the three Pings

### **HTTP Test**

The HTTP test performs a comprehensive end user response time (EURT) measurement when downloading the specified web page. The target can be an IPv4 address, IPv6 address, or URL.

# **HTTP Test Settings**

HTTP settings allow test grading criteria based on responses and return code in addition to the time threshold.



#### Name

This field allows you to assign a custom name to the test. The name appears on the target test card in the profile.

#### URL

Enter a target address. To reach web servers that operate on a non-default port, enter a colon (:) and specify the port number after the URL.

#### IP Protocol Version

IPv4 is used by default. Tap the field to switch between IPv4 and IPv6.

#### **Allow Redirects**

Tap the toggle button to permit web redirects when trying to connect to the target.

# Response Time Threshold

This threshold controls how long the AirCheck G3 waits for a response from the URL before failing the test. Tap the field to change the value.

# Web Page Transfer Size

This setting allows you to limit the amount of data downloaded, ranging from the HTML **Header Only** to the entire page (**ALL**). Tap the field to select a different transfer size.



#### Response Must Contain

Text entered here functions as pass/fail test criteria based on the presence of the text string on a specified server or URL. To construct a text string, enter a word or several words with exact spacing. When specifying several words, they must appear consecutively at the source. The test passes if the text string is found. If the string is not found, the test fails with the Return Code: "Response does not contain required text."

#### Response Must Not Contain

Like the setting above, except text entered here functions as pass/fail test criteria based on the

absence of the text string on a specified server or URL. The test passes if the text string is not found. If the string is found, the test fails with the return code: "Response contains excluded text."

#### Return Code

The Return Code set here functions as pass/fail test criteria. The default is "OK (HTTP 200)." Tap the field to select a different Return Code from the list. If your selected Return Code value matches the actual return code value, the test passes, and if AirCheck G3 receives a different return code, the test fails.

#### **HTTP Proxy**

The Proxy control in target test settings uses the server address and port specified in the main profile settings. Tap the toggle to use those Proxy settings. See Wi-Fi Profile Settings.

#### HTTP Test Results



The HTTP card shows the test name entered in the test settings and response time from the target.

#### HTTP Test Results Screen

HTTP github 3.671 s	
Device Name: <u>lb-192-30-253-113-iac</u>	l.github.com
IPv4 Address: 192.30.253.113 MAC Address:	
URL: https://www.github.com	
Results	
Metric	Result
Ping	54 ms
DNS Lookup	59 ms
TCP Connect	165 ms
Data Start	1.288 s
Data Transfer	2.157 s
Total Time	3.671 s
Threshold	10 s
Data Bytes	90.9 K
Rate (bps)	206.2 K
End User Response Time	

Device Name: DNS name of the server tested

IPv4 or IPv6 Address: IP address of the server

MAC Address: Server's MAC address. The two dashes -- indicate that no MAC address was provided from the server.

URL: The target URL

#### Results

Ping: A ping test runs simultaneously with the HTTP test, and this result field displays the Ping response time. If the HTTP test finishes before the ICMP echo reply packet arrives, dashes -- are displayed for the ping test results. Ping results do not affect the Pass/Fail status of the test.

DNS Lookup: Amount of time it took to resolve the URL to an IP address. If you enter an IP address, DNS lookup is not required, so dashes are displayed to indicate that this part of the test was not executed.

TCP Connect: Amount of time it took to open the port on the server

**Data Start**: Time to receive the first frame of HTML from the web server

**Data Transfer**: Time to receive the data from the target server


**Total Time**: The end user response time (EURT), which is the total time it took to download the web page. It is the sum of DNS lookup, TCP connect, data start, and data transfer time. If the Total Time exceeds the Response Time Threshold in the settings, the test fails.

If the Response Time Threshold is exceeded during a step in the test, the current phase of the test (DNS, Lookup, TCP Connect, Data Start, or Data Transfer) is denoted with a red dot, and the rest of the test is aborted.

**Threshold:** The Response Time Threshold from the test settings

**Data Bytes:** Total number of data bytes transferred. This does not include header bytes


Rate (bps): The measured data transfer rate

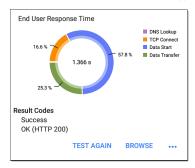

End User Response Time: Pie chart of the times for each phase of the test (DNS, Lookup, TCP Connect, Data Start, and Data Transfer)

**Results Codes:** Final status of the test (Success or Failure)

The HTTP test also shows the **Return Code** from the website server

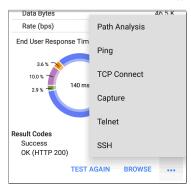

Tap blue links or the blue action overflow icon

at the bottom of the test results screens to
run the HTTP TEST AGAIN, open another testing
app, or Browse to the target address in your
web browser.


# **Captive Portal Connections**

The HTTP test supports connections through a network with a captive portal requirement.

When running a Profile that connects to a network with a Captive Portal, an system notification appears to prompt you to enter the captive portal credentials.

```
Android System
Sign in to network
00:c0:17:53:01:23
```

For the HTTP test to pass, you must select the notification and enter the required credentials on the portal website. Otherwise, the HTTP test fails, with a Result Code of "Captive portal detected (25)."

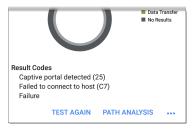

See the "Captive Portals" on page 52 for more instructions.


When finished in the captive portal browser window, hit the back button to return to the HTTP test, and tap **TEST AGAIN** to receive valid results

#### FTP Test

The FTP test performs a file upload to or download from an FTP server, allowing verification of server and network performance. The target can be an IPv4 address, IPv6 address, or URL. The results provide a complete breakdown of the overall file transfer time into its component parts.

# **FTP Test Settings**

FTP settings allow you to specify a **Get** or **Put** test and the file path and name.

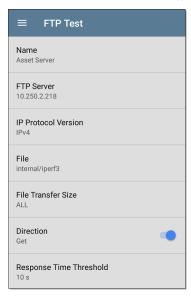

#### Name

This field allows you to assign a custom name to the test. The name appears on the target test card in the profile.

#### FTP Server

Enter the IPv4 address or URL of the FTP server you want to test. If you enter an IP address, the DNS Lookup portion of the test is skipped.

#### **IP Protocol Version**

IPv4 is used by default. Tap the field to switch between IPv4 and IPv6.

#### File

This setting specifies the path and name of the file that is downloaded from (**Get**) or uploaded to (**Put**) the server, based on the **Direction** setting below. Tap the field to enter the file path and name

#### File Transfer Size

This setting lets you limit the amount of data to be downloaded or uploaded. The default transfer size is ALL.

 When the Direction setting is Get, a transfer size of ALL causes the download to continue until the entire file is downloaded or the Response Time Threshold is exceeded. Specifying a transfer size that is greater than file being retrieved does not cause the test to fail. The test stops when the file has finished downloading.

 When the Direction setting is Put, the default transfer size of ALL causes the AirCheck G3 to create and upload a file that is 10 MB.

#### Direction

Tap the toggle button to switch between a **Get** (download the **File** from the server) or **Put** (upload the **File** to the server) test.

- If Direction is set to Get, the file is retrieved, and the size and data rate are calculated.
   This data is discarded as soon as it is downloaded and is not retained on the AirCheck G3.
- If Direction is set to Put, the File named above is created on the FTP server. The size of this file is determined by the File Transfer Size setting. The file contains a text string indicating that it was sent from the AirCheck G3, and the test string is repeated to produce the set file size.

#### Response Time Threshold

This threshold controls how long the AirCheck G3 waits for a response from the FTP server before failing the test. Tap the field to change the value.



#### Username and Password

Enter these credentials to access the target server you specified. Enter "anonymous" as the username to establish an anonymous connection. The test fails if the configured username or password are not valid on the target FTP server.

#### **HTTP Proxy**

The Proxy control in target test settings uses the server address and port specified in the main profile settings. See Wi-Fi Profile Settings.

# **FTP Test Results**



The FTP card shows the test name entered in the test settings and response time from the target.

#### FTP Test Results Screen

Asset Server	
Device Name: 10.250.2.218	
IPv4 Address: 10.250.2.218 MAC Address:	
Get File: /internal/iperf3	
Results	
Metric	Result
Ping	50 ms
DNS Lookup	-
TCP Connect	44 ms
Data Start	116 ms
Data Transfer	10 ms
Total Time	171 ms
Threshold	60 s
Data Bytes	24 K
Rate (bps)	1.2 M
Fool Hans Dannana Time	

Device Name: Hostname of the server tested

IPv4 or IPv6 Address: IP address of the server

MAC Address: Server's MAC address. The two dashes -- indicate that no MAC address was provided from the server.

**Get File**: File path and name entered in the settings that was transferred to or from the FTP server.

#### Results

Ping: A ping test runs simultaneously with the FTP test, and this result field displays the Ping response time. If the FTP test finishes before the ICMP echo reply packet arrives, dashes -- are displayed for the ping test results. Ping results do not affect the Pass/Fail status of the test.

DNS Lookup: Amount of time it took to resolve the URL to an IP address. If you enter an IP address, DNS lookup is not required, so dashes are displayed to indicate that this part of the test was not executed.

**TCP Connect**: Amount of time it took to open the port on the server

**Data Start**: Time to receive the first frame from the FTP server

**Data Transfer:** Time to receive the file from the target server

**Total Time**: The end user response time (EURT), which is the total time it took to download the web page. It is the sum of DNS lookup, TCP connect, data start, and data transfer time. If the Total Time exceeds the Response Time Threshold in the settings, the test fails.

If the Response Time Threshold is exceeded during a step in the test, the current phase of the test (DNS, Lookup, TCP Connect, Data Start, or Data Transfer) is denoted with a red dot, and the rest of the test is aborted.

**Threshold**: The Response Time Threshold from the test settings

**Data Bytes:** Total number of data bytes transferred. This does not include header bytes.

Rate (bps): The measured data transfer rate



**End User Response Time**: Pie chart of the times for each phase of the test (DNS, Lookup, TCP Connect, Data Start, and Data Transfer)

**Results Codes:** Final status of the test (Success or Failure)

The FTP test also shows the **Return Code** from the server.


Tap blue links or the blue action overflow icon ... at the bottom of the test results screens to run the FTP Test Again, open another testing app, or Browse to the FTP server in your web browser.

# Air Quality AutoTest Profiles

Air Quality Profiles perform a scan of the channels in your wireless network to measure channel utilization and interference.

Each table on the Air Quality results screen shows the top four channels in each band with the highest utilization, co-channel interference or adjacent channel interference, along with the number of APs operating on the channel.

Air Quality Profile results are described next. Tap here to skip to Air Quality Settings.

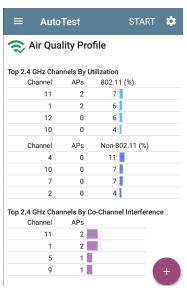

The AirCheck G3 scans the 2.4-GHz band first and displays results and then does the same for the 5-GHz band and then the 6GHz band if applicable.

Channel usage depends on the number of clients connected to the network and the amount of interference from devices like microwaves or smartphones using Bluetooth. Very high utilization or interference can affect network performance.

# Air Quality Profile Results

The image below shows a completed Air Quality Profile test with two Warnings and two Failures indicated by the yellow and red dots next to the corresponding measurements.



Top 2.4 GHz Channels By Adjacent Channel Interference

	APs	Channel
•	15	2
	1	1
	1	6

Air Quality test gradings are based on the Thresholds configured in the Profile's settings. In the case shown here, the Warnings and Failures occurred because of high Utilization and Cochannel Interference caused by the number of APs active on the top three 2.4 GHz channels: 1, 6, and 11.

**802.11 Utilization** %: Percentage of the displayed channel's capacity used by all 802.11 WI AN devices

Non-802.11 Utilization %: Percentage of the displayed channel's capacity being used by non-802.11 interferers, which may be non-WLAN sources



Top 5 GHz Channels By Utilization				
Channel	APs	802.11 (%)		
153	0	7		
149	1	6		
161	0	6		
157	6	5		
Channel	APs	Non-802.11 (%)		
52	0	1		
56	0	1		
-		-		

#### Top 5 GHz Channels By Co-Channel Interference

	APs	Channel
<u> </u>	6	157
	2	36
	1	149
	-	-

# Top 5 GHz Channels By Adjacent Channel Interference Channel APs



Top 5 GHz Channels By Adjacent Channel Interference

Channel	APs	
149	6	•
157	1	

Result
Thresholds exceeded

CHANNELS MAP

Two dashes -- indicate that no Utilization was detected on the Channels shown.

Co-channel Interference: Interference caused by multiple APs operating on the same channel that exceed the minimum Co-channel Interference AP Signal Level threshold in the settings. This measurement accounts for 40-MHz and 80-MHz

channels in the 5-GHz band by counting an AP on its primary and each secondary channel.


Adjacent Channel Interference: Interference caused by multiple APs operating on adjacent channels that exceed the minimum Adjacent channel Interference AP Signal Level threshold in the settings. This is most common in the 2.4 GHz band where channels are 5 MHz apart but span 20 MHz. There are only three channels that do not overlap in this band: 1, 6, 11. Larger channel widths (e.g., 40 MHz) also affects the adjacent channel interference counts.

**Results Codes**: Final status of the test (Success or Failure)

Tap the blue link at the bottom of the Air Quality Profile screen to open the Wi-Fi app's CHANNELS MAP, which provides real-time visual results of the utilization on each channel.

### Air Quality Profile FAB


The floating action button (FAB) on the AutoTest Air Quality Profile screen allows you to attach comments and images to this AutoTest result on the Link-Live website.

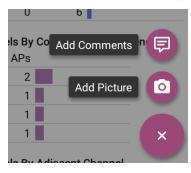

- The Add Comments option opens a Link-Live sharing screen where you can enter comments.
- The Add Picture function lets you open the Gallery or Camera app to select or take a photo that is then uploaded and attached to your test result.

## **Air Quality Profile Settings**

To configure the profile settings, tap the settings icon on the Air Quality Profile screen, or add a new Air Quality Profile to AutoTest.

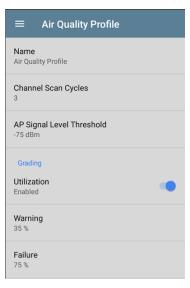

The settings for Air Quality are thresholds for grading the channel utilization and interference.

On the Air Quality Profile settings screen, tap each field described below as needed to

configure the profile. Changed settings are automatically applied.

When you finish configuring, tap the back button to return to the profile.

#### Name

Tap the **Name** field to enter a custom name for the profile. This name appears on the main AutoTest screen profile card and the Air Quality profile screen header.

#### **Channel Scan Cycles**

This setting designates the number of times all of the channels should be scanned before reporting the results. Tap the field to enter a new value between 1 and 10.

#### **AP Signal Level Threshold**

This setting designates the minimum signal level at which an AP must be measured to be counted in Co-Channel and Adjacent Channel Interference measurements. Tap the field to select a new value or enter a custom one.

#### Grading

Use the grading threshold controls to adjust the values that determine Warning/Fail results for the corresponding utilization and co-channel interference and adjacent channel measurements. Tap each Warning or Failure field to select a new value or enter a custom one. Each threshold also has a toggle button that allows you to disable grading based on that measurement entirely.

#### **Thresholds**


Use the threshold controls to adjust the values that determine Warning/Fail results for the corresponding utilization and co-channel interference and adjacent channel measurements. Tap each Warning or Failure field to select a new value or enter a custom one. Each threshold also has a toggle button that allows you to disable grading based on that measurement entirely.

By default, you can set thresholds for both 802.11 and non-802.11 Utilization.

Utilization measurements and thresholds are percentages of a channel's capacity. Co-channel

interference measurements and thresholds are the number of APs operating on the same channel.

Adjacent Channel Interference measurements and thresholds are the number of APs operating on nearby channels that cause interference.

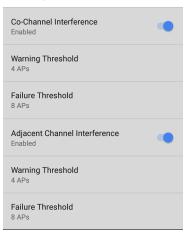

AirCheck G3 User Guide



The Ping/TCP test app runs a Ping or TCP Connect test to your chosen target, allowing you to monitor connectivity changes.

A Ping test sends an ICMP echo request to the selected target to determine whether the server or client can be reached and how long it takes to respond. A TCP Connect test opens a TCP connection with the selected target to test for port availability using a 3-way handshake (SYN, SYN/ACK, ACK).

You can open the TCP/Ping app from the Home screen, or you can select **Ping** or **TCP Connect** from another app, such as AutoTest or Discovery, while viewing a device's details.

# **Ping/TCP Settings**

To configure a test, you can manually enter a hostname or IP address in the settings, or you can select Ping or TCP Connect from another testing app's device screen.

## Populating Ping/TCP from Another App

When you open the Ping/TCP app from another app, the address is pre-populated as the Ping or TCP target device. For example, the floating action button (FAB) menu on the Discovery app screen shown below contains the option to open the Ping/TCP app.




If the Ping/TCP app is opened from this screen, the IPv4 address from the Discovery app is already configured as the Ping/TCP target.



## Configuring Ping/TCP Settings Manually

To configure the target and settings manually, open the app's settings .

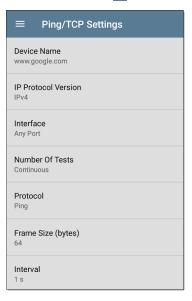

**Device Name**: Enter the IP address or DNS name of the target.

**IP Protocol Version**: IPv4 is used by default. Tap the field to enable IPv6 instead.

**Interface:** This setting determines the AirCheck G3 port from which the port scan runs. Tap the field to select the port. (See <u>Selecting Ports</u> for explanations of the different ports.)

**Number of Tests:** Tap to select the number of Ping or TCP connect tests you want to run. The default setting of **Continuous** keeps running tests until you tap the **STOP** button.

**Protocol**: Tap to select the **Ping** or **TCP Connect** protocol for the test.

Some of the following settings depend on the selected protocol.

Frame Size (bytes): This setting only appears if the Ping Protocol is selected. It specifies the total size of the payload and header the AirCheck G3 sends. Tap a radio button to select a new size, or enter a Custom Value from 64 to 1518 bytes. To test the Maximum Transmission Unit (MTU) along a route to a target, select the MTU frame size you want to test, and set the **Do Not Fragment** setting (below) to **Enabled**.

Interval: This setting only appears if the Ping Protocol is selected. It controls how much time passes between each Ping sent from the AirCheck G3. By default, Pings are sent once every second (1 s). Tap a radio button to select a different interval, or enter a Custom Value between 100 and 10,000 milliseconds.

Port: This setting only appears if the TCP Connect Protocol is selected. It indicates the port number your AirCheck G3 uses to connect to the target address for a TCP Port Open test. If needed, tap the Port field to open a pop-up number pad and enter a new port number. Tap OK to save it.

**Timeout Threshold:** This threshold controls how long the AirCheck G3 waits for a response from the target before the test is failed.

**Do Not Fragment**: This setting only appears if the **Ping** Protocol is selected. Tap the toggle

button to enable. See the Frame Size setting description above.

# **Running Ping/TCP Tests**

Your unit must be connected to an active network (Test or Management Port) to run Ping and TCP Connect tests. Icons in the top Status Bar indicate whether and how your AirCheck G3 is connected. See Connection Notifications for descriptions of the connection status icons, and select the appropriate Interface (or Any Port) from the Ping/TCP settings.

The default target is google.com. Open the app settings to enter a new target.

To begin the test, tap **START**.

If the Number of Tests setting is set to **Continuous**, the Ping/TCP app runs tests to your selected target until you tap **STOP**.



**Device Name**: Hostname or address of the target device

IPv4 or IPv6 Address: IP address of the target device

MAC Address: Target device's MAC address. The two dashes -- indicate that no MAC address was provided from the device.

**Port**: The port number used for the TCP Connect test. This field does not appear in Ping test results.

**Interface**: The AirCheck G3 Test or Management Port from which the test is running

#### Results

- · Started: Time the test started
- Status: Most recent test status
- Sent: Number of Pings or TCP SYN packets sent to the target
- Received: Number of Ping or TCP SYN/ACK packets returned from the target
- Lost: Number of Pings or TCP packets that were not returned from the target

Response Time graph: Plots the target device's response times in milliseconds. The graph saves and displays data for up to 24 hours in the past if the unit stays linked.

To pan and zoom on the graph, you can swipe, double tap, and move the slider. See the Trending Graphs topic for an overview of the graph controls.

Response: Table display of the Current, Minimum, Maximum, and Average response time measurements

**Limit**: The **Timeout Threshold** from the Ping/TCP app's settings

AirCheck G3 User Guide



Packet capture is the process of recording network traffic in the form of packets as data streams back and forth over Wi-Fi connections. Packet captures can help you analyze network problems, debug client/server communications, track applications and content, ensure that users are adhering to administration policies, and verify network security.

The capture process uses the Wi-Fi Test port.

You can open the Capture app from the Home screen or using a link from another app, such as AutoTest, Discovery, or Wi-Fi.

## **Capture Settings**

The Capture app settings allow you to designate file and slice sizes, and apply filters to capture and analyze only certain packet types. For example, you can create a Wi-Fi filter to capture only packets to and from a particular AP or client. When you open Capture from Home and do not configure any filters, all packets from the switch or channel are captured. The default Wi-Fi capture saves the packets seen on channel 1. If you open the Capture app from another NetAlly test app, Capture filters are automatically applied. Filters that can be applied from other apps include Wi-Fi Channel, Channel Width, and BSSID.

For example, the floating action menu on the Wi-Fi app's BSSID Details screen below contains the option to start a Wi-Fi Capture.




When the Capture app opens, filters are already set with the BSSID, Channel, and Channel Width from the Wi-Fi app.



The Capture settings are saved until you clear the filters or open the app with new filters applied.

Tap the settings icon in the Capture screen to configure capture settings.

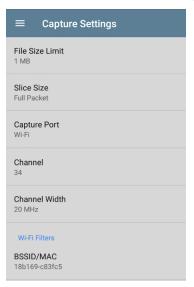

File Size Limit: Tap this field to specify a size for the capture file. The default size is 1 MB, and largest size allowed is 1000 MB. The capture stops when the captured file reaches this size.

When capture is running, the capture screen displays the current file size as data is captured.

Slice Size: Tap this field to select a specific frame slice size or enter a custom value. The Slice Size setting limits how much of each packet is captured. A smaller slice size is useful when you are interested in the packet's header but do not need to see all the payload data. The default is Full Packet.

#### Wi-Fi Filters

**Channel**: Tap the channel button to set the channel on which packets are captured.

Channel Width: (Appears only if you select a Channel number in the 5-GHz or 6-GHz band, above channel 14). Tap to select a width of 20, 40, 80, or (for 6-GHz band only) 160 MHz.

**BSSID/MAC**: Enter a BSSID to capture only packets going to or from the target device.

Control, Data, and Management Frames and Beacons: All frame types are captured by default. Tap the toggle button for each frame type to disable its capture.

# Running and Viewing Captures

To start Capturing, tap **START** at the top of the app screen.




The current Status of the capture and any applied filters are shown under the capture type . The image above indicates that the app captures traffic for IP 10.200.72.19 only.

View the real-time status of the capture as it is running. If you navigate away from the Capture app, the capture process continues to run in the background until the File Size Limit (in Capture Settings) is reached. Captures also stop if you open the Wi-Fi app (which initiates scanning) or if you connect to a Wi-Fi network using AutoTest.

Tap **STOP** to stop the running capture before it reaches the File Size Limit.

To pan and zoom on the graphs, you can swipe, double tap, and move the slider. See the Trending Graphs topic for an overview of the graph controls.


Wi-Fi captures graph the Management, Control, and Data Frame Types.

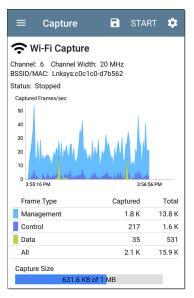

In the test shown above, the app has captured all three Wi-Fi Frame Types on channel 6 with the BSSID shown. The Total measurements in the table below the graph represent all frames seen, while the Captured frames are those that fall within the filter parameters.

Once a capture is completed, the **Save Capture** dialog appears automatically.

Tap the Save icon 🖥 to reopen this dialog.

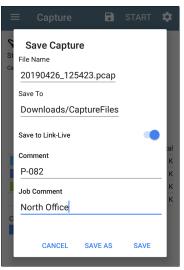

Captures are saved as .pcap files. Tap any of the fields in the dialog to enter changes.

**File Name:** Capture files are automatically named using the date and time. Tap this field to enter a custom name.

Save to: By default, capture files are saved in the Downloads folder in the AirCheck G3 file system, but you can also save them to a USB storage device or choose a different folder by tapping the Save to field. See also Managing Files.

Save to Link-Live: You can also upload capture files to Link-Live and then download them for analysis on a PC. Capture (.pcap) files appear on the Uploaded Files page in Link-Live.

**Comment**: This comment is attached to your capture file when it is uploaded to Link-Live.

Job Comment: This is the persistent Job Comment that uploads to Link-Live with all test results and files, until you change it. Changing the Job Comment here changes it throughout your unit.

AirCheck G3 User Guide



The AirCheck G3 Discovery application creates an inventory of the devices on your networks along with their attributes: device types, names, addresses, interfaces, VLANs, resources, and other connected or associated devices. The app allows you to identify and analyze network devices and acts as a jumping-off point for further analysis using other apps, such as Wi-Fi, Path Analysis and connection tests.

### **Discovery Chapter Contents**

This chapter describes how the Discovery process and app screens work, shows examples of Discovery data, and details the Discovery settings.

**Introduction to Discovery** 

Main Discovery List Screen

**Discovery Details Screens** 

**Device Types** 

**Discovery Settings** 

**Problem Settings** 

**TCP Port Scan Settings** 

# **Introduction to Discovery**

Discovery finds, classifies, and displays the details of network components. Information provided by Discovery can include the following:

- · IP, BSSID, and MAC addresses
- Device Names
- Device Connectivity
- SNMP Data
- Network Problems
- · Interface Details and Statistics

Devices are discovered via ARP and Ping sweeps; SNMP, DNS, mDNS, and netBIOS queries; and passive traffic monitoring. Discovery classifies each device as it is found. Up to 2,000 devices can be reported.

The Discovery app also detects Problems with discovered devices, including Warning and Failure conditions.

The AirCheck G3's discovery process begins when the unit is powered on. Once a network


connection (Wi-Fi, test or management) is established, the active discovery process begins.

Discovery notification icons an indicate the progress of active discovery. This icon indicates that no links are currently available for active discovery, either because none of the ports enabled for discovery are connected or because AutoTest is running.

The Discovery app consistently monitors network traffic, but the active discovery process reruns every 90 minutes by default. You can select a different Refresh Interval in the Discovery Settings.

# Main Discovery List Screen

The main Discovery screen lists all the devices the AirCheck G3 has discovered.

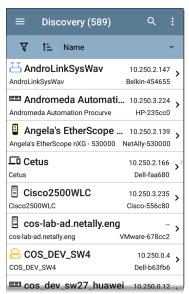


Like in AutoTest and other AirCheck G3 screens, the icons in Discovery change color to indicate a Warning or Failure condition. Discovery also displays device icons in Blue to indicate Problem-related information that does not constitute a warning or failure, and Green to indicate that a previous Problem has been resolved. (See the Problem Settings to adjust enabled Problems and thresholds.)

The Discovery screen, and other app screens with long lists, support fast scrolling. Touch and drag the scrollbar handle to the right of the list to scroll quickly up and down.




From the main Discovery screen, you can filter and sort the listed devices, open the left side

navigation drawer to configure settings, and tap a device's card to view its details.

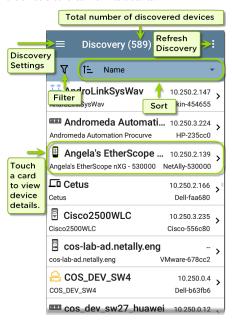

## **Discovery List Cards**

The information displayed on each device card varies depending on the selected Sort element and the data the AirCheck G3 was able to discover.

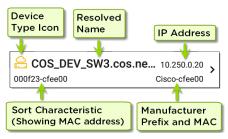

The lower left field displays the characteristic by which the Discovery list is currently sorted. In the image above, the list is sorted by MAC address. See Discovery Sorts in this topic for more about sorting.

# Searching the Discovery List


The main Discovery screen offers a search feature. Tap the search icon at the top of the

screen to search discovered devices.






Tap the filter button  $\boxed{\mathbf{V}}$  near the top left of the main Discovery screen to set filters that control which devices are displayed in the list.

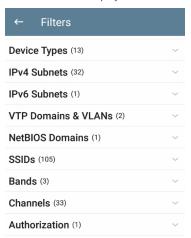

The Filters screen displays the number of devices or domains discovered for each category. Tap a category name to select filters

by checking the boxes. The main Discovery screen shows only those devices or IDs that fall under your chosen filter parameters.

When filters are selected, those active filters are displayed at the top of the Filters screen.

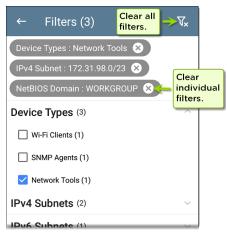

 Tap the X button to the right of each filter to clear it  Tap the clear filter icon at the top right to clear all filters.

After you select a filter, the Filters screen displays results filtered for that characteristic. For example, in the image above, the user has selected the **Network Tools** device type. As a result, only those subnets, addresses, Wi-Fi bands, etc., with a discovered Network Tool remain selectable in the filters list.



Back on the main Discovery screen, the screen title shows the number of filtered devices out of the total discovered devices (in the image above, 152 filtered devices out of 1308 total).

The number of active filters displays to the left of the filter icon (3 active filters in the image above).

# **Sorting the Discovery List**

Tap the Sort bar or down arrow to open the Sort drop-down menu.



Select a Sort option to order the devices based on your selected characteristic.



The selected Sort option displays in the Sort bar above the device list, and the sort characteristic for each device is shown under the device type icon. In the image above, all the devices associated with the "NSVisitor" SSID are sorted together. Individual devices on the same SSID are sorted numerically and alphabetically.

Tap the sort order icon 1= to switch the sort order between normal and reverse order.

Devices are sorted in groups. Those with resolved names appear at the top (in normal order), and then devices with only IPv4, IPv6, and MAC addresses appear below, respectively.

Reversing the normal sort order reverses the devices within the groups but does not change the order of the groups.

# Security Auditing – Batch Authorization

Batch Authorization allows the user to extend the AirCheck G3's filtering to organize devices into the following security categories:

- Authorized: For devices approved for use on your network
- Neighbor: For devices owned and controlled by neighboring organizations
- Flagged: To give visibility to a specific device
- Unknown: For devices that have not been identified or classified
- Unauthorized: For devices that should not be on the network and may present a security risk
- Unspecified:Default unassigned Authorization status

Once categorized, it is simple to immediately identify any new devices on the network by filtering according to Authorization type. New devices are identified as Unspecified.

To use the Batch Authorization feature, create a filter that identifies the devices you want to categorize. For example, you could filter on SSIDs used by other offices in your building. After you filter the list of discovered devices, select the overflow menu.




Select **Set Authorization** to see how these devices are currently categorized and the number of devices in each category.

# Set Authorization 1077 of 1077 clients selected Authorized (5) Neighbor (0) Flagged (0) Unknown (0) Unauthorized (17) Unspecified (1055) CANCEL OK

NOTE: The initial selection on this screen defaults to the category with the highest count. If other categories have non-zero counts, selecting **OK** changes the authorization setting for all devices to the selected category.

Select the appropriate security category. As in the example, if these devices belong to other offices, select: Neighbor and then tap the **OK** button.

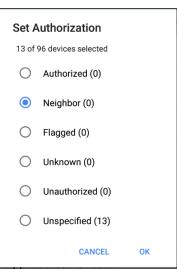

You can now sort the list of discovered devices and clearly identify the security category of the

devices. Devices from other offices are identified as: Neighbor



See Assigning a Name and Authorization to a Device for more information on the Authorization feature.

NOTE: Batch Authorization operates on the default MAC address of a device. If a device has multiple MACs, authorization is set only on the default MAC address. Devices that do not have a discovered MAC address, such as unknown switches and off-net devices, cannot have an authorization setting.

# **Refreshing Discovery**

Tap the action overflow icon at the top right of the main Discovery screen, and select **Refresh Discovery** to refresh the active Discovery process.

# Refresh Discovery REFRESH DISCOVERY CLEAR AND RERUN DISCOVERY CANCEL

**REFRESH DISCOVERY** restarts the active discovery process without clearing the already discovered devices.

**CLEAR AND RERUN DISCOVERY** clears the accumulated results and restarts the discovery process.

## Uploading Discovery Results to Link-Live

Tap the action overflow icon at the top right of the main Discovery screen, and select **Upload** to **Link-Live** to send the current Discovery results to the Analysis page on Link-Live.com.




See the Link-Live chapter for more information.

SAVE TO ANALYSIS FILES

# **Discovery Details Screens**

Tap any of the device cards on the main Discovery list screen to view Device Details.

The example below calls out a Router card and its Details screen.

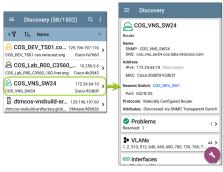

The available data and actions on the Details screens vary significantly depending on the device type, connections, and data the AirCheck G3 was able to discover. In other words, only the discoverable information for each device is shown on the Details screen.



For the Switch screen shown above, Discovery was able to find an IP address but not a name for the switch.

Each Details screen shows additional information about the selected device, any Problems detected by the AirCheck G3, and counts for other connected or corresponding network elements.

See Device Types for specifics about the different devices the AirCheck G3 can discover.

## **Top Details Card**

The top card on the Details screen summarizes the discovered data for the selected device.



The top of the card shows the device type(s) and icon (a Wi-Fi Controller with a Failure or Error status in the example image above).

The rest of the fields that appear on the top Details screen card depend on the device type and what the AirCheck G3 can discover about the device.

On the Discovery Details screens, you can tap any blue linked name or address to open a Discovery screen for the linked device.

NOTE: Non-underlined links open in the same app (in this case Discovery), and <u>underlined links</u> open in a different app.



The linked and underlined Cisco MAC address in the screen image above opens the Wi-Fi app's AP Details screen, where you can view the other wireless attributes associated with the Lightweight AP. The Nearest Switch and Wi-Fi Controller links open a Discovery app Details screen for those devices

## Data Fields on the Top Details Card

The following fields may appear on the top card on a Device Details screen, depending on the device type and the information AirCheck G3 was able to discover:

Name: Discovered hostname(s) of the device. This section can display user-defined, DNS, mDNS, SNMP, NetBIOS, AP, and Virtual Machine names as discovered.

Address: Discovered IPv4, IPv6, BSSID, and/or MAC addresses of the device. This section displays the default (first discovered) addresses of each type. For more addresses, select the Addresses card when available.

Authorization: This field shows the userassigned Authorization status of the device. See Assigning a Name and Authorization to a Device.

802.11: Wireless data

**Channels**: Wi-Fi channels on which the device is operating

Type(s): 802.11 media type(s) supported by the device

**Nearest Switch**: Name or address of the switch identified as closest to the device

**Port**: Physical port where the device is connected

VLAN ID: ID of the VLAN the device is on

**Protocols:** Routing protocols, discovered via packet analysis, operating on the device or network

**Services**: Network services provided by this device, such as DHCP or DNS

**Attributes:** Other discovered attributes about the device

**Wi-Fi Controller**: Name and address of the Wi-Fi Controller for a Lightweight AP

AP: Access Point to which the device is connected

**SSID**: Name of the network on which the device is operating

Security: AP's security type

**Hypervisor:** Name of the hypervisor on which a virtual machine is operating

Virtual Machine: Name of the virtual machine

**Guest OS**: Operating system running on the virtual machine

**Memory Reservation**: Amount of memory reserved for the virtual machine

Last Seen: Time at which AirCheck G3 most recently detected the device

#### **Lower Cards in Device Details**

Tap any of the lower cards on a Device Details screen to view more discovered characteristics and "drill down" to specific Problems, Addresses, Interfaces, etc. for the selected device



Screens with a list, such as Addresses shown below, also offer Sort options.



The rest of this topic provides examples of each type of Details screen and options for additional analysis.


Remember, you can tap any card with a right pointing arrow > to open a new screen with more information about the device or characteristic.

#### **Problems**

The Problems card shows the icon color of the highest severity problem, and the number of detected Warning, Failure or Error, Information, and Resolved conditions for the device or network component.



Tap the Problems card to view the Problems list screen (unless only 1 Problem is detected, in which case, the detailed Problem description opens, skipping the list screen).

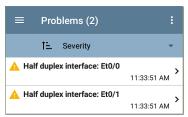

Tap the sort field to sort the list by **Severity** or by the time when the problem was **First Detected**.

On the Problems list screen, tap a Problem's row to read a detailed description.




To clear a problem, tap the action overflow button : at the top right of the Problem list or description screen, and then tap Clear Problem.

See Problem Settings to select which problems are detected and displayed by your unit.

#### **Addresses**



The Addresses card displays the number of each type of address discovered: IPv4, IPv6, MAC, and/or BSSID. Tap to view the addresses and related information.

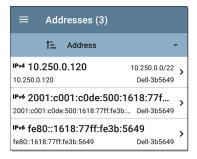

From the Addresses list screen, you can sort the list order and tap any of the discovered addresses to investigate the address further.

#### TCP Port Scan

If you have run a TCP Port Scan (from the Discovery FAB) on a device or IP address, a TCP Port Scan card appears on the device's Details screen.



This card lists open port numbers and shows the total quantity of open ports. Tap the card to open the TCP Port Scan screen.

You can also open this screen from the Discovery floating action menu.



The top of the TCP Port Scan results screen shows the name or IP address of the tested device and the following fields:

**IP address**: IP address of the device that was scanned

**Interface:** Test or management port from which the test ran, set in the TCP Port Scan settings

Scan List: List of port numbers tested

#### Results

Status: Current status of the port scan

**Port/Description**: List of all the detected open ports with their descriptions


See also TCP Port Scan Settings.

#### **VLANs**

The VLANs card displays the VLAN IDs this device is using or for which it is configured.



This card does not appear if no VLANs are detected or configured. Tap the card to open the VLANs screen.

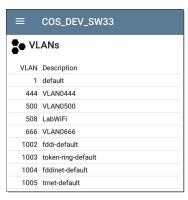

The VLANs Details screen also shows the description with each VLAN ID.

#### Interfaces

Interface are discovered using SNMP.




The Interfaces card shows the number of Up and Down interfaces and the total number of Interfaces to the right.

Tap the card to view the list of Interfaces.



Like other Discovery list screens, the Interfaces list provides a number of Sort options, and the selected sort option affects the type of information displayed. The image above shows Interfaces sorted by Status (up or down). The image below shows Interfaces sorted by MAC Address, so each Interface's MAC address is displayed.

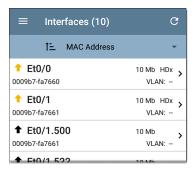


Tapping an Interface row opens a new Discovery Details screen for the selected Interface.




The Interface Details screen contains a description of the interface and information about its Status, Connected Device and Port, and Address

MTU: Maximum Transmission Unit, the maximum packet frame size configured on the interface port From this screen, you can tap the lower cards to review any discovery **VLANs** and **Devices** for the Interface as well as graphs of the Interface **Statistics**.

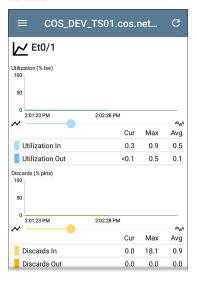

The Statistics screen displays real-time trending graphs of Utilization, Packet Discards, Packet Errors. See the Trending Graphs topic for an overview of the graphs' pan and zoom controls.

Below the trending graphs are pie charts of Packet transfers to and from the Interface.

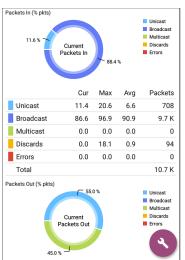

#### **SNMP**

This card shows device details gathered via SNMP and SNMP connectivity to the device.



The SNMP card displays the SNMP Uptime. Tap the card for SNMP Details.

### ≡ COS\_DEV\_SW34

# MIB SNMP

#### SNMP System Group

Uptime: 5 weeks 6 days 2 hours 58 minutes

Manufacturer: Cisco Model: cat4500e

Serial Number: FOX1407GRJA

HW Version: V02 SW Version: 15.2(2)E7

Description:

Cisco IOS Software, Catalyst 4500 L3 Switch Software (cat4500e-ENTSERVICES-M), Version

15.2(2)E7, RELEASE SOFTWARE (fc3)

Technical Support:

http://www.cisco.com/techsupport

Copyright (c) 1986-2017 by Cisco Systems, Inc.

Compiled Wed 12-Jul-17 14:36 by

SNMP

Type: SNMP v1/v2/v3

Engine ID: 80000009030068efbd6f4b80

Communication: SNMP v2

Using: Default Community String: public

**SNMP System Group**: These data fields are gathered from the system group and other key device version information.

**SNMP**: SNMP versions the device supports, Engine ID (for v3), and how the AirCheck G3 is currently communicating with the device, along with credentials, including the Community String in use

#### **Connected Devices**

The Connected Devices card appears on the Details screen for Unknown Switches. While the AirCheck G3 may be unable to directly identify the connected switch, the devices connected to it provide clues about where the switch is operating.



The Connected Devices card shows the number of discovered devices that are connected to the Unknown Switch. Tapping the card opens a Discovery list screen with the connected devices.




#### Resources



The Resources card shows the percentages of CPU, memory, and storage usage on the device. This information is gathered via SNMP.

Tap the card to view current and maximum resource utilization measurements.

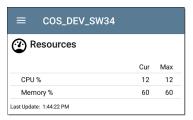

By default, AirCheck G3 displays a Warning condition if CPU, Memory, or Storage utilization is above 90%. You can adjust problem detection and thresholds in the Problem Settings accessed from the Discovery navigation drawer.

#### **SSIDs**

The SSIDs card appears in the Details for Wi-Fi Controllers. This information is gathered via SNMP.



This card shows the number of SSIDs gathered from SNMP. Tap the card to view the list of SSIDs.




On the SSIDs screen, each SSID is shown with its Security type(s) and any VLANs. SSIDs with a checkmark to the left are enabled, and those with an × are disabled.



### Discovery App Floating Action Menu

The floating action button (FAB) on Details screens offers additional actions depending on the device type and connection available.

Opening other NetAlly apps, such as Path Analysis, Ping/TCP, or

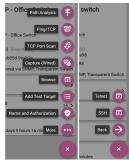

Capture, from a Details screen auto-populates the new app with the device's name and/or address. In this way, both the Discovery and Wi-Fi apps provide a helpful shortcut and prevent you from needing to type in target addresses or hostnames in other testing apps.

- Tapping TCP Port Scan opens the TCP Port Scan screen in the Discovery app.
- Selecting Browse opens Google Chromium.

- Tapping Add Test Target creates a new AutoTest target matching the currently selected device. A dialog first displays to select the test type, then the AutoTest app opens, displaying the newly added target's settings, where you can further customize it.
- For devices with a MAC address or BSSID, tapping Name and Authorization opens a dialog where you can assign a custom user name and Authorization status. See Assigning a Name and Authorization to a Device in the Wi-Fi app chapter.
- Tapping More opens a secondary list of additional floating action buttons. Tapping Back returns to the original list.
- Telnet or SSH open the JuiceSSH app.

### **Auto-Populating Device Addresses**


When another app is opened from the FAB, the default address and name shown on the Top Details Card are the targets populated.

For example, the Router shown in the Details screen below has multiple IPv4 and MAC addresses (which can be viewed by tapping the Addresses card).



When you open the FAB and select a different app, such as Path Analysis, only the address and name listed at the top of the Details screen are populated in the Path Analysis app.



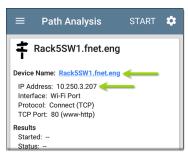

To open another screen or app with a different address, open the Addresses card, and select another address to view its Details screen.

## **Device Types**

The Discovery app lists and analyzes the types of devices explained in this section. Different data may be available to the AirCheck G3 depending on the device type, how it was discovered, and your configured settings.

See Discovery Settings for SNMP Configuration and Devices Discovered Through Other Devices options.

For descriptions of the different Details cards and screens, see Discovery Details.

The images in the rest of this section represent an example of the data Discovery may display for each device type.

#### **Routers**

AirCheck G3 discovers IP routers by monitoring traffic and querying hosts.



### **Switches**


Switches are also discovered by monitoring traffic and querying hosts.



### **Unknown Switches**

Unknown switches are detected indirectly by analyzing traffic going through surrounding switches. The AirCheck G3 cannot identify the switch, but it can sense where a switch is active on the network via the device MAC addresses in that space.

The AirCheck G3 numbers the switches as they are discovered. (These numbers may change each time the discovery process runs.)

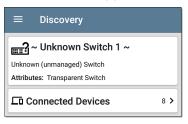

The Unknown Switches Details screen shows the number of devices connected to the switch. Tap the Connected Devices card to view the connected devices, which may provide clues about the location of the unknown switch.


### **Network Servers**

Network servers include NetBIOS, DHCP, and DNS servers.



### **Hypervisors**

VMware hypervisors are discovered via SNMP. The hypervisor's SNMP agent must be enabled for the AirCheck G3 to discover it and classify it as a hypervisor.

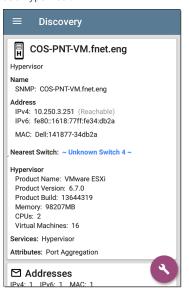

### Virtual Machines

VMware virtual machines are discovered from VMware client table in SNMP-enabled VMware hypervisors. Devices are also classified as Virtual Machines if they have a VMware MAC.



### Wi-Fi Controllers

AirCheck G3 can discover SNMP enabled Wi-Fi controllers, including Cisco and Aruba Wi-Fi Controllers



### Access Points (APs)

The AirCheck G3 discovers APs through wireless packet analysis and SNMP queries with a linked connection through a management or test port.



See also APs in the Wi-Fi analysis app.

### Wi-Fi Clients

Wireless clients are discovered through wireless packet analysis and SNMP queries with a linked connection through a management or test port.



See also Clients in the Wi-Fi analysis app.

### **VoIP Phones**

VoIP discovery provides visibility into the VoIP and layer 2/3 configuration of the network.



### **Printers**

The AirCheck G3 identifies IP printers via the SNMP Printer MIB and IPX printers via diagnostic requests and queries.



### **SNMP Agents**

SNMP agents are discovered using SNMP queries. See SNMP Configuration.


NOTE: If AirCheck G3 cannot discover the SNMP agents on your devices, they may be connected to another subnet, like a management subnet. Solve this issue by adding the subnet to Extended Ranges.



See also SNMP Details.

### NetAlly Tools

The AirCheck G3 can also identify other NetAlly network testers, including AirCheck G3, AirCheck G2, OneTouch AT, LinkRunner (AT and G2), and Test Accessory.

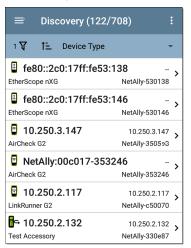

The image above shows several NetAlly tools as they appear in the main Discovery list.

AirCheck G3 displays all the information it can gather about each tool on the Details screen.



### Hosts/Clients

Other hosts and clients are discovered by traffic monitoring and querying. If a host cannot be identified as belonging to one of the other categories (Switch, Router, VoIP device, etc.) then it is categorized as Host/Client.



NOTE: A MAC address that begins with LocalAdm indicates that the address has been locally randomized to prevent unauthorized tracking.

### ■ Discovery

### **空** localAdm:227367-a99246

Wi-Fi Client

Address

MAC: localAdm:227367-a99246

802.11

Channels: 48

Type: --

AP: localAdm:decbac-51a778


SSID: ngenius&sniffer

Security: WPA2-E


## **Discovery Settings**

Discovery configurations include SNMP settings, Community Strings and the order in which they are used, Credential Sets, Ports, Extended Ranges, and process intervals.

Access the Discovery settings screen by sliding out the left-side navigation drawer or tapping the menu icon , and selecting **Discovery**Settings.

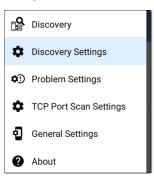

(Tap here to skip to Problem Settings, TCP Port Scan, or back to General Settings.)

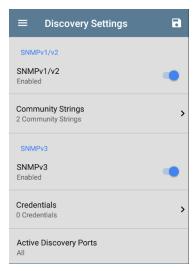

### To adjust Discovery Settings:

 On the Discovery Settings screen, tap each field described in this topic, as needed, to select or enter your required configuration elements.

- When you finish configuring, tap the back button to return to the main Discovery List screen.
- 3. Then, Refresh Discovery from the action overflow menu to apply the new configuration.

You can load, save, import, and export configured Discovery settings by tapping the save button on this screen.

- Load opens a previously saved Discovery configuration.
- Save As saves the current configuration with an existing name or a new custom name.
- Import: Import a previously exported settings file.
- Export: Create an export file of the current settings, and save it to internal or connected external storage.

See Managing Testing App Settings for more instructions.

After you have saved a configuration, the custom name you entered appears in the title of the

Discovery Settings screen. In the image below, a user has saved a custom configuration named "South Campus," which replaces the "Discovery Settings" screen title.



## **SNMP Configuration**

The MIB (Management Information Base) of SNMP managed devices contains information such as device configuration, interface configuration and statistics, SNMP tables (like host resource and route tables) and VLAN details. Through the Discovery process, the AirCheck G3 interrogates MIBs to determine the device type, ports, connected subnets, and other data.

SNMP credentials are required to communicate with the SNMP agents on your interconnect


devices, such as switches and routers. The Discovery Settings allow you to enter the SNMP community strings and credential sets the AirCheck G3 uses to communicate with those devices.

### SNMPv1/v2

Tap the toggle button to enable or disable SNMPv1 and v2 queries. This setting is enabled by default and uses the Community Strings configured in the next setting.

### **Community Strings**

Tap this field to open the Community Strings list screen and add, edit, or remove community strings.

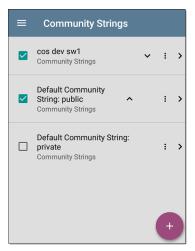

The AirCheck G3 uses the checked strings in the order shown on this screen. If it does not receive a response from the queried device using one string, it sends the next string.

NOTE: This screen and others in the Discovery settings operate much like the AutoTest Profile Group screen.

On the Community Strings screen, you can perform these actions:

- Check or uncheck the boxes to include or exclude a string from use in the current Discovery configuration.
- Tap the up and down arrows to change the order in which the AirCheck G3 uses the strings to query a device.
- Tap the action overflow icon to Duplicate or Delete a Community String.
   CAUTION: Deleting a string removes it from all saved Discovery configurations. To remove a string from the current Discovery configuration only, simply uncheck it.
- Tap the FAB to add new Community Strings.
- Tap any Community String's row to edit the string and its description.

TIP: To minimize discovery time, uncheck or delete all unused community strings, as every failed query extends the discovery time. You can also arrange the community strings in the order they are used most.


#### SNMPv3

Tap the toggle button to enable or disable SNMPv3 queries. This setting is enabled by default and uses the Credentials configured in the next setting.

NOTE: If this setting is enabled, but no SNMPv3 credentials are configured, the AirCheck G3 discovers the engine IDs of all SNMPv3 agents. This is a good way to discover if a device support SNMPv3.

## Credentials


Tap this field to open the Credentials list screen.

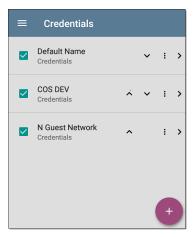

This screen interface works like the Community Strings screen above. AirCheck G3 uses the Credentials in the order shown.

- Check or uncheck the boxes to include or exclude a set of Credentials from use in the current Discovery configuration.
- Tap a row to edit its credentials.

Tap the FAB to add new credentials.

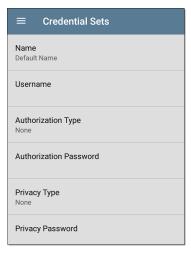

On the Credentials Sets screen, tap each field to select or enter the credentials required.

#### Name

Tap the **Name** field to enter a custom name for the Credential Set.

#### Username


Tap to enter the SNMPv3 username.

## Authorization Type and Password

AirCheck G3 Discovery supports two SNMPv3 Authorization types: HMAC-SHA and HMAC-MD5. If Authorization is required, enter the appropriate password.

## Privacy Type and Password

AirCheck G3 Discovery supports four Privacy Types: CBC-DES, AES-128, AES-192, AND AES-256. If needed, enter the appropriate Privacy Password.

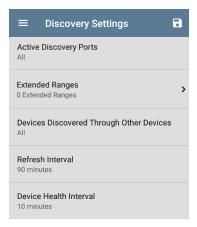

## **Active Discovery Ports**

Tap **Active Discovery Ports** to select which port Discovery uses to gather data. Discovery runs through the enabled ports only if an active network link is available.

Discovery uses all of the ports by default.
Uncheck them to limit which ports are used.

See Selecting Ports for explanations of the different ports.

## **Extended Ranges**

The Extended Ranges screen allows you to enter addresses of non-local subnets on which you want the Discovery process to run. Discovery sweeps all of the enabled Extended Ranges for devices, whether directly connected or off-net. The AirCheck G3 performs Ping sweeps on subnets that are not directly connected and ARP sweeps on connected subnets.


When the SNMP agents are on a subnet that is separate from the hosts (PC's and servers) subnet, additional networks must be configured for discovery:

- The network address of the remote subnet you want to discover, meaning the host (PC and server) network.
- The network address of the switch and router SNMP agents in the remote subnet, e.g. a management subnet.

Configure both SNMP Credential Sets and Extended Ranges to ensure that the AirCheck G3


always discovers management subnets, regardless of your network port connections.

Tap the field to open the Extended Ranges list screen.

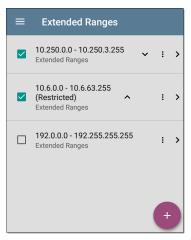

 Check or uncheck the boxes to include or exclude an extended range from the current Discovery configuration. Unchecked Extended Ranges do not affect the default Discovery behavior in the current configuration, but they may be used in other Discovery configurations (like Community Strings and Credentials).

- Tap any Extended Range's row to edit its address and subnet.
- Tap the FAB to add new extended ranges.

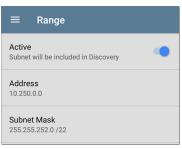

## Active vs. Restricted Subnets

For each configured Extended Range, you can tap the toggle button to switch from **Active** to **Restricted**. Discovery is performed on Active Ranges. Setting a Range to **Restricted** disables

the discovery process on that network or subnet, meaning the AirCheck G3 will *not* communicate with devices within the restricted range.



- Restricted Ranges take precedence regardless of the order in which they are listed on the Extended Ranges screen.
- You can Restrict a part of a configured Active Extended Range.
- You can also restrict a single device, whether it is part of an Active Range or not. To enter a single device that you do not want discovered, enter its IP address in the Address field, and set the Subnet Mask field to 255.255.255.255.

#### **Address**

Tap the **Address** field to enter or select an IP address range.




Tap the drop-down menu to select a previously Discovered Subnet. The Address field is automatically populated with your selection.

#### **Subnet Mask**

Tap this field to select a subnet mask. If you select an already Discovered Subnet, the Subnet Mask is also pre-populated.

## Devices Discovered Through Other Devices

By default, AirCheck G3 discovers devices from SNMP tables of other devices. If you do not want Discovery to automatically find devices from SNMP tables of the device types listed here, you can uncheck their boxes.

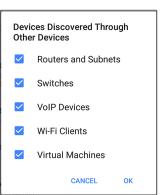

### Routers and Subnets

When the Routers and Subnets checkbox is enabled, any discovered routers are included in discovery results. In addition, if Discovery has SNMP access to a discovered router, its routing tables are read, and the next hop routers are added to the Discovery list. If any local subnets are available in the routing tables, these are also

added to the Subnets list. This process continues until all the available SNMP credentials are tried for the added routers.

NOTES: Discovery does not sweep every discovered subnet; discovered subnets are only added to the subnets list. To perform discovery in a specific subnet, see Extended Ranges above.

If another site has routers you want to discover using this process but there isn't a local next hop link from this site, you can add one of the routers of that site to discovery. The process then runs from that router and finds the routers on that site as well. Add the subnet of the router or just the router's IP address with a mask of /32 to Extended Ranges.

## Switches

When the Switches checkbox is enabled, discovery adds any switches that it finds in SNMP neighbor tables of other devices to the Discovery list.

For example, when AirCheck G3 is reading the CDP and LLDP caches of one switch, it contains other switches. If this option is enabled, the AirCheck G3 adds those other switches, even if they are not in discovery ranges.

NOTE: To Discover switches at another site, add one of the switches of that site to Discovery Extended Ranges.

#### **VoIP Devices**

When the VoIP Devices checkbox is enabled, discovery adds any VoIP devices that it finds in SNMP tables of other devices regardless of the subnet. These are usually found in the LLDP-MED tables of the switches. Enabling the Switches option provides the best chance of finding all your VoIP devices.

#### Wi-Fi Clients

When the Wi-Fi Clients checkbox is enabled, discovery adds any wireless clients it finds in SNMP tables of APs and Wireless LAN Controllers. Enabling this option along with Switches provides best chance of finding all Wi-Fi clients.

NOTE: Enabling Wi-Fi Clients here may cause Wi-Fi devices to show in Discovery that do not appear in the Wi-Fi analysis app because Wi-Fi analysis only shows what it detects on wirelessly transmitted packets.

## Virtual Machines

When the Virtual Machines checkbox is enabled, discovery adds any virtual machines that it finds in SNMP tables of other devices. These are usually found in the ESX host > SNMP tables. Adding the subnets of your ESX hosts to Extended Ranges helps with finding your virtual machines

## Refresh Interval

This setting controls the time between runs of the Discovery process. By default, Discovery runs every 90 minutes. Tap the **Refresh Interval** field to select a different interval, up to 8 hours.

The Manual option turns off regular automatic Discovery, and the process refreshes only if you select Refresh Discovery from the main Discovery list screen.


## **Device Health Interval**

Discovery automatically runs a set of network health tests to search for network Problems, such as high utilization, discards, or errors on all discovered interfaces and device resources.

The selected time Refresh Interval is the minimum time between each run of the Device Health tests. Tap the field to disable Device Health testing or to change the interval from the default of 10 minutes to 30 or 60 minutes.

Disabling the Device Health testing affects the types of Problems that Discovery can detect.

See also Problem Settings.

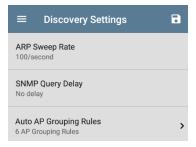

## **ARP Sweep Rate**

Tap the ARP Sweep Rate field to select a rate between 5 and 100 ARP requests per second.

This setting can prevent the AirCheck G3 from shutting down ports that sense too many ARPs are being sent.

## SNMP Query Delay

This function controls how long your AirCheck G3 waits between SNMP queries to key tables that can cause CPU spikes in the SNMP agents, including the ARP cache, IP address table, routing tables, and FDB tables.

The default SNMP Query delay is No Delay. When querying the key large tables, the AirCheck G3 asks for more data as soon as a response has been received. You can select a 1 or 5 second delay if needed.


## **Auto AP Grouping Rules**



This feature allows you to adjust the AP Grouping Rules that control how the AirCheck G3 groups BSSIDs with their Access Points, such that they are grouped appropriately for your AP types and environment.

For example, if BSSIDs from different APs are being grouped together inaccurately, you can disable the rule that is causing the grouping. If your AP manufacturer uses a BSSID variation scheme that is not covered by one of the six default rules, you can add a new rule.

Tap the setting to open the AP Grouping Rules list screen. The image below shows the six default AP Grouping Rules on the AirCheck G3. The **Prefix filters** in all of the default grouping rules are set to 000000-000000.

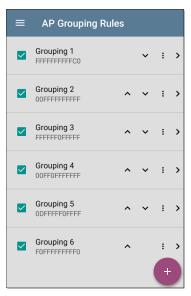


As with other settings list screens on the AirCheck G3, you can enable or disable, add, delete, and edit the grouping rules from this screen.

- Check or uncheck the boxes to include or exclude a rule from use in the current Discovery configuration.
- Tap the action overflow icon to Duplicate or Delete a rule.

**CAUTION**: When you delete a rule, you delete it from all saved Discovery configurations. To remove a rule from those used by the current Discovery configuration, simply uncheck it.

- Tap the FAB to add a new rule.
- · Tap any rule's row to edit it.

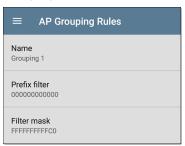

#### Name

If desired, enter a custom name for a default or new rule. If you intend to use a Prefix filter, a best practice would be to name the rule with the AP manufacturer's name.

## **Prefix filter**

Use the **Prefix filter** to create a rule for a specific AP manufacturer's BSSID scheme, meaning a rule for just one AP manufacturer prefix. The default rules all contain a default Prefix filter of 000000-0000000.

If a Prefix filter is non-zero, its second and third bytes are compared to discovered BSSIDs before the Filter mask (described below) is applied. These two bytes must match exactly, or the two BSSIDs are not grouped together. This behavior allows you to specify a fairly open Filter mask, because the mask applies only to one manufacturer.

For example, you could have Cisco APs whose BSSIDs all start with b83861. By specifying a Prefix filter of 003861-000000, you limit the grouping rule to just those APs.

## Filter mask


The Filter mask specifies what parts of the BSSIDs are compared when determining AP groupings.

For example, default **Grouping Rule 1** has a Filter mask of FFFFFF-FFFFCO, so any BSSIDs that vary only by the lower six bits are grouped together.

# **Problem Settings**

The Problem settings determine which issues are detected and displayed by *both* the Discovery and Wi-Fi Analysis apps as well as the thresholds for enabled problems, such as Packet Discards and Utilization.

Access the Problem Settings screen by sliding out the left-side navigation drawer or tapping the menu icon in the Discovery app, and selecting Problem Settings.

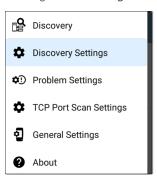


(Tap here to go to Discovery Settings or back to General Settings.)



Problems are categorized as Network or Wi-Fi. NOTE: The Wi-Fi Problems configured here also control the Problems detected and displayed in the Wi-Fi Analysis app.

As with Discovery Settings, you can save, load, import, and export configured Problem Settings by tapping the save button on this screen. See Managing Testing App Settings for more instructions.

Tap the row for each to enable or disable the problem types and set thresholds where applicable.

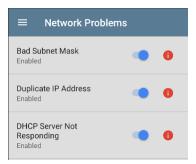

All Problem types are enabled by default. Tap the toggle button to the right to disable each one.


Tap the red ①, yellow ①, or blue ① information icons to the right of each Problem to read a detailed description and recommended actions. Red icons indicate Failure conditions and yellow indicate Warning conditions. Blue icons are simply informational.

When you finish configuring, tap the back button to return to the main Discovery screen.


# **TCP Port Scan Settings**

The TCP Port Scan feature checks for open ports on the current device from the Discovery Details screen's FAB. The AirCheck G3 scans many ports simultaneously and reports the open port's numbers.

Access the TCP Port Scan Settings by sliding out the left-side navigation drawer or tapping the menu icon in the Discovery app.

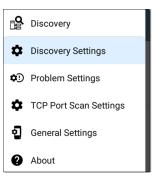

Select TCP Port Scan Settings.

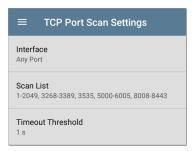

**Interface:** Tap the field to select the AirCheck G3 port from which the port scan runs. (See Selecting Ports for explanations of the different ports.)

**Scan List:** This setting lists which port numbers are tested during the port scan. Tap the field to enter different port numbers or ranges, separated by commas.

**Timeout Threshold:** This value controls how long the AirCheck G3 waits for a response from each port. Once all the ports in the Scan List have had this amount of time to respond, the scan ends, and the TCP Port Scan results screen

lists the ports that responded within the threshold.

See also the TCP Port Scan results card and screen.

AirCheck G3 User Guide



The Wi-Fi Analysis app scans the wireless channels in your environment to discover and gather data about the devices and traffic on your Wi-Fi networks. Wi-Fi discovery begins when you power on the AirCheck G3, and measurements update with each channel scan cycle.

The AirCheck G3 supports 802.11a/b/g/n/ac/ax technologies and operates in both the 2.4 GHz and 5 GHz bands. AirCheck G3 can also detect and indicate the 802.11ax media type (known as Wi-Fi 6) being used on APs and Clients, as reported in the wireless management frames.

The Wi-Fi app features separate screens that list and display characteristics of the different devices and elements of your wireless environment. Tap a link below to go directly to the description of the screen listed:

- Channels Map
- Channels
- SSIDs
- APs
- BSSIDs
- Clients

# Wi-Fi Analysis and Discovery

Wi-Fi Analysis uses the Wi-Fi Test Port to scan the channels and acquire information about your wireless networks. If the Wi-Fi Test Port is linked (for instance after running a Wi-Fi AutoTest Profile), the port unlinks and resumes scanning when you open the Wi-Fi Analysis app.

Wi-Fi Analysis is enhanced with data gathered by Discovery. When the AirCheck G3 is linked to a network through one of its Wi-Fi ports, Discovery can obtain information from network layers 3 and above, such as IP addresses, Protocols, and SNMP data.

Therefore, the information Wi-Fi Analysis is able to display also depends on configured Discovery Settings, such as SNMP Community Strings and Credentials, Active Discovery Ports, Extended Ranges, and Device Health testing.

## Wi-Fi App List Screens

To switch between the different Wi-Fi app screens, tap the menu icon (or swipe right) to open the left-side navigation drawer.




The Wi-Fi app's navigation drawer displays a real-time count (in parentheses) of each wireless component AirCheck G3 has detected. Tap an option to open the corresponding screen.

NOTE: The **General Settings** for Wi-Fi control which channels and bands are scanned to populate the Wi-Fi screens. See the **General Settings** topic for more explanation.

## Wi-Fi App List Screens

The Wi-Fi app screens, except for Channels Map, display a list of discovered items, much like a Discovery App list screen. You can Filter and Sort the list by different characteristics and tap a network component's card to view its details.

The example image below shows the APs screen with common Wi-Fi app functions:

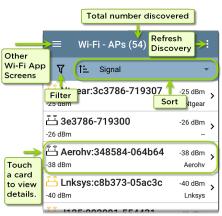

Like in AutoTest and other AirCheck G3 screens, the icons in Wi-Fi analysis change color to indicate a Warning or Failure condition. The app also displays icons in Blue to indicate Problem-related information that does not constitute a warning or failure, and Green to indicate that a previous Problem has been resolved.


NOTE: To adjust the Problem Settings, access them from the Discovery app's left-side navigation drawer. Problem Settings in the Discovery app are also applied to the Wi-Fi Analysis app.

The Wi-Fi list screens, and other app screens with long lists, support fast scrolling. Touch and drag the scrollbar handle to the right of the list to scroll quickly up and down.



## Wi-Fi List Cards

The information displayed on each card varies depending on the selected Sort characteristic and the data the AirCheck G3 was able to discover. For example, a card on the Channels list screen displays the channel number, frequency, connected APs, and utilization.

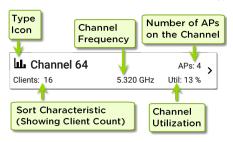

The lower left field displays the characteristic by which the list screen is currently sorted. In the image above, the Channels list is sorted by Client Count.

If a device is grayed out, the AirCheck G3 no longer detects a signal from it. The client card shown below indicates that the "Rspbry" client cannot be detected currently.

The time the device was Last Seen, meaning last detected by the AirCheck G3, is shown on the device's Details screen.





# Filtering in the Wi-Fi App

Each Wi-Fi Analysis screen has different Filter options that are appropriate for the network component type you are analyzing.

Tap the filter button  $\forall$  near the top left of the Wi-Fi screens to set filters that control which network components are displayed. You can also filter the **Channels Map > Overlap** screen, as shown below:



The number in parentheses shows how many active network characteristics are detected for each category. (The example shows (5) active Channels, (9) SSIDs, and so on.)

Tap a category to select filters by tapping the checkboxes or radio buttons.

Security (3)	^
☐ WPA2-E (2)	
<b>✓</b> WPA2-P (9)	
☐ WPA-P (5)	

Under each category, the number of discovered APs is shown for each characteristic. (In the example above, there are (3) Security types detected and (9) APs using the WPA2-P Security type.)

In this example, the Overlap screen shows only those APs that fall under your chosen filter parameters.




When filters are selected, those active filters are displayed at the top of the Filters screen.

- Tap the X button to the right of each filter to clear it.
- Tap the clear filter icon at the top right to clear all filters.

Back on the Overlap screen, the number of active filters displays to the left of the filter icon, like this:  $2 \ \gamma$ .



If the screen is a list, like the APs screen below, the screen title shows the number of filtered devices out of the total discovered devices (5 filtered devices out of 16 total).

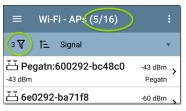



# Sorting in the Wi-Fi App

Tap the Sort bar or down arrow to open the Sort drop-down menu. Each list screen supports relevant Sort options based on what you are viewing. The APs screen Sort options are shown below as an example.



Select a Sort option to order the list based on your selected characteristic.



The selected Sort option displays in the Sort bar above the list, and the sort characteristic for each item is shown under the type icon and name. In the image above, the discovered APs are sorted by SSID Count, which is shown below each AP iron


Tap the sort order icon to switch the sort order between normal and reverse order.

Wireless devices and IDs are sorted in groups. Those with resolved names appear at the top (in normal order), and then devices with only IPv4,

IPv6, and MAC addresses appear below, respectively. Reversing the normal sort order reverses the devices within the groups but does not change the order of the groups.

# Refreshing Wi-Fi

Tap the action overflow icon i at the top right of the screen in any of the Wi-Fi screens (Channels Map, Channels, SSID, APs, BSSIDs, or Clients), and select **Refresh Wi-Fi** to clear and repopulate the Wi-Fi app screens with data.

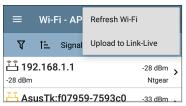

# **Clearing All Problems**


Tap the action overflow icon i at the top right of the screen in any of the Wi-Fi screens (Channels Map, Channels, SSID, APs, BSSIDs, or

Clients), and tap **Clear All Problems** to clear all detected problems on all Wi-Fi lists.

See Wi-Fi Problems Screen for more information.

### **Setting Authorization**

You can also use the Authorization to sort the BSSID and Clients lists. From the BSSID or Clients list screen, tap the action overflow icon at the top right and select **Set Authorization** to see how these devices are currently categorized and the number of devices in each category.

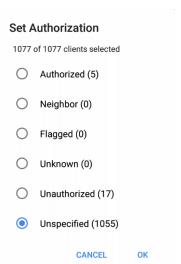

See "Assigning a Name and Authorization to a Device" on page 466 for more information.

#### Uploading Wi-Fi Results to Link-Live

Tap the action overflow icon at the top right of the screen in any of the Wi-Fi screens (Channels Map, Channels, SSID, APs, BSSIDs, or Clients), and tap **Upload to Link-Live** to send the current Wi-Fi results to the Analysis page on Link-Live.com.

NOTE: Discovery app results automatically upload with the Wi-Fi results.





#### Wi-Fi Snapshot Name

20190812 210303

Comment

3rd floor

Job Comment


Union Hall



See the Link-Live chapter for more information.

### Wi-Fi Details Screens

Tapping any card on a list screen—SSIDs, APs, BSSIDs, or Clients—opens the Details screen for that device or network ID.

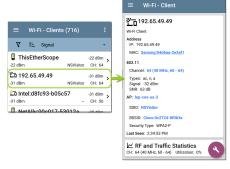


On the Wi-Fi Details screens, you can tap any blue linked name or address to open a Discovery or Wi-Fi app screen for the linked device

NOTE: Non-underlined links open in the same app (in this case Wi-Fi), and under-

<u>lined links</u> open in a different app (in this case Discovery).


Each Details screen shows additional information about the selected item, any Problems detected by the AirCheck G3, and counts for other connected network devices or IDs.

See also Data Fields on the Top Details Card in the Discovery chapter. Many of the Discovery data fields are the same as those shown in Wi-Fi Details.

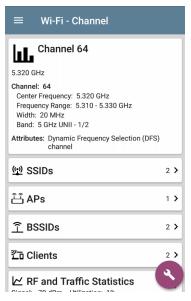

The Channel Details screen above shows how many SSIDs, APs, BSSIDs, or Clients are detected on Channel 64. Tap the lower cards in Wi-Fi Details to open a list screen that is filtered for the network component you are examining.

If you select BSSIDs on the Details screen for Channel 64, the BSSIDs screen opens and filters for BSSIDs found on Channel 64 only.

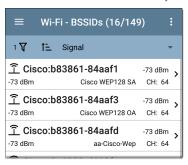

See the topics for each Wi-Fi app screen type (SSIDs, APs, etc.) for more discussion of the corresponding Details screen.


#### Wi-Fi Problems Screen

If any of the enabled Wi-Fi Problems are detected, the Problems card appears on the Wi-Fi Details screen.



The Problems card shows the icon color of the highest severity problem, and the number of detected Warning, Failure, Information, and Resolved conditions for the device or network component.

Tap the card to open the Problems screen.

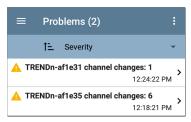

On the Problems list screen, tap a Problem's row to read a detailed description.

You can also tap the sort field to sort the list by Severity or by the time when the problem was First Detected. To clear a problem, tap the action overflow button i at the top right, and then tap Clear Problem.

See Problem Settings in the Discovery app to select which Wi-Fi Problems are detected and displayed by your AirCheck G3.

#### RF and Traffic Statistics Overview

The Channel, BSSID, and Client Details screens can display RF and Traffic Statistics if any traffic is detected.


This section describes the common elements of the RF and Traffic Statistics screen. See the topic for each type of Details screen for differences.



The RF and Traffic Statistics card shows the Channel number or the Signal strength of the strongest AP on the channel and the channel's Utilization percentage.

Tap the card to view graphs of Signal, Noise, Utilization, and Retries.

To pan and zoom on the graphs, you can swipe, double tap, and move the slider. See the Trending Graphs topic for an overview of the graph controls.

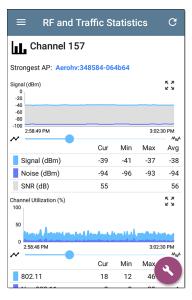

**Strongest AP:** The AP on the channel with the strongest signal

Under each graph, a legend table displays the Current, Minimum, Maximum, and Average


measurements. The Current column contains measurements from the last second. Min, Max, and Avg columns show cumulative measurements gathered during the time the RF and Traffic screen has been open.

Tap the refresh button C at the top of the screen to clear and restart the measurements.

**Signal (dBm) graph**: Plots the signal strength in dBm of the selected AP or AP with the strongest signal on a channel

- Y-axis scales to the max Tx Rate supported by the Access Point, not the Wi-Fi Client.
- Signal The AP's signal strength in dBm
- Noise The noise level in dBm on the channel used
- SNR The network's signal-to-noise ratio, a measure of signal strength relative to noise, measured in decibels (dB)

Channel Utilization (%) graph: Plots percentage of the channel capacity being used by 802.11 devices and by non-802.11 interference.

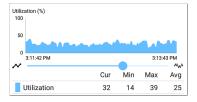

**Retries (% of packets) graph**: Plots percentage of transmitted packets that are retry packets.



- Retry Rate % The percentage of total packets that are retry packets
- Retry Pkts The number of retry packets

 Total Pkts - The total number of transmitted packets

# **Locating Wi-Fi Devices**


You can use your AirCheck G3 to locate APs and Wi-Fi clients from the Channels Map screen for BSSIDs and Clients.

To begin a location action:

- 1. Start the Wi-Fi app.
- From the menu icon , select BSSIDs or Clients.
- Select the BSSID or Client that you want to locate.
- Tap the FAB menu icon in the lower right corner of the screen. This displays the FAB pop-up options.



Tap Locate. This opens the Locate screen and causes your AirCheck G3 to "listen" for the BSSID or Client wireless devices you want to find using either the internal antennas or the optional external antenna (sold separately or in kits).

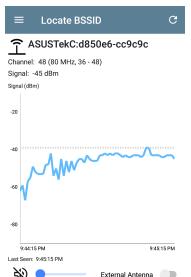


- The test unit can emit an audible tone that increases in rate and pitch as the signal strength of the device increases (as you get closer to it). Tap the speaker icon ⋈ to turn sound on or off. Use the volume slider by the speaker icon to turn the sound up or down. (If you have an external sound device attached, volume is controlled by the buttons on the side of your unit.)
- The External Antenna toggle enables the optional external antenna for BSSID or Client location.
  - In areas with many rooms, like a hospital or school, the internal antennas are more effective. See Using the Internal Antennas to Locate below
  - In large, open areas, the external antenna can help locate devices more quickly. See Using the Optional External Antenna below.

#### **Locating with the Internal Antennas**

AirCheck G3 uses the internal antennas by default.

- Navigate to the RF and Traffic Statistics screen for the BSSID (AP) or client you need to locate.
- 2. (Optional) Tap the speaker icon to toggle the audible tone on or off.

Divide the area you want to search into four sections.

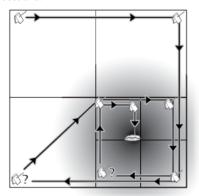

- Go to one corner of your search area, and note the device's signal strength on the Signal graph.
- Go to the other three corners of the area, and note the signal strength at each corner.
- 6. Go to the section with the strongest signal.


Repeat steps 3 through 6 until you find the device.

If you still cannot find the device, try looking on the floors above or below you. If you cannot find a client, try locating the AP to which the client is connected first.

#### Locating with the Directional External Antenna


In large, open areas, the directional external antenna can help determine the direction of a signal source more precisely than the internal antennas. Visit <u>NetAlly.com</u> for purchasing information

 If using the Directional Tri-band (2.4, 5, and 6 GHz) external antenna, screw the antenna's RP-SMA connector into the antenna port on the top of the AirCheck G3 (shown below). If using the Dual-band (2.4 and 5 GHz) Flag antenna, screw the external antenna cord into the antenna port.

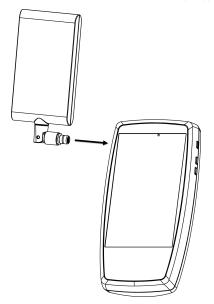


On the RF and Traffic Statistics screen, tap the External Antenna toggle to enable the external antenna.

- 3. (Optional) Tap the speaker icon to toggle the audible tone on or off.
- Divide the area you want to search into four sections.

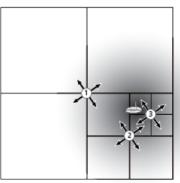

- 5. Go to the center of your search area.
- For the Directional Tri-band external antenna, use the swivel joint on the RP-SMA connector to angle the antenna so that the "target" silkscreen on the antenna points toward your search area, as shown below.

Point the antenna towards each corner of the area. To get the best measurements, hold it at a constant height and above barriers such as cubicle walls.

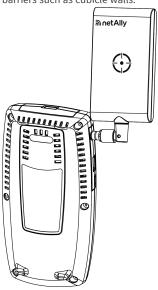

For the Dual-band Flag antenna, point the front edge of the antenna toward your search area, as shown below.



- 8. Go to the middle of the section with the strongest signal.
- Repeat steps 4 through 7 until you find the device

# Assigning a Name and Authorization to a Device

The Wi-Fi and Discovery apps provide the option to assign a **Name and Authorization** to any discovered device with a MAC Address or BSSID.

Assigning a User Name and/or Authorization status does not change any of the information on the actual device, only how the device's

information displays on the AirCheck G3 on which the Name and Authorization are assigned.

You only need to assign a Name and/or Authorization to one BSSID or MAC address for a device with multiple addresses. Names and Authorizations are saved in the internal authname.txt file and remain set as the unit powers off and on.

This feature allows you to quickly identify your known devices and categorize them with the following statuses:

- Authorized: For devices approved for use on your network
- Neighbor: For devices owned and controlled by neighboring organizations
- Flagged: To give visibility to a specific device
- Unknown: For devices that have not been identified or classified
- Unauthorized: For devices that should not be on the network and may present a security risk

Unspecified:Default unassigned Authorization status

While the Authorization statuses are designed with these intended meanings, you can use them however you like for your purposes.

Once set, the custom User Name is shown in other NetAlly apps wherever device information is displayed. The Authorization is displayed in the Discovery and Wi-Fi apps.

You can sort and filter by the assigned Authorization in the Wi-Fi and Discovery apps. When a list is sorted by Authorization (in normal sort order), the devices with Authorizations of highest concern appear at the top. The image below shows the BSSIDs list screen sorted this way:




# Applying a Name and/or Authorization

Access the Name and Authorization function from the floating action menu on a Discovery Details screen or a Wi-Fi Details screen for a BSSID or Client.

NOTE: When applying an Authorization to a device with multiple BSSIDs or MAC addresses, the Authorization status is only applied to the MAC address/BSSID displayed on the Details screen, as shown in this section.

 Tap the FAB on a Discovery or Wi-Fi Details screen for a device with a discovered MAC/BSSID.

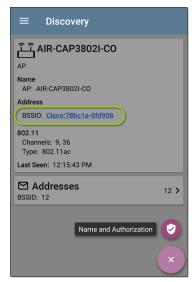

The example above shows an AP's Details screen in the Discovery app.

2. Select Name and Authorization to open the dialog.



 In the Name and Authorization dialog, tap the User Name field to enter a customized name, if desired. In the image above, the user has entered the name "Conference Room AP."

NOTE: It is possible to *either* enter a user name or select an Authorization. You do not have to do both.

- Select the radio button to assign an Authorization status as needed.
- 5. Tap **OK** to apply.

Once applied, the User Name and Authorization are displayed on the Discovery Details screen.



The user-assigned name for the AP and Authorization for the BSSID also appear on the Wi-Fi BSSID Details screen, as shown below.



NOTE: If different Authorization statuses are assigned for different BSSIDs or MAC addresses on the same device, the Authorization of highest concern appears on the device's Details screens.

### Changing or Clearing a User Name or Authorization

Open the Name and Authorization dialog again for the same BSSID or MAC address on a device to reassign or clear the assigned User Name or Authorization. If the Name or Authorization do not update as expected after a few minutes, you may have assigned them to multiple addresses for the same device.


To view all assigned Authorizations for a device, open the Discovery or Wi-Fi Details screen for the device and view the Addresses or BSSIDs screen. Then, sort by Authorization.


■ Addresses (14)	
↑ <u>=</u> Authorization	~
Cisco:b83861-84aaf3	CH: 36 > WEP128 OA
Cisco:b83861-84aaf1	CH: 1 > o WEP64 OA
Cisco:b83861-84aafc Authorized Cisco	CH: 1 > WEP128 OA
Ĉ Ciasa:b02061 04saf0	

To reset a device's User Name and/or Authorization to the unassigned defaults, open the Name and Authorization dialog, clear the User Name field and leave it blank, and select the Unspecified Authorization. Then, tap OK.

### Revising or Importing authname.txt

Custom Names and Authorizations are stored in the authname.txt file in the AirCheck G3's internal storage .settings folder, accessible from the Files app.

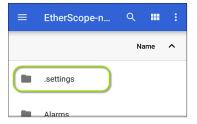


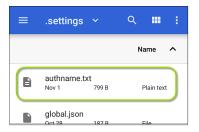

NOTE: In the Files app, you may need to tap the action overflow icon at the top right and select Show Internal Storage to navigate to the EtherScope-nXG folder and sub-folders.

If desired, you can manually edit this file on the AirCheck G3 unit, or you can create a new authname.txt file on a PC and import it onto your unit in the same file location.

The default authname.txt file on your unit contains instructions on how to format your Name and Authorization entries.

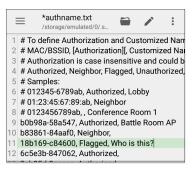



To edit the authname.txt file on the AirCheck G3, third-party apps, such QuickEdit Text Editor, are available from the NetAlly App Store .

For help importing a file, see the Managing Files topic.

NOTE: After importing and overriding the authname.txt file, NetAlly recommends Refreshing Discovery in the Discovery app or restarting your unit.


# **Channels Map**

The Channels Map screens provide charts of channel utilization with AP coverage and overlap. Swipe right or left or tap the tab names to switch between the chart types: Map, Map 6E, or Overlap.



# Map and Map 6E Tabs

The Map and Map 6E tabs display a bar graph of 802.11 and non-802.11 utilization, retry percentage, APs for each channel, clients for each channel, and illegal channels. (The Map 6E tab is for 6 GHz channels only.)

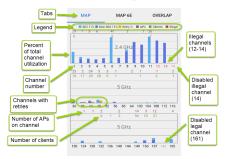

- The blue vertical bars show the percentage of each channel's capacity used by 802.11 devices (light blue) and non-802.11 interference (dark blue).
- Yellow bars next to the blue bars show the percentage of retries. In the example above,

Channels 1 and 3 show a small percentage of retries.

- Channel numbers are listed on the x-axis and utilization percentage on the y-axis.
- Illegal channel numbers—channels that are not legal for the country that your unit is set to operate in—are shown in bright red. In the example above, Channels 12, 13, and 14 are illegal.
- Disabled legal channels are shown in light gray. In the example above Channel 161 is disabled.
- Disabled illegal channels are shown in light red. In the example above Channel 14 is an illegal channel and disabled.
- AP counts for the APs' primary channel are shown in dark red at the top of the column for each channel. In the example below, Channel 161 has 7 APs. (Channels that do not have APs can still show 802.11 utilization because of overlap from adjacent channels.)

- Client counts for the channel are shown in green near the top of the column for each channel. In the example below, Channel 161 has 15 clients.
- Tap a Channel's column on the Map or Map 6E graph to select and highlight the channel. This displays the CHANNEL DETAILS and SPECTRUM links at the bottom of the screen. In the example below, Channel 161 is highlighted.




The Channel Details screen lets you examine the addresses and devices operating on the channel and perform a deeper analysis.


The Spectrum link opens the Spectrum app, a Wi-Fi spectrum analyzer that provides data about signal strength and noise.

# Overlap Tab

Tap **Overlap** to view access point channel, coverage, and overlap. This can help you spot potential coverage issues. Each discovered AP is shown as a colored bracket on a graph based on channel coverage (on the x-axis) and signal strength in dBm (on the y-axis).

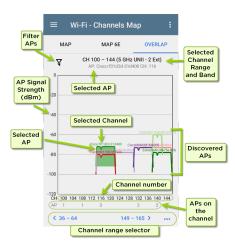


- Tap the Filter icon  $\nabla$  near the top left to open the Overlap Filters screen to control what APs are displayed. You can select filters for channels, SSIDs, Signal, SNR, 802.11 type, or Security.
- Tap an AP on the graph to select it and its primary channel. This highlights the area covered by the channel and lists the channel information above the graph. In the image below, the AP named "Cisco:b8114b-4b7906" on channel 132 is selected.

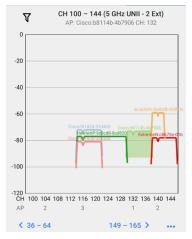

• Double-tap the graph to zoom in or use "pinch" gestures with your thumb and forefinger. Tap the Restore icon or reverse the pinch gesture to return to the full graph. The image below shows a zoomed-in view with the AP named "Cisco:f01d2d-33e300" on channel 116 selected.




- Tap the blue channel selectors at the bottom to view a different Wi-Fi band (2.4, 5 and 6 GHz) and channel range on the graph.
- Tap the action overflow button ••• to open the AP Details or Channel Details screens for the selected AP or Channel or to open the Spectrum Test App.

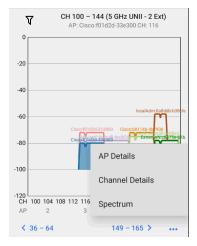

See Filtering in the Wi-Fi App for an explanation of the Overlap screen's filtering options.

# Channels

The Channels list screen displays the characteristics of the wireless Channels as they are scanned in your location.

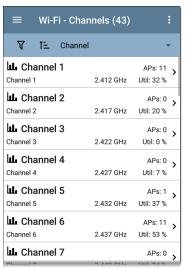


You can Filter and Sort the list to determine which Channels are shown and their order. Refer to the Wi-Fi App List Screens topic if needed.

By default, Channels are ordered by channel number, and each card shows the channel frequency, number of APs, and total Utilization percent.

Tap a Channel card to open the Channel Details screen.

### **Channel Details**

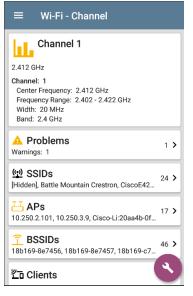

The Channel Details screen displays the channel's Center Frequency under the icon,


along with the Frequency Range, Width, and Band.

Dynamic Frequency Selection (DFS) channels also display an Attributes field that indicates DFS.

#### **Channel RF and Traffic Statistics**

The RF and Traffic Statistics card appears when there is an active AP and Utilization on the channel. See RF and Traffic Statistics Overview in the Wi-Fi Details Screens topic.

#### **Channel FAB**

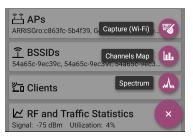


Tap the FAB on the Channel Details screen to:

- Open the Capture app to record a packet capture on the channel.
- Open the Channels Map screen with the current channel selected.
- Open the Spectrum app to view signal measurements for the channel.

# **SSIDs**

The SSIDs list screen shows all the network SSIDs the AirCheck G3 has discovered.

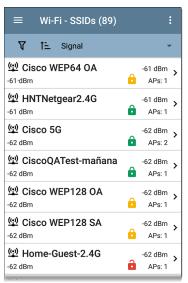

You can Filter and Sort the list to determine which SSIDs are shown and their order. Refer to the Wi-Fi App List Screens topic if needed.


By default, SSIDs are ordered by Signal strength, and each card shows the network security status and number of APs on the network.

The security status icons have the following meanings:

- Green closed lock: All APs on the network use secure protocols, like WPA2 or WPA3.
- Yellow closed lock: One or more APs use WEP or Cisco LEAP protocols, which are less secure
- Red open lock: The network does not have security enabled.

Tap a SSID card to open the SSID Details screen.

### SSID Details

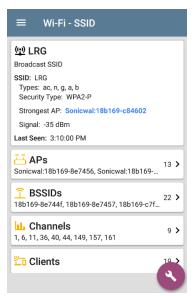

In addition to the Signal and Security Type, the SSID Details displays the AP on the network with the strongest signal, 802.11 Types that the APs in the network support, and the time the AirCheck G3 last detected activity on the network (Last Seen).


AirCheck G3 can detect and display 802.11 types a/b/g/n/ac/ax.

#### SSID FAB

Tap the FAB on the SSID Details screen to **Connect** to the network.




This action opens the AutoTest app and creates a new Wi-Fi profile called "Connect to [SSID]."

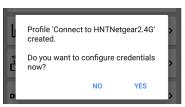

See Creating a Wi-Fi Profile from the Wi-Fi Analysis App in the AutoTest chapter for a more detailed description of this process.

### **APs**

The APs list screen displays all the Access Points discovered operating on your wireless networks.

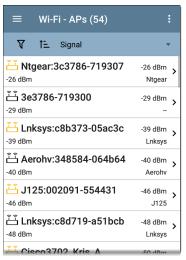


You can Filter and Sort the list to determine which APs are shown and their order.

Refer to the Wi-Fi App List Screens topic if needed.

By default, APs are ordered by Signal strength, and each card shows the Signal strength in dBm and the AP's manufacturer prefix.

Tap an individual AP's card to open the AP Details screen.

### **AP Details**

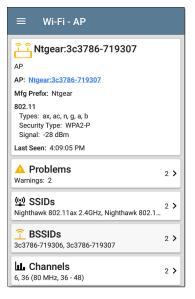

The AP Details screen shows the 802.11 Types the AP supports, the AP's Security Type, and the


time the AP was last detected (Last Seen) by the AirCheck G3.

Tap the lower cards to view the network IDs, Channels, and Clients associated with the AP.

See Wi-Fi Problems for more information about the Problems card.

# **BSSIDs**

The BSSIDs list screen shows the BSSID addresses discovered in your wireless environment.

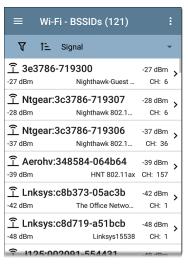

You can Filter and Sort Let the list to determine which BSSIDs are shown and their order. Refer to the Wi-Fi App List Screens topic if needed.

By default, BSSIDs are ordered by signal strength, and each card shows the signal strength, SSID, and channel number on which the BSSID operates. The icons indicate different types of BSSID:



Single, transmitted



Reduced neighbor report, transmitted



Reduced neighbor report, non-transmitted



Multiple, transmitted (6 GHz)




Multiple, non-transmitted (6 GHz)

Colors show the BSSID's status: black indicates normal status, yellow indicates a warning-level problem, and **red** indicates an error-level problem.

Tap a BSSID's card to open the Details screen.

### **BSSID Details**

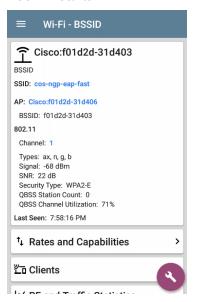

In addition to the characteristics on the BSSID cards, the Details screen displays the following information:

- User-assigned Authorization status (if set)
- Supported 802.11 Types
- Signal-to-Noise ratio (SNR) measurement
- Network Security type
- QBSS station count and channel utilization
- Time activity was Last Seen on the BSSID

BSSID Details also includes cards that link to Rates and Capabilities details, the Wi-Fi Clients list, and BSSID RF and Traffic Statistics details.

### **Rates and Capabilities**

Tap the Rates and Capabilities card to open the full screen.

### ■ Rates and Capabilities

## ASUSTek:7c10c9-7e2e44

BSSID

Rates (Mbps)

Supported: 6, 9, 12, 18, 24, 36, 48, 54

Basic: 6, 12, 24 Country Code: US

802.11n Capabilities SGI 20 MHz: true

SGI 40 MHz: true Max AMPDU: 65535 bytes

 Tx
 Rx

 Max Rate
 300 Mbps
 300 Mbps

 Max Streams
 2
 2

 Max MCS
 15
 15

802.11ac Capabilities

SGI 80 MHz: true SGI 160 MHz: false

Max AMPDU: 1048575 bytes

MU Beamformer: true

Tx Rx
Max Rate 866 Mbps 866 Mbps

This screen shows advanced information about the transmit and receive rates and 802.11 capabilities reported by the beacon.

### Rates (Mbps)

**Supported**: The extended physical (PHY) rates that the AP is configured to support

**Basic**: The basic physical (PHY) rates that the AP is configured to support

### **Country Code**

The 802.11d country code as detected for the country in which you use your device.

### 802.11 Capabilities

- 802.11n capabilities are gathered from HT capabilities in the beacon.
- 802.11ac capabilities are gathered from VHT capabilities in the beacon.
- 802.11ax capabilities are gathered from HE capabilities in the beacon.

### 802.11ax Rates and Capabilities

AirCheck G3 can also report Advanced 802.11ax (Wi-Fi 6) capabilities it sees in the beacon.

≡	Rates a	and Capa	abilit	ies			
Max AM SU Bean SU Bean	Capabilitie IPDU: 4194 Informer: to Informee: to Informer: to	1303 bytes rue rue		Rx			
Max Rate		573 Mbps		573 Mbps			
IVIAX Nate		373 Minha		373 Minhs			
Max Strea	ıms	4		4			
Max MCS		11		11			
Advanced 802.11ax Capabilities  +HTC HE Support: true  TWT Requester Support: false  TWT Responder Support: false Fragmentation Support: 1  Maximum Number Of Fragmented MSDUs/A-MSDUs Exponent: 0  Minimum Fragment Size: None  HE Link Adaptation Support: 0  All ACK Support: false BSR Support: false Broadcast TWT Support: false							

### **Clients**

32-bit BA Bitmap Support: false
MU Cascading Support: false
Ack-Enabled Aggregation Support: false

Tap the **Clients** card to open the Wi-Fi Clients list screen.

### **BSSID RF and Traffic Statistics**

Tap the **RF and Traffic Statistics** card to open the RF and Traffic Statistics screen. This screen displays the BSSID and channel number at the top of the screen as well as informational graphs.

To pan and zoom on the graphs, you can swipe, double tap, and move the slider under each graph. Tap the Restore icon to return to the full graph. (See the Trending Graphs topic for an overview of the graph controls.)

See RF and Traffic Statistics Overview in the Wi-Fi Details Screens topic for an explanation of the common elements of this screen.


The Signal graph shows the signal in light blue, noise in dark blue, and a calculated SNR.

The Channel Utilization graph uses light blue to show 802.11 channel utilization and dark blue to show non-802.11 utilization:

# ≡ RF and Traffic Statistics C


### 7 D-Linkln:802689-4cc98a

Channel: 153 (80 MHz, 149 - 161)

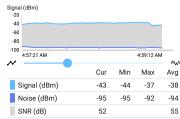

Channel Utilization (%) 100 50									
	0 4:57:21 AM			4:59:12 AM					
		Cur	Min	Max	Avg				
	CH 802.11	48	24	100	53				
ī	BSSID 802.11	46	<1	94	48				

The screen also displays separate graphs for BSSID Retries and Channel Retries:

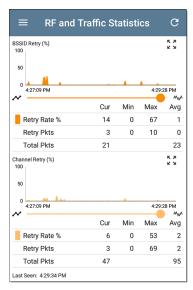

### **BSSID FAB**

The floating action button on the BSSID screen lets you **Locate** the wireless device, **Connect** to the BSSID, record a packet Capture of the

network traffic with the current BSSID on the connected channel, and assign or change its Name and Authorization.



- Selecting Locate opens the Locate BSSID screen. See Locating Wi-Fi Devices.
- Tapping Connect opens the AutoTest app and creates a new Wi-Fi profile called "Connect to [BSSID]." See Creating a Wi-Fi Profile from the Wi-Fi Analysis App in the AutoTest chapter for a more detailed description of this process.
- Selecting Capture opens the Capture app populated with the Channel and BSSID. See the Capture app chapter.
- Selecting Name and Authorization opens the Name and Authorization dialog. See Assigning a Name and Authorization to a Device.

## **Clients**

The Clients list screen displays the wireless clients the AirCheck G3 has discovered connected to your wireless networks.

≡ Wi-Fi - Clien	Wi-Fi - Clients (61)				
<b>∇</b> ↑ <u>=</u> Signal		•	,		
亡 192.168.0.105 -34 dBm	LiftingRound	-34 dBm CH: 153	>		
ARRISGro:189c	27-59da36 RuleGViolation		>		
Conos:48a6b8-a	a730a3 -	-62 dBm CH: 6	>		
<b>La</b> Sonos:48a6b8-a	a730a3 -	-62 dBm CH: 6	>		
LocalAdmin:663		-68 dBm CH: 153	>		
<b>汽 fe80::f28a:76ff:</b> -70 dBm	fe6c:82d0 Fragblast	-70 dBm CH: 8	>		
<b>5</b> Sonos:48a6b8-	a72f15	-71 dBm			


By default, the Clients are ordered by Signal strength, and each card shows the client's Signal strength in dBm, the SSID of the network to which the client is connected, and the channel number on which the Client is operating.

The general Client icons indicate whether the device is Probing or Connected to a network and able to receive data. If a Client is probing, two dashes -- display where the SSID would appear.

The Clients screen also shows specific icons for NetAlly testers, like the AirCheck G3 icon shown in the image above.

Tap a Client's card to open the Details screen.

### **Client Details**

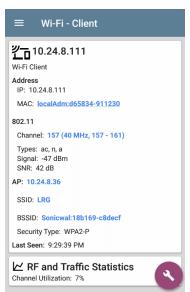

The top Client Details card for a connected Client displays the following information:

- Client's IP and MAC addresses.
- User-assigned Authorization status (if set)
- Supported 802.11 media Types
- Signal-to-Noise ratio (SNR) measurement
- Name of the AP to which the Client is connected
- SSID of the network to which the Client is connected
- · BSSID on which the Client is operating
- Network Security type
  - Time the Client was Last Seen by the AirCheck G3

### **Probing Clients**

If the client is a Wi-Fi probing client, the details screen replaces AP details with a list of the SSIDs for which the client is probing in the **Probes For** field:

## <u>€</u> UGSI:6c0b84-c1f09f

Wi-Fi Probing Client

Address

MAC: UGSI:6c0b84-c1f09f

802.11

Channel: 6

Types: g, b Signal: -45 dBm

SNR: 50 dB

Last Seen: 11:03:02 AM

Probes For: \_OpenWrt\_5G, Nighthawk 802.11ax


5GHz, NETGEAR17-5G

### Client RF and Traffic Statistics

Tap the **RF and Traffic Statistics** card to open the RF and Traffic Statistics screen. This screen displays the client's ID or address and channel number at the top of the screen as well as informational graphs.

To pan and zoom on the graphs, you can swipe, double tap, and move the slider under each graph. Tap the Restore icon  $^{13}$  to return to the full graph. (See the Trending Graphs topic for an overview of the graph controls.)


See RF and Traffic Statistics Overview in the Wi-Fi Details Screens topic for an explanation of the common elements of this screen.

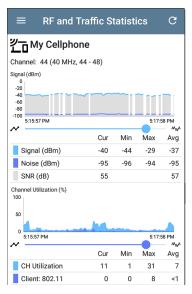


The Signal graph shows the signal in light blue, noise in dark blue, and a calculated SNR.

The Channel Utilization graph uses light blue to show 802.11 channel utilization and dark blue to show non-802.11 utilization:

Breaks in the Client RF and Traffic graphs may occur if the Client is not consistently transmitting, so there is no data for AirCheck G3 to display during those times.

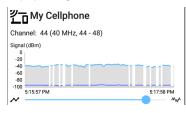

The Clients RF and Traffic Statistics screen also displays a graph of Transmit (Tx) and Receive (Rx) Rates in Mbps, number of Tx Streams, and Tx Channel Width in MHz.

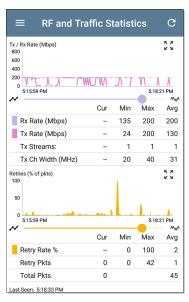

### Clients FAB

Tap the FAB on the Client Details screen to

Locate the client device, to open the Capture
app to record a packet capture of traffic going to

and from the client, or to assign or change its **Name and Authorization**.



- Select Locate to open the Locate Client screen. See Locating Wi-Fi Devices.
- Select Capture to open the Capture app populated with the Channel and MAC address of the client. See the Capture app chapter.
- Select Name and Authorization to open the Name and Authorization dialog. See Assigning a Name and Authorization to a Device.

AirCheck G3 User Guide



Path Analysis traces the connection points, including intermediate routers and switches, between the AirCheck G3 and a destination URL or IP address. You can use Path Analysis to identify issues such as overloaded interfaces, overloaded device resources, and interface errors. It also shows how devices within your network (and off-net devices) are connected to each other along a path.

All switches are pre-discovered through SNMP queries. When the measurement is complete, AirCheck G3 shows the number of hops to the destination device. A maximum of 30 hops can be reported.

## Introduction to Path Analysis

Path Analysis combines Layer 3 and Layer 2 measurements.

The Layer 3 measurement combines the classic Layer 3 IP (UDP, ICMP, or TCP) traceroute measurement with a view of the path through the Layer 2 switches.

The Layer 2 measurement discovers switches between the router hops by looking for the routers' MAC addresses in the switch forwarding tables by sending SNMP queries to all discovered switches. The switches found in the path are displayed between the router hops when the measurement finishes.

Path Analysis is most effective when you have configured the Discovery app with SNMP credentials. See SNMP Configuration in the Discovery Settings topic to learn how.

## **Path Analysis Settings**

The Path Analysis source device is always your AirCheck G3. The default destination is www.-google.com.


## Populating Path Analysis from Another App

Like other AirCheck G3 testing apps, when you open Path Analysis from another app, like Discovery, the address of the network component you were viewing in the previous app is pre-populated as the Path Analysis Destination.

## Configuring Path Analysis Manually

Open the app settings to configure a custom destination and select an Interface and Protocol. To open, from the Path Analysis app screen, tap the settings cion, or open the left-side

navigation drawer and select **Path Analysis Settings**.

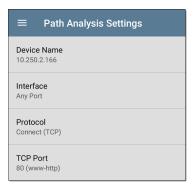

On the Path Analysis Settings screen, tap each field as needed to configure your target:

**Device Name**: Tap to enter the IP address or DNS name of the Path destination. The default is www.google.com.

**Interface:** This setting determines the AirCheck G3 port from which the port scan runs. Tap the field to select a port. (See Selecting Ports for explanations of the different ports.)

AirCheck G3 must have an active network link on the selected port to run a Path Analysis. If **Any**  **Port** is selected, available links are used in the order shown in the Interface dialog above.

See Test and Management Ports for explanations of the different ports and how to link.

**Protocol**: Tap to select the Connect (TCP), Ping (ICMP), or Echo (UDP/7) protocol for your Path Analysis.

TCP Port: This field only appears if you have selected the Connect (TCP) Protocol. Tap to enter the port number over which you want to run Path Analysis. (You may need to enter a specific port number because routes can vary based on the port number and/or may be blocked by firewalls.)

## **Running Path Analysis**

Tap the **START** button at the top of the app screen to begin a Path Analysis.

NOTE: AirCheck G3 must be linked on the Interface (Port) selected in the app's settings. See Test and Management Ports for help.



Like AutoTest, Path Analysis results are presented on cards. The top card shows the main test details, the second card shows information for the source device (your AirCheck

G3), and the following cards show the Layer 2 and Layer 3 Hops in the path, which are sequentially ordered.

Tap any <u>blue linked name or address</u> in the Path Analysis results screens to open the <u>Discovery</u> app and further examine the linked element.

### Path Analysis Results and Source AirCheck G3 Cards



Device Name: google.com

IP Address: 172.217.1.206 Interface: Any Port

Protocol: Connect (TCP) TCP Port: 80 (www-http)

Results

Started: 2:26:58 PM

Status: Destination reached in 11 hops

UPLOAD TO LINK-LIVE

The top Path Analysis results card shows the path's Destination address at the top, followed

by the three response times from the TCP Connect, Ping, or Echo tests.

**Device Name**: Resolved DNS name or IP address of the destination entered in the settings

**IP Address**: IPv4 address of the target destination

**Interface**: The Interface option selected in the settings

**Protocol**: The Protocol selected in the settings (TCP, Ping, or Echo)

**TCP Port**: The port number used for a TCP Connect Protocol. This field does not appear for Ping or Echo Protocol results.

#### Results

**Started**: Time at which the Path Analysis began

**Status**: Current status of the Path Analysis test, including any error messages

**UPLOAD TO LINK-LIVE**: Tap this link to upload your results to a Link-Live account. See Uploading Path Analysis Results to Link-Live later in this topic.

#### Source AirCheck G3 Card



This AirCheck G3 card displays the port from which the Path Analysis ran.

For Wi-Fi port analyses, the card displays the SSID and channel number.

NOTE: This card and screen only display a custom name for your AirCheck G3 if you have claimed it to Link-Live.

Tap the card to view more details.



The example image above shows the SSID, Channel, and other Wi-Fi information the AirCheck G3 can display after running a Path Analysis over Wi-Fi.

### Layer 3 Hops

Each Layer 3 Hop card displays the device type icon, DNS name (if discovered), and IP address.




Beneath the name (or IP), the response times for each Connect (TCP), Ping (ICMP), or Echo (UDP/7) display in milliseconds. On the right side is the router Hop number of this device in the path.

Tap the card to view the hop Details screen.



### No Reply

Sometimes Path Analysis displays Hop cards with "No Reply" (as shown below). This result means that the device in that portion of the path did not send an ICMP TTL timeout response.

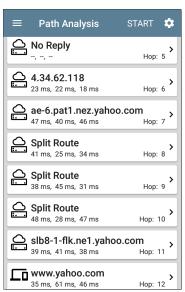


### **Split Route**

Path Analyses may obtain a "Split Route" result (as shown above), meaning that two or three

different routers within same hop responded to the three requests.

Tap a Split Route card to view the DNS names and IP addresses of the responding routers.

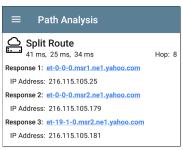

### Layer 3 Interfaces and Statistics

Statistics for Interfaces on Layer 3 devices may be identified and measured if the AirCheck G3 has SNMP access



Tap a Hop card to see a summary of Interface Details and Statistics, if they are available.

See also Layer 2 Switch Interfaces and Statistics below.

### **Network Problems in Path Analysis**

The Hop cards can also show detected Problems based on the Problem Settings in the Discovery app and display the device type icons in the corresponding colors.

The yellow switch icon in the image above indicates a Warning status.




Tapping the <u>blue linked</u> switch name opens a <u>Discovery Details screen</u> for the switch, where the user can investigate the cause of the Warning.

## Layer 2 Devices

Layer 2 devices can be switches or APs.

## **Layer 2 Switches**


The image below displays an example of a Path Analysis to a device on the local broadcast domain with two switches in the Layer 2 portion of the path.

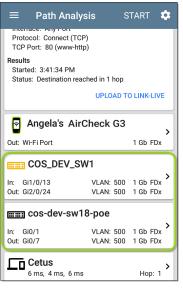

The AirCheck G3 is able to identify these Layer 2 switches and their interfaces because it has configured SNMP access to the switches.

The switch cards display the In and Out Interface IDs, VLAN ID, and the link speed and duplex (if detected) of the interfaces.

Tapping a Layer 2 card opens a Details screen for the device

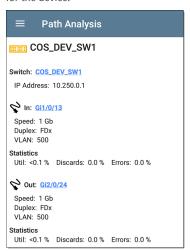

A Layer 2 Details screen displays the device name and IP address at the top.

NOTE: The yellow switch icon in the image above indicates a Warning status. See Network Problems in Path Analysis later in this topic.

#### **Layer 2 Switch Interfaces and Statistics**

Layer 2 Switch Details screens in Path Analysis display a summary of the Interface Statistics (described below). To view all available information for these interfaces, tap their blue links to open a Interface Details screen in the Discovery app.

Statistics for Interfaces on Layer 2 switches may be identified and measured if the AirCheck G3 has SNMP access

In/Out: Indicates the interface type and name. The interface name often contains the physical port number where the switch is connected to the network.

**Util**: Percentage of total interface capacity being used

**Discards**: Percentage of total packets that have been dropped

**Errors**: Percentage of packets containing errors

#### Layer 2 APs

If the Layer 2 path starts or ends with a Wi-Fi device, its AP is shown as a Layer 2 device in the path.

A Layer 2 AP card indicates the connected network SSID, channel, and 802.11 type in use.



Layer 2 AP Details screens allow you to further examine the wireless characteristics by selecting their blue links, which open a Wi-Fi app Details screen.



#### No laver 2 devices discovered



In some cases, the AirCheck G3 does not discover Layer 2 devices between Layer 3 devices. There may not be any Layer 2 devices, or AirCheck G3 might not have SNMP access to those switches.

The Layer 2 card may also display a result of "No switches found," which indicates that Discovery

has not found any switches with SNMP access to determine if the switches are in the path. If this is an unexpected result, check and verify your SNMP Configuration and Extended Ranges in the Discovery app settings.

# Uploading Path Analysis Results to Link-Live

Tapping the **UPLOAD TO LINK-LIVE** link on the top card opens the Link-Live sharing screen for path analysis results:




Path Analysis results are uploaded to the **Analysis** page on Link-Live.

AirCheck G3 User Guide



The AirMapper Site Survey application enables you to perform a Wi-Fi survey of an indoor or outdoor location and upload it to Link-Live Cloud Service. On <a href="Link-Live.com">Link-Live.com</a>, you can view heatmaps and Wi-Fi measurements for each data collection point.

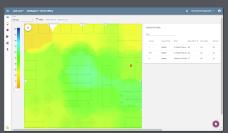


The Signal heatmap is available to all Link-Live users. AllyCare Support customers can also view maps of Noise, SNR, and Max TX and RX Rates. Visit NetAlly.com/Support.

## **AirMapper Settings**


Setting up the AirMapper app to perform a survey involves naming the survey, loading a floor plan image, specifying its dimensions, setting scanning mode, and overriding bands and channels.

- Only .png and .jpg image files types are supported.
- You may need to use an image editing application to crop your floor plan image to known dimensions, such as the walls of a building or property boundary.

Access the AirMapper settings by selecting the menu icon or settings icon at the top of the main app screen.

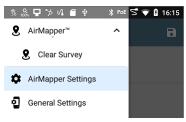

## Configuring an AirMapper Survey

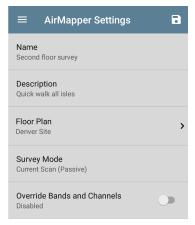

#### Name

Tap the **Name** field to enter a custom name for your AirMapper project. This name is uploaded to Link-Live to identify this survey project.

#### Description

Enter any additional information you want for the survey.

#### Floor Plan


NOTE: You can configure floor plans on Link-Live and then send them to your AirCheck G3. A notification appears when a new floor plan arrives:




The new floor plan is added to the existing floor plans but is not automatically selected.

#### To select a floor plan:

 Tap Floor Plan to open the list of available floor plans.

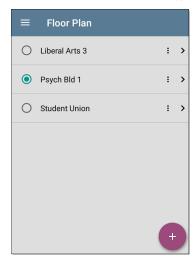

 Select a floor plan or load a new floor plan by tapping the floating action button , using the file selector to navigate to the new map image file, and then tapping the file to select it. This displays the Floor Plan menu.  Fill out the remaining fields for the Floor Plan as needed:

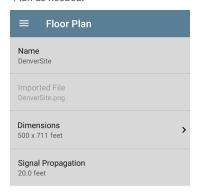

**Name**: Enter a name for this floor plan. This field defaults to the file name.

Imported File: The original image file name.

**Dimensions:** Tap this option to display the floor plan with two markers. Move the markers to two places on the floor plan that are a known distance apart. Then tap **Marker Distance** to enter the distance between the two points. (Set the units (feet or meters) in

the General Settings for the test apps, accessed from the left-side navigation drawer .) When finished, tap to return to

Floor Plan menu.

**Signal Propagation**: Tap to enter a value for the propagation radius for the survey sample points.

#### Survey Mode

Tap Survey Mode to select the Wi-Fi data collection method that best suits your Wi-Fi environment and survey data collection requirements:

- Current Scan (Passive) is the default and preferred way to perform a survey. It allows immediate data collection based on the most recent AP beacon seen from each BSSID. AP BSSIDs age out after 140 seconds, and Wi-Fi clients age-out after 4 minutes.
- Scan Once (Passive) is more precise but more time-consuming. When a point is selected, all the BSSID information is cleared, and the unit acquires a single scan


of the selected channels for the selected dwell time. This gives an exact measurement. However, in congested environments any beacons not seen during the dwell time are not included in that sample point.

 Connected (Active) collects data from the linked connection of the Wi-Fi Test port. NOTE: Selecting this method disables the AirMapper settings for Dwell Time and Override Bands and Channels.

#### **Dwell Time**

(Enabled for passive survey modes only.) Tap **Dwell Time** to select choose a preset dwell time or enter a custom value. See the **General Settings** for additional information about dwell time.

#### **Override Bands and Channels**

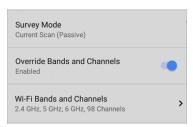

(Enabled for passive survey modes only.) Tap **Override Bands and Channels** to enable selection of different bands and channels than the values defined in **General Settings**. (These override settings are used only for AirMapper site surveys.) Enabling this setting displays the Wi-Fi Bands and Channels setting.

#### Wi-Fi Bands and Channels

(Enabled only when Override Bands and Channels is enabled.) Tap Wi-Fi Bands and Channels to open a list of frequency bands. Then tap the frequency band to open a menu to select specific channels to use for that band. See the General Settings for additional information.

≡ Wi-Fi Bands and Channels
<b>Wi-Fi Band(s)</b> 2.4 GHz, 5 GHz, 6 GHz
2.4 GHz Channels All
5 GHz Channels All
6 GHz Channels All

**Note:** Selecting a subset of channels and bands lets you exclude scans of unneeded channels from the survey. This improves survey performance and reduces the amount of data collected.

## **Changing Settings after Starting**

You can reopen the AirMapper settings to change the Floor Plan > Dimensions or Signal Propagation size after starting your survey. Existing data points are retained on the map unless you select a different Floor Plan.

**Note:** NetAlly does *not* recommend that you change the band, channel, or dwell time settings after you have started a survey. The survey results for the multiple settings can create confusing or less reliable results. If you wish to do so and if the **Override Bands and Channels** setting is enabled, you can use the AirMapper Settings to make changes after you have started your survey. If the **Override Bands and Channels** setting is *not* enabled you must use the General Settings to make changes.

#### Hidden SSIDs and APs

For any [Hidden] APs or SSIDs at your site that you want detected during a survey, NetAlly recommends creating and enabling a Wi-Fi Profile in the AutoTest app, configured with the appropriate credentials. Otherwise, AirMapper detects the BSSIDs associated with hidden devices but may not determine their APs/SSIDs.

## **Collecting AirMapper Data**

Your selected floor plan appears on the main AirMapper screen.




Tap START to begin the survey.

A message displays the survey type, radio, and Bluetooth status. This message appears each time you begin or restart or return to the survey from another app. Tap **Dismiss**.



To collect data, travel around your site, and tap the map at your current location to scan the enabled wireless channels in that spot.

Do not move from that location until the scan is complete and the data point on the screen turns from red to green.

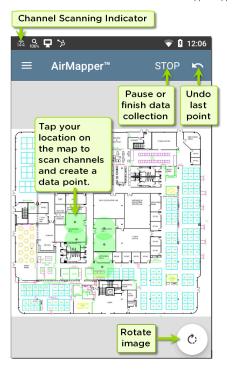

As shown in the image above, you can undo previous collection points and rotate the image as needed.

Use swiping and pinch-to-zoom gestures to pan and zoom the map.

While the AirCheck G3 is scanning, the Signal Propagation circle is red. Once the scan is complete, the circle turns green.



The completed data points in the AirMapper app are always green. The colored heatmap is generated once you upload the AirMapper results to Link-Live.

Watch the Wi-Fi status icon in the top status bar to see the channels the AirCheck G3 is scanning in real time.

NOTE: To adjust the **Dwell Time**, meaning the amount of time the AirCheck G3 lingers on each channel gathering data, enable the Override Bands and Channels and open the Wi-Fi Bands and Channels, or open the **General Settings** > Wi-Fi Bands and Channels, accessed from the left-side navigation drawer.

When you finish adding data points, or if you want to pause, tap **STOP**.



Tap **RESUME** to add more data points.

## Taking a Connected (Active) Survey

Use AutoTest to run a Wi-Fi profile and connect the desired SSID. Tap **START** to begin the survey.

If not connected to an SSID, a message is displayed at the bottom of the screen and the survey will not start.

Collect data as you would a passive survey described above.

If the connection is lost, the link notification changes to an X. AirCheck G3 continuously tries to reconnect to the SSID.

Survey points taken during this unlinked time are displayed in Yellow. These indicate areas where there is not coverage for that SSID.

When you finish adding data points or if you want to pause the survey, tap **STOP**.

Tap **RESUME** to add more data points.

Tap the Link-Live upload icon to send your survey results to Link-Live's AirMapper page.


#### Adding Wi-Fi Management Port Data

If the Wi-Fi Management port is connected to an SSID, its active connection data is added to any survey points taken. It doesn't matter what type

of survey you are taking. This information is viewable only on Link-Live.

## Adding Comments

Long press on the floor plan to add a comment. A context menu appears. Tap Add Comment. A dialog appears to enter your comment. Tap OK to add the comment.

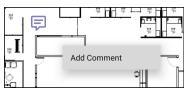


Long press over a comment to edit/delete it. The selected comment turns dark and a context menu appears. Tap **Edit Comment**. Edit the comment and tap **OK** or tap **Delete** to remove it. If two comments are very close, the closest one to the tap point is selected.

### **Deleting Survey Points**

Long press over a survey point to delete it. The selected survey point turns red and a context

menu appears. If two survey points overlap, the closest survey point is selected. Tap **Delete Survey Point**.

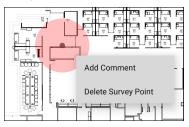

NOTE: There is no undo for deleting a survey point. Once deleted, it cannot be recovered.

# Uploading AirMapper Surveys to

When you tap the upload icon , select **Upload** to **Link-Live** to display the Link-Live sharing screen.

Tap the Link-Live upload icon 1 to send your survey results to Link-Live's AirMapper page. The upload dialog lets you enter a survey name, a comment for the overall survey, and a job

comment (such as a note about the overall job status).

NOTE: When you upload data from a survey (or save it locally), your unit also uploads/saves a Discovery analysis file to assist with data analysis on Link-Live. When you upload an active survey, the connection log is also uploaded.





Survey	Name
--------	------

North Office

Comment

Quick Coverage Test

Job Comment

**Event Check** 



SAVE TO AIRMAPPER FILES

Enter any **Comments** or Job Comments you want attached to your AirMapper result in Link-Live, and tap **SAVE TO AIRMAPPER FILES**.

NOTE: The Job Comment remains the same until you delete or change it.

The current survey remains on the AirMapper screen until you Clear Survey, allowing you to add additional points if needed and re-upload.


## Export AirMapper Data to AirMagnet Survey PRO

Survey data can be exported as a .amp file for import into AirMagnet Survey PRO version 10 for more advanced analysis, planning and reporting.

When your survey data collection is complete, tap the upload icon and select **Export to**Survey PRO to create the .amp file.



Optionally rename the .amp file and select the Save button to create the .amp file.

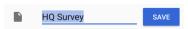

You can copy the file to external storage at a later time using the Files app.

## **Load and Save AirMapper Settings**

The entire survey configuration can be saved as named settings using the disk icon in the title bar.




This allows fast recall of any specific survey configuration.



## Starting a New Survey

To start a new AirMapper survey, open the leftside drawer and select **Clear Survey**.

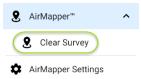



The Spectrum Application is a dual-band Wi-Fi spectrum analyzer that measures Wi-Fi signal information to provide data about signal strength as well as noise. This application requires the NXT-1000 Portable Spectrum Analyzer (sold separately or included in kits), which plugs into the top USB port of your EtherScope nXG.

#### This application offers:

- Frequency spectrum (heat map) display across the frequency band
- Waterfall display (2-minute historical) of RF
- Real time display of current, average, and max-hold signal levels

This information can help you identify both Wi-Fi and non-Wi-Fi sources in your environments.

# **Using the Spectrum Views**

Opening the Spectrum app automatically changes the screen orientation and opens the default view: a Frequency Spectrum graph for the 2.4 GHz band. You can choose from three views of live data: Frequency Spectrum (heatmap), Waterfall, and Real Time.

## Before You Begin

- Connect NetAlly's Spectrum dongle to the top USB port (USB Type-A) of your AirCheck G3. (See Contact NetAlly to acquire the NXT-1000 Portable Spectrum Analyzer if you do not already have one.)
- Tap the Refresh icon to clear the current graph and start new measurements.
- To get more accurate test results, NetAlly recommends that you turn off your device's test and management Wi-Fi and Bluetooth. (The Spectrum app notifies you if these services are turned on.)

To turn off test Wi-Fi:

- Tap the Menu icon 

   to open the

   Spectrum navigation drawer.
- Tap General Settings.
- Tap Use Wi-Fi test port to set it to Disabled.

To turn off management Wi-Fi and Bluetooth:

- Swipe down from the top of the AirCheck G3 screen to display the system icons.
- Tap the Wi-Fi- icon 

  until it indicates
  that Wi-Fi is off 

  . (You can also use
  the General Settings to turn off
  management Wi-Fi.)
- Tap the Bluetooth icon 
   ¥ until it indicates that Bluetooth is off 
   X.
- (Optional) See "Spectrum Settings" on page 580 for instructions on changing the frequency band, changing the Waterfall View type, and saving settings.

## **Using Common View Actions**

Use these actions in each Spectrum view to change the view details:

- Pause: Tap the Pause icon to stop updates of the display. This can help you examine patterns and anomalies without updated data overriding your current view.
- Resume: Tap the Resume icon to cancel a pause and continue live data updates.
- Refresh: Tap the Refresh icon to clear the graph and start acquiring new data. (A refresh also cancels a pause.)
- Display markers: (Frequency Spectrum and Real Time views only) Tap the graph at a particular frequency that you want to examine. This displays a pink vertical marker at that frequency and lists the frequency's numerical details above the graph.
  - The Frequency Spectrum view displays the frequency and its maximum value.
  - The Real Time view displays the frequency, the frequency's current value, the average value, and the highest measured value (Max-Hold).

- If you have a specific frequency detail marker, double-tapping on the marker erases it. (You can reset the marker by single-tapping the graph again.)
- Zoom in: Double-tap the view graph to zoom in to a narrower band around a particular frequency.
  - For the 2.4 GHz band, the graph centers on a 40 MHz range around the channel closest to the frequency you tapped.
  - The 5 GHz band the graph centers on an 80 MHz range around the nearest of several predefined frequency ranges.
- Restore to normal view: Tap the Restore icon <sup>\$2</sup> to close the zoomed-in view, return to the full display for the frequency band, and refresh the graph with new data.
- **Saving results:** see "Uploading Spectrum Results to Link-Live" on page 578.

### Frequency Spectrum View


This display uses the color spectrum to present a heatmap of the frequency band you have chosen, showing the density of recent RF measurements.



- Blues and greens ("cool" colors) indicate less RF detected at that frequency and amplitude.
- Yellow, orange, and red ("hot" colors) indicate the repeated presence of RF at that frequency and amplitude.
- Darkest blue indicates infrequent RFs while red indicates the continuous presence of RF at that amplitude.

#### Waterfall View

The Waterfall display draws new data at the top of the display as it scrolls older data downwards over a 2-minute interval. This provides a visualization of RF activity over time.

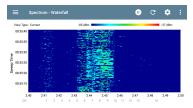

- The vertical access shows the measurement time, and the horizontal axis shows frequencies and channels.
- The colors in the waterfall represent the amplitude of a frequency at a certain time according to the scale in the upper right.
   Dark blue shows lower amplitude measurements, and lighter colors show higher amplitude signals. More colors indicate more activity. For example, in the waterfall shown

- above, a speed test is running on Channel 8.
- The waterfall has two view types. Use Current to detect instantaneous RF. To smooth the data and see overall usage, change the type to Average 5 Sweeps, which averages five sweeps for each new line of data. This decreases the data resolution but may make the data easier to interpret in highly active RF environments. (See "Changing Spectrum Settings" on page 581 for instructions on changing the type.)

for instructions on changing the typ

#### **Real Time View**

The Real Time display shows the current values across the frequency band with colorized lines for the current measurement, the average measurement, and the highest measured value (Max-Hold).



- The yellow line indicates the current values.
- The blue line indicates the average values, which are calculated using all measurements accumulated since the graph was last cleared.
- The green line indicates the highest measured value (Max-Hold).

#### Uploading Spectrum Results to Link-Live

To send your Spectrum results to the Link-Live website, tap the action overflow icon it at the top right of the Spectrum screen, and then tap Upload graphs to Link-Live.



The Link-Live sharing screen opens. The system creates a file name automatically using the date. You can also enter optional Comments and Job Comments to attach to the results file. The results are displayed as images on Link-Live.com.

# **Spectrum Settings**

The Spectrum navigation drawer allows you to change the data views, change frequency bands, change the Waterfall display type, and save settings.

### **Changing Spectrum Views**

To change the Spectrum view:

 Tap the Menu icon to open the Spectrum navigation drawer:



 Select the view that you want: Frequency Spectrum, Waterfall, or Real Time. See "Using the Spectrum Views" on page 571 for information on using these views.

### **Saving Settings**


To save the current Spectrum settings, tap the Save icon in the upper right corner of the

Spectrum Settings screen. This opens a menu for you to **Load**, **Save As**, **Import**, or **Export** any changes you make to the settings. See "Saving App Settings and Configurations" on page 130 for more information.

### **Changing Spectrum Settings**

The Spectrum settings allow you to change the frequency band and to change the waterfall view type.

To change settings, tap the settings ☑ icon or tap the Menu icon ☐ and select Spectrum Settings from the Spectrum navigation drawer. Either action opens the Spectrum settings window:

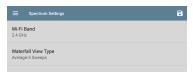

To change the frequency band:

- 1. Tap Wi-Fi Band. This opens a selection box.
- Tap the button for the frequency band you want, and then tap **OK** to return to Spectrum Settings.
- 3. Tap **OK** to return to Spectrum Settings.

To change the waterfall view type:

- Tap Waterfall View Type. This opens a selection box.
- Tap the button for either Current or Average-5 Sweeps.
  - Current maintains the default display for the Waterfall view.
  - Average-5 Sweeps averages each line of waterfall data into five sweeps. This decreases some of the data resolution but may make the data easier to understand in highly active environments.
- 3. Tap **OK** to return to Spectrum Settings.

AirCheck G3 User Guide



iPerf is a standardized network performance tool used to measure UDP or TCP throughput and loss.

The iPerf app runs an iPerf3 performance test to a NetAlly Test Accessory or an iPerf server endpoint.



The NetAlly Test Accessory runs network connection tests, uploads results to Link-Live Cloud Service, and acts as an iPerf server endpoint for iPerf tests run by other NetAlly handheld testers.

Learn more about the Test Accessory from NetAlly.com/products/TestAccessory.

If you are using an iPerf server installed on a PC or other device as an endpoint, iPerf version 3 is required to run the AirCheck G3 iPerf test. You can download iPerf server software from <a href="https://iperf.fr">https://iperf.fr</a>.

# iPerf Settings

To run an iPerf test, you must configure your AirCheck G3 unit to communicate with your iPerf endpoint. You can manually enter an iPerf server address, or select a NetAlly Test Accessory's address in the iPerf settings.

### Saving Custom iPerf Settings

The iPerf app allows you to save a configuration of settings for running an iPerf test to the same endpoint later.



Tap the save icon to load, save, import, and export configured settings. See Saving App Settings Configurations for more instructions.

Once you save a settings configuration, the custom name you entered appears at the top of

the iPerf settings and results screens. In the example images here, the user has saved a custom iPerf configuration called "Server Room Endpoint."



### **Test Accessories in Discovery**

You can start an iPerf test from the Details screen for a Test Accessory in the Discovery app using the floating action button.

 Open the Discovery app, and select an active Test Accessory from the main Discovery list to open its Details screen.



Tap the floating action button (FAB) to open the action menu.




 Select the iPerf app button to open the iPerf app with the IP address populated from the Test Accessory in Discovery.

NOTE: You can also select **Browse** in the FAB menu to open the Test Accessory's Web Interface, where you can view its status and configure its settings.

### **Configuring iPerf Settings**

To configure the iPerf test settings manually, open the settings on the iPerf screen.

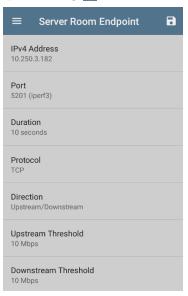

Tap each field to enter or revise selections as needed. Changed settings are automatically applied. When you finish configuring, tap the back button do to return to the iPerf test screen.

NOTE: iPerf runs on the test port interface only.

IPv4 Address: Tap the field to enter or select the IPv4 address of the target iPerf server. Only IPv4 addresses are allowed for iPerf testing.



A drop-down list in the IPv4 Address dialog shows all the Test Accessories the AirCheck G3 has discovered through the discovery process, as well as any Test Accessories that are claimed to the same Link-Live organization as your AirCheck G3.

NOTE: Clear the address field in the dialog to see the full list of discovered Test Accessory addresses.

**Port**: The default iPerf3 port number is 5201. Tap the field to enter a different port number.

NOTE: The iPerf port number entered here must match the port number used by your iPerf server. If needed, consult the Test Accessory User Guide

(NetAlly.com/products/TestAccessory).

**Duration:** This setting is the length of time for one direction, Upstream or Downstream, of the iPerf test. If the Direction setting below is set to both Upstream/Downstream, the total test time is twice the value set here. Tap the field to select a new duration or enter a custom value. The default is 10 seconds.

**Protocol**: TCP is the default protocol. Tap the UDP selector to switch to UDP.

NOTE: iPerf tests running the TCP protocol automatically run at the fastest rate possible.

When running a UDP protocol test, the iPerf app attempts to run at the selected Bandwidth.

**Direction**: You can run an iPerf test Upstream, Downstream, or both. The default is Upstream and Downstream. Tap this field to set the test for only one direction.

**Upstream and Downstream Bandwidth:** These fields only appear if the **UDP Protocol** is selected. They specify the desired target bandwidth for the iPerf Test using the UDP protocol.

Upstream and Downstream Thresholds: Thresholds are the values the AirCheck G3 uses to grade the test as Pass or Fail. iPerf thresholds are throughput rates. The default is 10 Mbps. Tap the threshold fields to select a different value or enter a custom one.

# **Running an iPerf Test**

Ensure that you have an active link on the Interface (Test Port) from which you are running the iPerf test. Wi-Fi test ports require that an AutoTest Wi-Fi Profile has run to establish a link. Management ports link automatically if a connection is available.

Tap the **START** button on the main iPerf screen to begin testing.





Device Name: 10.20.20.135

IP Address: 10.20.20.135 Interface: Wi-Fi Port

#### Results

Duration: 10 seconds Started: 11:34:05 AM Status: Success





TCP Throughput Down (Mbps)

Test characteristics and status are displayed at the top of the iPerf results screen while the lower part of the screen displays a real-time graph of the TCP or UDP Upload and/or Download speeds.

To pan and zoom on the graphs, you can swipe, double tap, and move the slider. See the Trending Graphs topic for an overview of the graph controls.

**Device Name**: Hostname or address of the iPerf server or Test Accessory.

IP Address: IPv4 address of the iPerf server.

**Interface**: The AirCheck G3 Test Port from which the test is running.


#### Results

- Duration: Configured Duration from the iPerf settings
- · Started: Time the test started
- Status: Success or failure status of the test.

# TCP/UDP Throughput Up and Down graphs: The iPerf graphs plot the throughput rate to (Up) or from (Down) the iPerf server in Mbps.

The table below each graph displays the Current, Minimum, Maximum, and Average rates.

**Limit**: This is the **Threshold** from the iPerf app's settings. The threshold value is also displayed on the graph as a red dotted line.

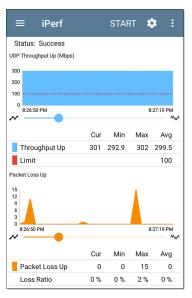

UDP Packet Loss Up and Down graphs: When running a UDP protocol test, the iPerf results also display graphs and tables of Packet Loss. Values for the number and percentage of packets lost are displayed in the table below the

graph. The Packet Loss Up graph and table do not display measurements until results are received from the iPerf server at the end of the upstream test.

Note that the Packet Loss Up number could be much less than the Packet Loss Down number.

#### Uploading iPerf Results to Link-Live

To send your iPerf results to the Link-Live website, tap the action overflow button at the top right of the iPerf screen, and then tap Upload to Link-Live.




The Link-Live sharing screen opens and allows you to revise the auto-generated file name and attach comments to the iPerf result, which is displayed on the Results page on Link-Live com.

SAVE TO LINK-LIVE

AirCheck G3 User Guide



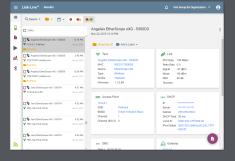

Link-Live Cloud Service is a free, online system for collecting, tracking, organizing, analyzing, and reporting your test results. AutoTest results are automatically uploaded once your AirCheck G3 is claimed.

The comprehensive AirCheck G3 offers more features for analyzing your network in Link-Live than previous testers. Claim your AirCheck G3 to Link-Live.com to access these functions:

- Check for software updates and update your AirCheck G3 software.
- Download third-party applications from the NetAlly App Store to use on your AirCheck G3.
- Automatically upload AutoTest results each time you run AutoTest.
- Attach test and Job comments to Link-Live uploads, and automatically sort your results and files into folders in Link-Live.
- Upload test, discovery, and analysis results from the NetAlly apps, including Discovery, Wi-Fi, Path Analysis, AirMapper, and iPerf.
   See Link-Live and Testing Apps for more about uploading.

# Getting Started in Link-Live Cloud Service

To start, create a user account at <a href="Link-Live.com">Link-Live.com</a>, and sign in. You can open the Link-Live website in the AirCheck G3's web browser to create and manage your account.

### Claiming the Unit

#### On Link-Live.com

- The first time you sign in to Link-Live.com, a pop-up window appears, prompting you to claim a device
  - If you already have a user account and other devices claimed to Link-Live, navigate to the **Units** page from the left side navigation drawer, and click the **Claim Unit** button at the lower right corner of the screen .
- Then, select the AirCheck G3 image, and follow the claiming instructions on the Link-Live website.

#### On the AirCheck G3 Unit

 Open the Link-Live app. Your unit's MAC address is displayed.



- Tap CLAIM NOW on the Link-Live app screen.
- When prompted by the instructions on the Link-Live website, enter the MAC address.

After you claim your AirCheck G3 to Link-Live, a software update may be available. If so, a notification appears in the Status Bar . Open the

Top Notification Panel, and select the notification to update your unit.



See Updating Software for more information.

## **After Claiming**

Once your AirCheck G3 is claimed to the Link-Live Cloud Service, it automatically uploads your AutoTest results each time you run AutoTest. You can also upload a test comment and a picture with your test results using the floating action buttons (FABs) for the Wi-Fi Test Results. You can automatically sort your results into folders in Link-Live using test and Job comments.

If your AirCheck G3 is not connected to an active network, any test results, comments, or images are stored in memory (buffered) and uploaded once a connection is established.

For more information on how to the use the Link-Live.com website, click or tap the

navigation menu icon at the top left of the Link-Live.com pages, and select Support.

#### Unclaiming

You may need to unclaim your unit from Link-Live to transfer it to another user or if you no longer want to send data to Link-Live.com.

To unclaim your AirCheck G3 from Link-Live, tap the navigation menu icon in the Link-Live app, tap About screen from and then tap UNCLAIM.

#### ■ About



#### AirCheck G3 Analyzer

Model: AIRCHECK-G3-PRO

Serial: 1930014

#### MAC Addresses

Wi-Fi: 00c017-53020a

Wi-Fi Management: 00c017-53020b

System Version: 2.1.0.167
Application Version: 2.1.0.172

AllyCare: Enabled Expires: 6/24/2023

#### SFP Details

Type: 10GBASE-SR (850 nm)

Vendor: AVAGO Version: G2.3 Model: AFBR-703SDZ Rx Power: --

UNCLAIM EXPORT LOGS

### AllyCare Code

The AllyCare Code button appears at the bottom of the About screen next to the Export Logs button if your unit is not claimed.

ALLYCARE CODE EXPORT LOGS

Tap **AllyCare Code** to open a dialog to enter an AllyCare Activation Code.

### **Private Link-Live Settings**

Use these settings only when your organization has deployed a private instance of Link-Live. Consult your IT organization for setting details.

# **Link-Live App Features**

The main Link-Live app screen on your AirCheck G3 facilitates the claiming process, displays Link-Live related information, and allows you to enable or disable Link-Live.com uploads as needed.

#### Link-Live App Screen



OPEN IN BROWSER

The AirCheck G3 unit's name that displays on the Link-Live.com is shown to the right of the Link-Live icon . You can change this name on the Link-Live.com Units . page.

**Organization** is the Link-Live organization where the unit is claimed.

E-mail is the first e-mail address assigned to the unit, which receives test result notification emails

The Organization and Email address shown here are assigned on the Link-Live.com website. The fields displayed in AirCheck G3's Link-Live app are informational

AllyCare indicates the status of NetAlly's optional AllyCare services. See <u>NetAlly.-com/Support</u> for more information.

Interface shows which network interface is currently being used by Link-Live to post results and its status.

The Enable Link-Live toggle button turns the Link-Live features on or off. If Link-Live is disabled here, the AirCheck G3 cannot upload test results or check for software updates. The

**Upload to Link-Live** options do not appear in the testing apps.

Tap the **OPEN IN BROWSER** link to open Link-Live.com on the AirCheck G3's web browser.

The "(# buffered)" in the Link-Live screen header indicates the number of files stored in the device memory when no active network connection is available. The buffered file types are listed below the main app card.



The buffered files displayed automatically upload to Link-Live.com once your AirCheck G3 connects to an active network.


### Saving Locally Only

If you do not want to send your results to the Link-Live website, you can still save results locally to your AirCheck G3 as JSON files.

Tap the **Save Locally Only** toggle field in the Link-Live app to save the JSON files to your unit.



Select SHOW FILES to open the Files app. The .json files are saved in the **Downloads** > **TestResults** folder.

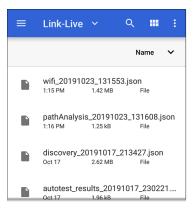

See the Managing Files topic for an overview of the Files app.

You can transfer the JSON files to a PC for analysis, or you can download a JSON viewer app from the App Store on your AirCheck G3.

With Save Locally Only enabled, options for uploading or saving to Link-Live (described in the Link-Live and Testing Apps section below) still display in the NetAlly testing apps. However, the results are saved to the internal Link-Live

storage folder, and not uploaded to Link-Live.com.

#### **Job Comment**

The left-side navigation drawer for the Link-Live app lets you enter or change the Job Comment. The Job Comment attaches to all test results and files uploaded to Link-Live, until you change or delete it. In contrast, other Comments, like those attached to Wi-Fi AutoTest results or Discovery results, are only attached to one set of test results or uploaded file.

Both comment types appear on Link-Live sharing screens like the one below:



To enter or change the Job Comment in the Link-Live app:

 With the Link-Live app open, tap the menu icon or swipe right from the left side of the screen.



- 2. Tap the Job: field.
- 3. Enter a comment in the dialog box.
- Tap SAVE.

Note that the **Job Comment** field appears in other Link-Live sharing screens, allowing you to change it from multiple locations on the AirCheck G3. No matter where you change the Job Comment, it is updated everywhere on the unit.

# Software Updates

The left-side navigation drawer for the Link-Live app also lets you check for and download any available software updates. See Updating Software in the Software Management chapter.

## **Link-Live and Testing Apps**

LINIX LINE MEDDACE

Once your unit is claimed, the Link-Live app works with several of the testing apps to upload test results, discovery and analysis data, comments, and images to the Link-Live website. Link-Live.com categorizes the uploads from different apps on corresponding webpages, as shown below:

A DD I IDI O A DC

LINK-LIVE WEBPAGE	APP UPLOADS
Results	AutoTest and iPerf results, images, connect logs, and other files when saved to a test result
Uploaded Files	Captures, images, connect logs, and other file types
Analysis	Discovery, Wi-Fi, and Path Analysis results
<b>?</b> AirMapper	AirMapper Heatmaps

If your unit is not claimed to <u>Link-Live.com</u> or if Link-Live is disabled on the app screen, the links and buttons for uploading to Link-Live in the testing apps do not appear.

## Link-Live Sharing Screens



Whenever you select a button or link, like those above, to Upload, Save, or Share to Link-Live, a Link-Live sharing screen appears with the appropriate options for the data type.

For example, the Link-Live sharing screen for Discovery or Wi-Fi app data allows you to upload to the Analysis data allows upload to the Analysis data allows.





Wi-Fi Snapshot Name

20190429 122109

Comment

Conference Room B


Job Comment

North Office



SAVE TO ANALYSIS FILES

The Link-Live sharing screen for a screenshot or other image allows you to attach it to the most recently run test result (AutoTest or iPerf) on the Results page, or to the Uploaded Files page on Link-Live.com.

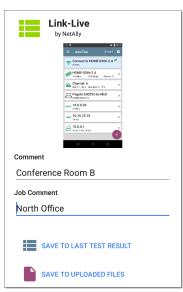

Remember, the regular Comment field uploads only to the current result or file, while the Job Comment field uploads with all results and files until you change it.

# Sharing a Text File to Link-Live

You can also select and share text by long pressing text on the unit's screen. Text files are attached to the last test results on Link-Live.com.

1. Long press a text string to select it.



2. Tap Select All if needed.



#### 3. Tap **SHARE**.



Select the Link-Live icon to open the Link-Live sharing screen.



Enter any comments as needed, and then tap SAVE TO LAST TEST RESULT.

# Basic Wired Testing With Link-Live Pairing

Link-Live allows you to add several simple wired tests by pairing a NetAlly LinkSprinter or Test Accessory with your AirCheck G3. This ability lets you run wired tests and view the results on your unit. For example, you may wish to make sure that an AP is getting adequate PoE and basic connectivity while performing a Wi-Fi survey or running other Wi-Fi tests. The wired data is uploaded to Link-Live and then shared to your AirCheck G3 to give you more complete information.

#### Tests available are:

- · Power Over Ethernet (PoE)
- Wired link verification
- · DHCP link verification
- Gateway detection
- Link-Live access verification
- (LinkSprinter only) Wi-Fi availability

You can also view the information on Link-Live, which includes supplemental information fields.

### Before You Begin

- You must have a Test Accessory iPerf Tester or a LinkSprinter Pocket Network Tester. To acquire one of these devices, contact your netally.com representative or visit: netally.com
- Read the user guide available for your product, available at: <a href="https://www.net-ally.com/support/user-guides/">https://www.net-ally.com/support/user-guides/</a>

#### **Link-Live Setup**

- Log into your Link-Live account. (You can use a PC or start the Link-Live app on your AirCheck G3 and then select the Open in Browser option.)
- Make sure your AirCheck G3 is <u>claimed</u> to Link-Live.
- Using the same Link-Live organization to which you claimed your AirCheck G3, claim your Test Accessory or LinkSprinter as per the instructions in the documentation.
- Select the **Units** option from the left-side menu. This displays your claimed devices.

- Select your AirCheck G3. (On a PC, you can use the filter icons at the top of the list.)
   This displays your device information.
- Scroll down until you see the Pair Unit heading.
- Tap or click on the Pair Unit toggle button next to the Test Accessory or LinkSprinter that you want to pair with your unit.
- 8. Turn off your Test Accessory or LinkSprinter and unplug its Ethernet wire connection.

#### Run the Paired Test and View Results

To run a paired wiring test:

- With your Test Accessory or LinkSprinter turned off, plug the Ethernet cable connection that you want to test into the test port. (All test LEDs activate for a few seconds, and then the PoE icon LED \* remains on if there is adequate power from the connection.)
- Wait about 90 seconds for a tests to complete. All five LEDs turn green if the tests are successful. The test results are uploaded

to Link-Live and then shared with your AirCheck G3.

- 3. To view the results on your AirCheck G3:
  - Wait for the paired test icon to appear on the system notification bar.
  - b. Swipe down from the top of the screen to view the notifications list.
  - Locate and tap on the down arrow for the notification from Link-Live that shows a new result from your Test Accessory or LinkSprinter.



- · PoE voltage is listed
- Bold fields in the Link details show actual speed and duplex.
- . The IP Address is the DHCP IP.

- The DNS is the primary server (DNS 1)
- Ping times to reach google.com are not included.

NOTE: successive tests replace the data in the notice.

- 4. To view the results on a PC:
  - In Link-Live, select the Results option from the left-side menu. This displays your test results for all your claimed devices.
  - b. Select the results you want for the paired Test Accessory or LinkSprinter from the list. (On a PC, you can use the Search function to look for specific devices, folders, etc.) This displays the same information as the AirCheck G3 system notification described above, but it adds additional information fields:
    - Link polarity
    - · DHCP subnet mask

- Gateway ping time and public IP address
- Ping time for google.com
- (LinkSprinter only) Information on the nearest switch (switch name, model, IP/MAC address, port number, and type)

AirCheck G3 User Guide

# Specifications and Compliance

This chapter contains device specifications and required compliance information.

# **AirCheck G3 Specifications**

4.01 in v 7.71 in v 1.65 in

#### General

Dimensions	4.01 in x 7.71 in x 1.65 in (10.2 cm x 19.6 cm x 4.2 cm)
Weight	1.05 lbs (0.48 kg)
Battery	Rechargeable lithium-ion battery pack (3.63 V, 9.75 Ah, 36.39 Wh)
Battery Life	Typical operating life is 8 hours. Typical charge time is 3 hours.
Display	5.0-inch color LCD with capacitive touchscreen (720 x 1280 pixels)
Host	(2) USB Type-A Ports
Interfaces	USB Type-C On-the-Go Port
Memory	Approximately 8 GB available for storing test results and user applications
Charging	USB Type-C 45-W adapter: AC Input Power 100-240 V, 50-60 Hz; DC Output Power 15 V (3 A)
Supported IEEE Standards	Wi-Fi: 802.11 ax/ac/a/b/g/n
LEDs	1 LED (Status Indicator)

#### **Tri-band Wireless**

AirCheck G3 has two internal Wi-Fi Radios:

- Wi-Fi Testing WiFi 6/6E 2x2 MU-MIMO wireless radio 802.11ax
- System Wi-Fi, Bluetooth, and Management
   1x1 Dual-band 802.11ac Wave 2 + Bluetooth
   5.0 and BLE wireless radio 802.11ac

# WiFi 6/6E 2x2 MU-MIMO Tri-band Radio for Testing

Applicant's Name	NetAlly	
Model Number	WNFQ-268AXI(BT)	
Manufacturer	SparkLAN Communications, Inc.	
Manufacture Date	2021	
<b>Country of Origin</b>	Taiwan	
Security	64/128-bits WEP, WPA, WPA2, WPA3, 802.1x	
Regulatory Domain	World Mode	
Antenna Gain	2.0 dBi peak/2.4 GHz 1.5 dBi peak/5 GHz 2.7 dBi peak/6 GHz	

#### **Data Rates**

802.11a/g: 54 Mbps

• 802.11ac: MCS0~9

• 802.11ax: HE0~11

• **802.11b**: 11 Mbps

• 802.11n: MCS0~15

Bluetooth: 1 Mbps, 2 Mbps, 3 Mbps

#### **Operating Frequencies**

The AirCheck G3 receives on all of the frequencies in every country, but transmits only on the frequencies and channels allowed in the country.

The Wi-Fi radio supports the following frequency bands:

2.4-GHz band: 2.412 – 2.484 GHz\*

5-GHz band: 5.150 – 5.825 GHz\*

• 6-GHz band: 5.925 - 7.125 GHz \*

#### Modulation

#### Wi-Fi:

<sup>\*</sup> where permitted

- 802.11a: OFDM (BPSK, QPSK, 16-QAM, 64-QAM)
- 802.11ac: OFDM (BPSK, QPSK, 16-QAM, 64-QAM, 256-QAM)
- 802.11ax: OFDMA (BPSK, QPSK, 16-QAM, 64-QAM, 256-QAM, 1024-QAM)
  - 802.11b: DSSS (DBPSK, DQPSK, CCK)
- 802.11g: OFDM (BPSK, QPSK, 16-QAM, 64-OAM)
  - 802.11n: OFDM (BPSK, QPSK, 16-QAM, 64-QAM)

#### **Bluetooth:**

Header: GFSK

Payload 2M: π/4-DQPSK

Payload 3M: 8-DPSK

#### **Receive Sensitivity**

• 6 Mbps: -90 dBm

• **54 Mbps**: -71 dBm

• 802.11n 20 MHz: -89 dBm (MCS 0/8)

• 802.11n 40 MHz: -86 dBm (MCS 0/8)

VHT20 MCS 8: -63 dBm

VHT40 MCS 9: -60 dBm

VHT80 MCS 9: -57 dBm

# System 1x1 Wi-Fi/Bluetooth Management Radio

Applicant's Name	NetAlly
Model	BLUE bean
Manufacturer	8devices
Manufacture Date	2019
Country of Origin	United States
Security	64/128-Bit WEP Key, WPA, WPA2, 802.1X (TKIP, AES)
Regulatory Domain	World Mode
Antenna Gain	1.1 dBi peak in the 2.4-GHz band; 3.2 dBi peak in the 5- GHz band

#### **Data Rates**

- **802.11a**: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
- 802.11b: 1, 2, 5.5, 11 Mbps
- **802.11g**: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
- **802.11n 20 MHz**: 7.2, 14.4, 21.7, 28.9, 43.3, 57.8, 65, 72.2, 86.7 Mbps
- **802.11n 40 MHz**: 15, 30, 45, 60, 90, 120, 135, 150 Mbps

- 802.11ac 20 MHz: 7.2, 14.4, 21.7, 28.9, 43.3, 57.8, 65, 72.2, 86.7 Mbps
- **802.11ac 40 MHz**: 15, 30, 45, 60, 90, 120, 135, 150, 180, 200 Mbps
- **802.11ac 80 MHz**: 32.5, 65, 97.5, 130, 195, 260, 292.5, 325, 390, 433.3 Mbps

#### **Operating Frequencies**

The AirCheck G3 receives on all of the frequencies in every country but transmits only on the frequencies and channels allowed in the country.

These are the center frequencies of the channels that the Wi-Fi radio supports.

- 2.4-GHz band: 2.412 2.484 GHz (channels 1 through 14)
- 5-GHz band: 5.150 5.825 GHz (channels 34, 36, 38, 40, 42, 44, 46, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144, 149, 153, 157, 161, 165)

#### Modulation

- 802.11a: BPSK (6 and 9 Mbps), QPSK (12 and 18 Mbps), 16 QAM (24 and 36 Mbps), 64 QAM (48 and 54 Mbps), OFDM
- 802.11n/ac: BPSK (MCS0), QPSK (MCS1 and MCS2), 16 QAM (MCS3 and MCS4), 64 QAM (MCS5, 6, and 7), OFDM
- 802.11ac: 256 QAM (MCS8 and MCS9), OFDM

- 802.11b: DBPSK, BPSK (1 and 2 Mbps), QPSK (2 Mbps), CCK (5.5 and 11 Mbps)
- 802.11g: BPSK (6 and 9 Mbps), QPSK (12 and 18 Mbps), 16 QAM (24 and 36 Mbps), 64 QAM (48 and 54 Mbps), OFDM

#### Bluetooth v5 and BLE

- Frequency Range: 2.402 2.480 GHz
- Max TX power: 14 dBm (4 dBm BLE)

### **External Directional Antenna Accessory**

- Minimum gain: 6.4 dBi peak in the 2.4-GHz band, 8.9 dBi peak in the 5-GHz band, and 8.6 dBi peak in the 6 GHz band.
- · Reverse-polarity SMA plug
- Antenna frequency range: 2.4 2.5, 4.9 5.9
   GHz. 6.0 7.1 GHz
- External antenna port is receive-only (no transmit).

# **Environmental Specifications**

Operating Temperature	32°F to 113°F (0°C to +45°C) NOTE: The battery will not charge if the internal tem- perature of the unit is above 113°F (45°C).
Operating relative humidity (% RH without condensation)	90% (50°F to 95°F; 10°C to 35°C) 75% (95°F to 113°F; 35°C to 45°C)
Storage Temperature	-4°F to 140°F (-20°C to +60°C)
Shock and vibration	Meets the requirements of MIL-PRF-28800F for Class 3 Equipment
Safety	IEC 61010-1:2010: Pollution degree 2
Altitude	Operating: 4,000 m; Storage: 12,000 m
EMC	IEC 61326-1: Basic Electromagnetic Environment CISPR 11: Group 1, Class A

# Certifications and Compliance Statements

▲ CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

operate the equipment.	
F©	Complies with 47 CFR Part 15 requirements of the U.S. Federal Com- munications Com- mission.
	Conforms to relevant Australian Safety and EMC standards.
© ® US	Listed by the Canadian Standards Association.
CE	Conforms to relevant European Union dir- ectives.
UK CA	Complies with United Kingdom and European Economic Area radiation
	-

Specifications and Compliance

exposure limits

exposure timies.
FCC Notices
RYK-WNFQ268AXBT, WA7-9377
6158A-WNFQ268AXBT, 6627C-9377

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

The device is for indoor use. This equipment may only be operated indoors. Operation outdoors is in violation of 47 U.S.C. 301 and could subject the operator to serious legal penalties.

The operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is

permitted in large aircraft while flying above 10,000 feet. Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

**Warning:** FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 25 cm between the radiator and your body.



Australian IEC 61326-1:2013: Basic Electromagnetic Environment; CISPR 11: Group 1, Class A

Group 1: Equipment has intentionally generated and/or uses conductively-coupled radio frequency energy that is necessary for the internal function of the equipment itself.

Class A: Equipment is suitable for use in all

establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purposes. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances.



Innovation, Science and Economic Development Canada Innovation, Sciences et Développement économique Canada

Warning: For indoor use only. Pour une utilisation en intérieur uniquement. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage

préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compirs un brouillage brouillage susceptible de provoquer un fonctionnement indésirable.

Warning: IC Radiation Exposure Statement: This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 27 cm between the radiator & your body.

**Avertissement:** Cet équipement est conforme aux limites d'exposition aux rayonnements RSS-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

**Caution:** The device for operation in the band 5150-5530 MHz is only for indoor use to reduce the potential for harmful interference to cochannel mobile satellite systems.

Avertissement: les dispositifs fonctionnant

dans la bande 5150-5530 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêemes canaux.

This radio transmitter has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed in the SparkLAN WNFQ-268AXI(BT) Datasheet, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Cet émetteur radio a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antennes répertoriés dans la fiche technique SparkLAN WNFQ-268AXI(BT), avec le gain maximal autorisé indiqué. Les types d'antenne non inclus dans cette liste qui ont un gain supérieur au gain maximum indiqué

pour tout type répertorié sont strictement interdits pour une utilisation avec cet appareil.

 $\epsilon$ 

European Union (EU) Radiation Warning Statement and Conformance Notices

**Warning:** This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

#### Selling Countries:



This device complies with the following EU Directives: Directives 2014/53/EU, 2014/35/EU,

and 2014/30/EU.

Accessory Information:

Adapter Model No.: FSP045-A1BR

Input: AC 100-240 V, 50/60 Hz 1.2 A

Output: DC 15 V, 3 A

#### Japan Indoor Use Statement

For Japan, the AirCheck G3 is restricted for indoor use in the 5150-5530 MHz band only.

#### **Taiwan Regulatory Statement**

Article 12: For low-power RF motors that have passed the type certification, companies, firms or users are not allowed to change the frequency, increase the power, or change the features and functions of the original design without permission.

第十二條 經型式認證合格之低功率射頻 電機,非經許可,公司、商號或使用者均不 得擅自變更頻率、加大功率或變更原設計 之特性及功能。 Article 14: The use of low-power radio frequency motors shall not affect flight safety or interfere with legal communications; if any interference is found, it shall be stopped immediately, and it shall be continued to be used until there is no interference. The legal communication referred to in the preceding paragraph refers to the radio communication operated in accordance with the provisions of the Telecommunications Law. Low power radio frequency motors are subject to interference from legal communications or radio wave radiating electrical equipment for industrial, scientific and medical use.

第十四條低功率射頻電機之使用不得影響 飛航安全及干擾合法通信;經發現有干擾 現象時,應立即停用,並改善至無干擾時 方得繼續使用。前項合法通信,指依電信 法規定作業之無線電通信。低功率射頻電 機須忍受合法通信或工業、科學及醫療用 電波輻射性電機設備之干擾。

Wireless information transmission equipment operating in the 5.25-5.35 kHz frequency band

is limited to indoor use.

在5.25-5.35 秭赫頻帶內操作之無線資訊傳輸設備,限於室內使用。

#### UK CA

Complies with United Kingdom and European Economic Area radiation exposure limits

This equipment complies with the UK and EEA radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The frequency and the maximum transmitted power in the UK and European Conformity are listed below:

2402-2480 MHz (LE) 9.63 dBm

2405-2480 MHz 9.81 dBm

2412-2472 MHz 19.96 dBm

5180-5240 MHz 22.95 dBm

5260-5320 MHz 22.98 dBm

5500-5700 MHz 22.98 dBm

5745-5825 MHz 22.98 dBm

5955-5825 MHz 22.98 dBm

5955-6415 MHz 22.97 dBm

6489-7987.2 MHz -41.58 dBm/RBW

The device is restricted to indoor use only when operating in the 5295 to 6425 MHz frequency range.

Hereby, NetAlly declares that the radio equipment AirCheck G3 is in compliance with Radio Equipment Regulations 2017.